# COMPRESSOR OPERATION PRECAUTIONS

#### CAUTION

MAXIMUM PRESSURE IS 100 PSI CONTINUOUS, 150 PSI INTERMITTENT.

#### CAUTION

COMPRESSOR RPM SHOULD NOT EXCEED 1000-1200 WITHOUT CONSULTING THE FACTORY.

#### WARNING

ANY PART OF THE COMPRESSOR, MOTOR, ENGINE OR DISCHARGE LINE, AFTER OPERATING, MAY BE HOT ENOUGH TO CAUSE INJURY IF TOUCHED.

#### INSTALLATION NOTES

- 1. Make sure parts are assembled as shown in exploded views (especially the valve plates).
- 2. The "top" plate is the intake. The bottom valve plate is the discharge. The top valve plate is stamped "THIS SIDE UP".
- 3. If you attach the reed valves, be sure to use the correct reeds. The intake reed is .010" thick and the discharge reed is .015" thick.
- 4. Make sure gaskets are all in good condition and properly assembled.
- 5. Make sure the six head bolts are tightened properly. First tighten all head bolts with light tension, then tighten with final tension. It is best to tighten the two long bolts before the four short bolts. Recommended torque is 400 inch-pounds.
- 6. Retorque all head bolts after 5 hours of compressor use. Check torque on a regular basis.

#### **COMPRESSOR LUBRICATION**

Before operating your compressor, check the oil level and add oil if necessary. Oil level should be checked on a daily basis. Use only IMT's synthetic compressor oil. The use of any other oil causes excessive carbon buildup, and will void the warranty on the compressor.

#### CAUTION

CHANGE OIL EVERY 100 HOURS OR SOONER IF IT BECOMES DIRTY. MOST AIR COMPRESSOR FAILURE IS CAUSED BY IMPROPER LUBRICATION.

### ORDERING REPAIR PARTS

When placing orders for repair parts it is necessary that all of the following information be provided:

COMPRESSOR MODEL NUMBER COMPRESSOR SERIAL NUMBER REPLACEMENT PART NUMBER PART DESCRIPTION QUANTITY REQUIRED

Order replacement parts by contacting:

IOWA MOLD TOOLING CO., INC. 500 HWY 18 WEST GARNER, IA 50438 515-923-3711

OR


YOUR LOCAL DISTRIBUTOR.

REVISED 08-09-91 04-24-92

# **CRANKCASE GROUP**


ITEM	PART NO.	DESCRIPTION	CTY
1.	72060841	CAP SCR 1/4X1/2 HH	2
2.	76392129		2
3.	70142414	BREATHER VALVE	2
4.	72062036	NUT 5/16-24 HEX	6
5.	72063050	WASHER 5/16 LOCK	6
<u>6</u> .	72601055		6
7.			2
8.		CRANKCASE	1
9.	70731952		2
10.	70055012	BEARING CONE	2
11.	70141625		1
12.			1
13.			1
14.			
15.		CAP SCR 1/4X1/2 HH	2
16.			1
17.			
18.			4
19.			1
20.			1
21.			1
22.	77044419	CLUTCH-FIELD	
		(LESS PULLEY)	1
23.	70732444	CLUTCH-FIELD HARDWARE	1


NOTE: ITEMS 21, 22 AND 23 NOT SHOWN.

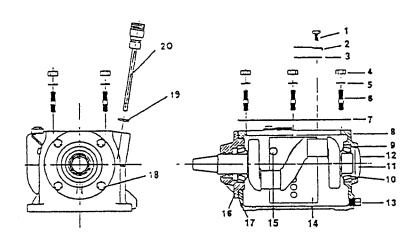

# **CYLINDER GROUP**

ITEM	PART NO.	DESCRIPTION	GTY
1.	76039417	BOTTOM GASKET	1
2.	70014885	CYLINDER	1
3.	70014886	COMPRESSION RING	
		(INSIDE BEVEL EDGE UP)	4
4.	70014887	COMPRESSION RING	
		(SQUARE GROOVE DOWN)	2
5.	70014888	OIL RING	2
6.	70014890	PISTON PIN	2
7.	70143975	SNAP RING	4
8.	70029133	PISTON	2
9.	70029137	CONNECTING ROD	2
10.	70014930	CONNECTING ROD BOLT	4
	54044000	00MSI 577 077 07 0W00	_
	51014938	COMPLETE SET OF RINGS	1
	70143972	PISTON W/PIN & RINGS	2
	51392125	COMPLETE COMPRESSOR	
		GASKET SET	1

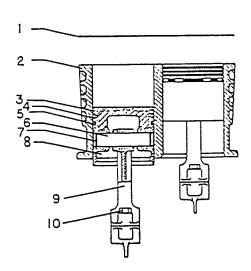

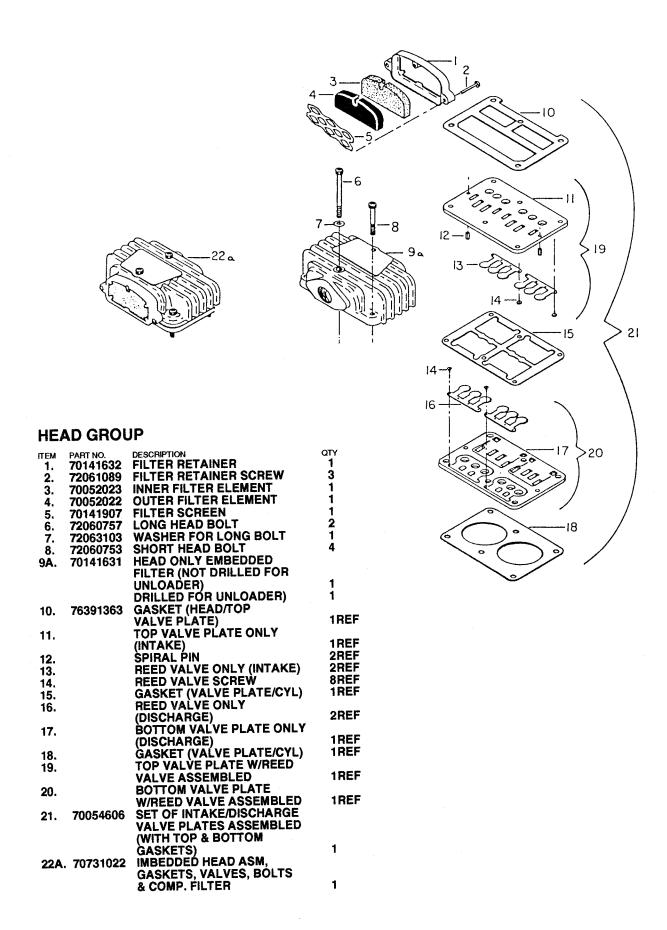



IOWA MOLD TOOLING CO., INC. 500 HWY 18 WEST, GARNER IA 50438 515-923-3711