
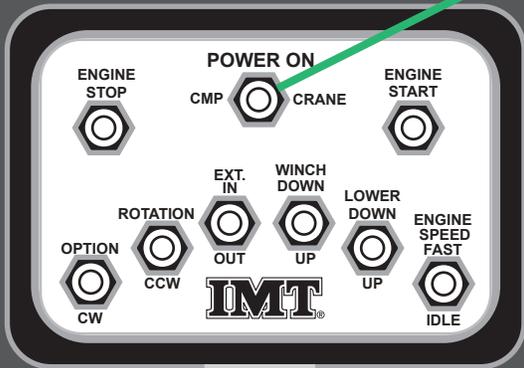


Quick Guide For Valve Driver

IMT Part Number: 77040784

To Calibrate / Recalibrate The Valve Driver:

1. Unplug the Proportional Valve.
Power UP the Crane.
Green LED light will display.
Wait until Red LED has indicated
error code 33 (3 short Red blinks,
plus 3 short Red blinks).

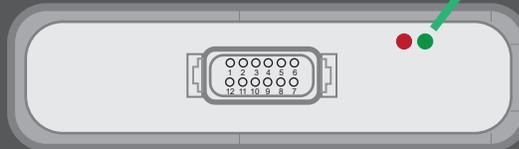

2. On the Tethered Remote Handle Assembly, toggle POWER ON switch (to the right) and back to center 5 times within 5 seconds to start calibration sequence. Leave toggle switch in the OFF (Center) position on the last (5th) sequence.

Wait for red LED light to start slowly blinking.
Pull trigger tightly towards you.

3. Hold trigger until the red LED changes from a slow to fast blinking. Release the trigger and shut power off to the crane.
Calibration is completed

