

**Volume 2
Parts and Specifications
Model 4825 Crane**

IOWA MOLD TOOLING CO., INC.

BOX 189, GARNER, IOWA 50438-0189

515-923-3711

PRODUCT SUPPORT FAX: 515-923-3674

MANUAL PART NO. 99900059

REVISED

08-19-91
09-04-91
11-07-91
11-25-91
12-02-91
01-15-92
02-28-92
03-06-92
03-11-92
04-09-92
05-27-92
07-02-92
08-26-92
09-14-92
10-12-92
10-23-92
12-02-92
01-28-93
03-04-93
04-05-93
04-26-93
05-27-93
06-15-93
06-24-93
09-08-93
09-24-93
01-12-94
02-15-94
04-22-94
05-25-94
06-09-94

Introduction - Read Carefully!

This volume deals with information applicable to your particular crane. For operating, maintenance and repair instructions, refer to Volume 1, OPERATION, MAINTENANCE AND REPAIR. Volume 1 contains the following information:

- SECTION 1. OPERATION
- SECTION 2. MAINTENANCE
- SECTION 3. REPAIR
- SECTION 4. INSPECTION & TEST REPORT
- SECTION 5. INSTALLATION - CHASSIS PREPARATION
- SECTION 6. APPENDIX

We recommend that Volume 2, PARTS AND SPECIFICATIONS be kept in a safe place in the office.

This manual is provided to assist you with ordering parts for your IMT truck-mounted articulating crane. It also contains additional instructions regarding your particular installation.

It is the user's responsibility to maintain and operate this unit in a manner that will result in the safest working conditions possible.

Warranty of this unit will be void on any part of the unit subjected to misuse due to overloading, abuse, lack of maintenance and unauthorized modifications. No warranty - verbal, written or implied - other than the official, published IMT new machinery and equipment warranty will be valid with this unit.

In addition, it is also the user's responsibility to be aware of existing Federal, State and Local codes and regulations governing the safe use and maintenance of this unit. Listed below is a publication that the user should thoroughly read and understand.

ANSI/ASME B30.22
ARTICULATING BOOM CRANES
The American Society of Mechanical Engineers
United Engineering Center
345 East 47th Street
New York, NY 10017

Three means are used throughout this manual to gain the attention of personnel. They are NOTE's, CAUTION's and WARNING's and are defined as follows:

NOTE

A NOTE is used to either convey additional information or to provide further emphasis for a previous point.

CAUTION

A CAUTION is used when there is the very strong possibility of damage to the equipment or premature equipment failure.

WARNING

A WARNING is used when there is the potential for personal injury or death.

Treat this equipment with respect and service it regularly. These two things can add up to a safer working environment.

TABLE OF CONTENTS

Paragraph	Title	Page
SECTION 1. SPECIFICATIONS		
1-1.	GENERAL	1-1
1-2.	LIFTING CAPACITY	1-1
1-3.	PERFORMANCE CHARACTERISTICS	1-1
1-4.	POWER SOURCE	1-1
1-5.	CYLINDER HOLDING VALVES	1-2
1-6.	ROTATION SYSTEM	1-2
1-7.	HYDRAULIC SYSTEM	1-2
1-8.	CYLINDERS	1-2
1-9.	MINIMUM CHASSIS SPECIFICATIONS	1-2
SECTION 2. CRANE DESCRIPTION		
2-1.	GENERAL	2-1
2-2.	BASE	2-1
2-3.	MAST	2-1
2-4.	INNER BOOM	2-1
2-5.	OUTER BOOM	2-1
2-6.	EXTENSION BOOMS	2-1
2-7.	CONTROLS	2-1
2-8.	HYDRAULIC KITS	2-1
SECTION 3. INSTALLATION		
3-1.	GENERAL	3-1
3-2.	CRANE INSTALLATION	3-1
3-3.	HYDRAULIC INSTALLATION	3-2
SECTION 4. PARTS LIST		
4-1.	GENERAL	4-1
4-2.	CRANE IDENTIFICATION	4-1
4-3.	CYLINDER IDENTIFICATION	4-1
4-4.	WELDMENT IDENTIFICATION	4-2
4-5.	ORDERING REPAIR PARTS	4-2
SECTION 5. REFERENCE		

LIST OF ILLUSTRATIONS

FIGURE	TITLE	PART NUMBER	PAGE
A-1.	CAPACITY CHART		1-3
A-2.	GEOMETRIC CONFIGURATION		1-4
B-1.	4825 CRANE GROUP		2-2
C-1.	CRANE INSTALLATION		3-1
C-2.	HYDRAULIC INSTALLATION		3-2
D-1.	SERIAL NUMBER PLACARD		4-1
D-2.	CYLINDER IDENTIFICATION		4-1
D-3.	WELDMENT PART NUMBER LOCATION		4-2
D-4.	BASE AND OUTRIGGER	41704349	4-3
D-5.	OUTRIGGER CYLINDER	3B166820	4-4
D-6.	POWER OUT OUTRIGGER	31704357	4-5
D-7.	POWER OUT OUTRIGGER CYLINDER	3B115830	4-6
D-8.	INNER BOOM	41704351	4-7
D-9.	MAST	41704350	4-7
D-10.	INNER CYLINDER	3B110820	4-8
D-11.	OUTER BOOM	41704359	4-9
D-12.	OUTER CYLINDER	3C132820	4-10
D-13.	4819 EXTENSION BOOM	41704360	4-11
D-14.	4819 EXTENSION CYLINDER	3B059840	4-12
D-15.	4825 EXTENSION BOOM	41704638	4-13
D-16.	2-STAGE EXTENSION CYLINDER	3K120850	4-14
D-17.	4830 EXTENSION BOOM	41704362	4-15
D-18.	4819 TO 4825 CONVERSION KIT	95705066	4-16
D-19.	4819 TO 4839 CONVERSION KIT	95705082	4-17
D-20.	4825 TO 4830 CONVERSION KIT	95705083	4-18
D-21.	CONTROL KIT	90704417	4-19
D-22.	VALVE BANK ASSEMBLY - 8 SECTION MANUAL	51710944	4-20
D-22A.	VALVEBANK	70731499	4-20
D-23.	INSTALLATION KIT	93704355	4-21
D-24.	DECAL KIT	95708693	4-22
D-25.	HOSE REEL KIT	31704590	4-23
D-26.	LIGHT KIT	31704781	4-24
D-27.	HYDRAULIC KIT	91704356	4-25
D-28.	LOCKING/HOLDING VALVE	73054004	4-26
D-29.	COUNTER BALANCE/HOLDING VALVE	73054242	4-26
D-29A.	CAPACITY ALERT KIT - AUDIBLE	31705698	4-27
D-30.	COUNTER BALANCE/HOLDING VALVE	73054304	4-27
D-31.	PROPORTIONAL RMT CTRL DIAGRAM	99900197	4-28
D-32.	RMT HANDLE ASM-6F PROP W/SPD	51710014	4-29
D-33.	VALVEBANK - 4 REMOTE/2 MANUAL	51705094	4-30
D-34.	VALVEBANK - 5 REMOTE	51705974	4-30
D-35.	VALVEBANK - 6 REMOTE	51705972	4-31
D-36.	OPTION-HYDRAULIC OVERLOAD KIT 2-FUNCTION	51710922	4-32
D-37.	OPTION-HYDRAULIC OVERLOAD KIT 3-FUNCTION	51710923	4-33
D-38.	RESERVOIR ASSEMBLY	70732573	4-34
D-39.	VALVEBANK ASSEMBLY 6-SECTION V20	51705277	4-35
D-39A.	VALVEBANK	73731386	4-35
D-40.	VALVEBANK ASSEMBLY 6-SECTION CHAIR MOUNT	51709005	4-36
D-40A.	VALVEBANK	51703623	4-36
D-41.	HOSE REEL KIT-SGL	31712008	4-37
D-42.	HOSE REEL KIT-SGL REMOTE	31712007	4-38
D-43.	HOSE REEL KIT-DBL	31711985	4-39
D-44.	HOSE REEL KIT-DBL REMOTE	31712004	4-40
D-45.	HOSE REEL KIT-DBL CHAIR MOUNT	31712009	4-41
E-1.	GREASE ZERK LOCATIONS AND LUBRICANT REQUIREMENTS		5-1
E-2.	TORQUE DATA CHART		5-2
E-3.	TURNTABLE BEARING FASTENER TIGHTENING SEQUENCE		5-3
E-4.	TURNTABLE BEARING INSPECTION FOR REPLACEMENT		5-4
	SPARE PARTS LIST		5-5

Section 1. SPECIFICATIONS

1-1. GENERAL

	OPTIONAL 4819	STANDARD 4825	OPTIONAL 4830
CRANE RATING	48,000 ft-lbs 6.65 ton-m	48,000 ft-lbs 6.65 ton-m	48,000 ft-lbs 6.65 ton-m
REACH - FROM CENTERLINE OF ROTATION	19'-4" 5.89m	25'-1" 7.65m	30'-5" 9.27m
HYDRAULIC EXTENSION	64" 162.6cm	64" & 64" 162.6cm & 162.6cm	64" & 64" 162.6cm & 162.6cm
MANUAL EXTENSION	---	---	64" 162.6cm
* LIFTING HEIGHT	27'-4" 8.33m	32'-2" 9.80m	37'-1" 11.30m
CRANE WEIGHT	3200 lbs 1451 kg	3400 lbs 1565 kg	3450 lbs 1545 kg
OUTRIGGER SPAN	11'-10" 3.61m	11'-10" 3.61m	11'-10" 3.61m
* STORAGE HEIGHT	10'-0" 3.05m	10'-0" 3.05m	10'-0" 3.05m
MINIMUM CRATING DIMENSIONS	90" X 28" X 84" 228.6 X 71.1 X 213.4cm	90" X 28" X 84" 228.6 X 71.1 X 213.4cm	90" X 28" X 84" 228.6 X 71.1 X 213.4cm
** MOUNTING SPACE REQUIRED	28" 71.1cm	28" 71.1cm	28" 71.1cm
OPTIMUM PUMP CAPACITY	9 U.S. GPM 34.1 liters/min	9 U.S. GPM 34.1 liters/min	9 U.S. GPM 34.1 liters/min
OIL RESERVOIR CAPACITY	17 U.S. GAL. 64.35 liters	17 U.S. GAL. 64.35 liters	17 U.S. GAL. 64.35 liters
DESIGN FACTORS (PINS & HYDRAULICS)	4/1	4/1	4/1

* Based on 36" (91.4 cm) truck frame height.

** Add approximately 3" (7.62 cm) for truck cab clearance.

1-2. LIFTING CAPACITY (from centerline of rotation)

7'-6" 2.29m	6400 lbs 2903 kg	6400 lbs 2903 kg	6400 lbs 2903 kg
14'-5" 4.39m	3330 lbs 1513 kg	3330 lbs 1513 kg	3330 lbs 1513 kg
19'-9" * 6.02m *	2430 lbs 1104 kg	2430 lbs 1104 kg	2430 lbs 1104 kg
25'-1" 7.65m		1920 lbs 872 kg	1920 lbs 872 kg
30'-5" 9.27m			1450 lbs 658 kg

* Actual reach with optional 4819 is 19'-4".

1-3. PERFORMANCE CHARACTERISTICS

ROTATION - 370° (6.46 Rad.)	30 seconds
INNER BOOM ELEVATION - -52° TO +71° (-0.91 Rad. to +1.24 Rad.)	20 seconds
OUTER BOOM ARTICULATION - 139° (2.43 Rad.)	21 seconds
TELESCOPING EXTENSION - 64" & 64" (162.6cm & 162.6cm)	24 & 14 seconds
SINGLE-STAGE EXTENSION - 64" (162.6cm)	14 seconds
POWER DOWN OUTRIGGER EXTENSION - 21" (53.3cm)	6 seconds

1-4. POWER SOURCE

Integral-mounted hydraulic pump and PTO application. Other standard power sources may be utilized - minimum power required is 15 horsepower.

1-5. CYLINDER HOLDING VALVES

The holding sides of all cylinders are equipped with integral-mounted holding and/or counter-balance valves to prevent sudden cylinder collapse in case of hose or other hydraulic failure. The outrigger cylinders have positive, pilot-operated holding valves that open only upon command.

The inner, outer and extension cylinders have pilot operated counter-balance valves. The counter-balance valve serves several functions. First, it is a holding valve. Secondly, it is so constructed that it will control the lowering function and allow that motion to be feathered while under load. Finally, if a hose breaks, the only oil loss will be that in the hose.

1-6. ROTATION SYSTEM

Turntable bearing powered with a high-torque hydraulic motor through a ring-and-pinion type spur gear train (total gear reduction is 51.8 to 1).

1-7. HYDRAULIC SYSTEM

Open-centered, full-pressure system that requires 9 GPM (34.1 liters/min.) optimum oil flow at 2,500 PSI (175.7 kg/cm²). Eight-spool, stack-type control valve, six of which are plugged but are easily adaptable for additional optional features. Dual operational control handles for six functions are located at both sides of the crane for convenient operation. System includes hydraulic oil reservoir, suction-line filter, pump, 8-section valve bank, return-line filter and all hoses and fittings.


1-8. CYLINDERS

	<u>BORE</u>	<u>STROKE</u>
INNER CYLINDER	3-1/2" (8.9cm)	35" (88.9cm)
OUTER CYLINDER	4-1/2" (11.4cm)	44-3/8" (112.7cm)
TELESCOPING EXTENSION CYLINDER - 1st STAGE	4" (10.2cm)	64" (162.6cm)
TELESCOPING EXTENSION CYLINDER - 2nd STAGE	3" (7.6cm)	64" (162.6cm)
SINGLE STAGE EXTENSION CYLINDER	3" (7.6cm)	64" (162.6cm)
OUTRIGGER CYLINDER	2-1/2" (6.4cm)	21" (53.3cm)

1-9. MINIMUM CHASSIS SPECIFICATIONS

	<u>CONVENTIONAL CAB</u>	<u>TILT CAB</u>
WHEEL BASE	165" - 174" (419.1cm - 444.4cm)	135" 342.9cm)
CAB-TO-AXLE	102" (259.1cm)	108" (274.3cm)
FRAME SECTION MODULUS	14.5"³ (237.6cm³)	14.5"³ (237.6cm³)
R B M	720,000 in-lbs (8298 kg-m)	720,000 in-lbs (8298 kg-m)
FRONT AXLE RATING	7000 lbs (3180 kg)	7000 lbs (3180 kg)
REAR AXLE RATING	14,000 lbs (6360 kg)	14,000 (6360 kg)
TRANSMISSION	4-speed	4-speed

In addition to these specifications, heavy-duty electrical and cooling systems and dual rear wheels are required. It is recommended that the vehicle be equipped with an electric tachometer, auxiliary brake lock, power steering and 5-speed transmission in lieu of a 4-speed transmission.

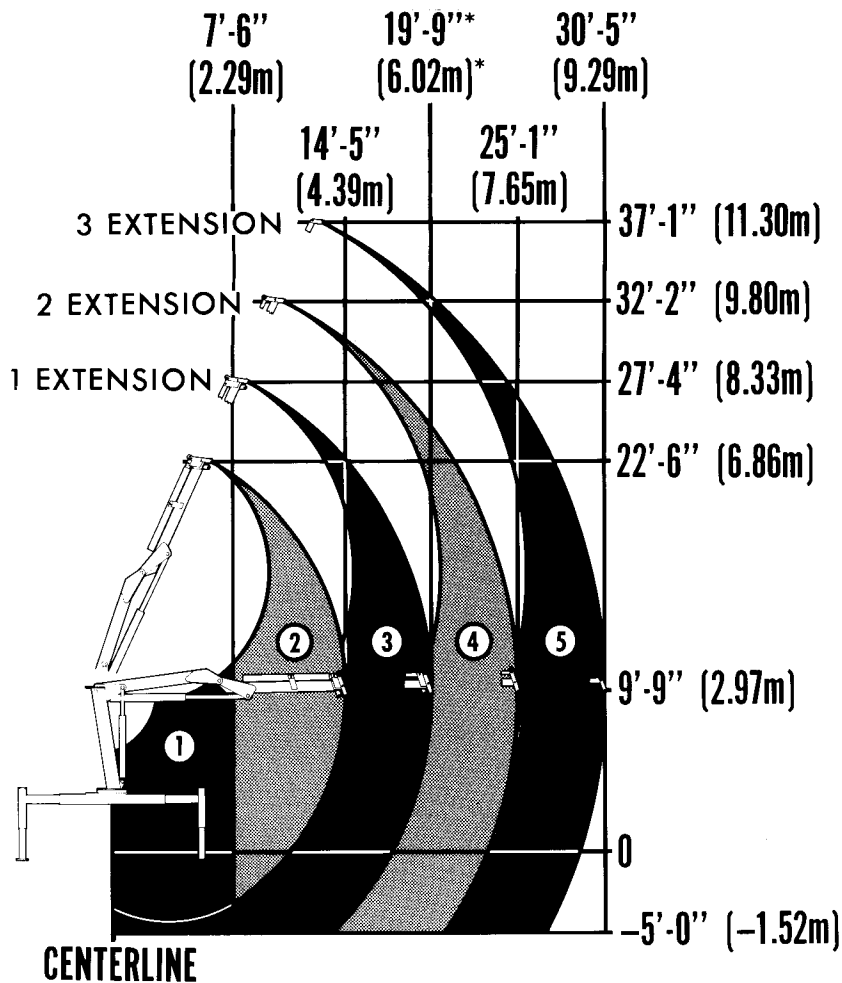

Working loads will be limited to those shown. Deduct the weight of load-handling devices.

La capacidad de carga debe limitarse a las cantidades indicadas. Deduzca de la capacidad de carga el peso del mecanismo de levantamiento de la carga, incluyendo todos los aparatos utilizados.

Ne pas dépasser le poids de la charge de travail indiquée. Pour calculer le poids de la charge pratique, déduire du poids de la charge de travail, le poids des auxiliaires de levage.

RANGE	REACH	CAPACITY	RANGE	REACH	CAPACITY
①	7'-6" (2.29m)	6,400 lbs. (2,903 kg.)	④	25'-1" (7.65m)	1,920 lbs. (872 kg.)
②	14'-5" (4.39m)	3,330 lbs. (1,513 kg.)	⑤	30'-5" (9.27m)	1,450 lbs. (658 kg.)
③	19'-9"" (6.02m)*	2,430 lbs. (1,104 kg.)	*Actual reach with optional 19' boom is 19'-4" (5.89m).		

Winch lifting capacity is limited to those shown – maximum 4,000 lbs.

La capacidad de levantamiento del torno está limitada a los pesos indicados. La capacidad máxima es de 1,814 kgs.

Ne pas dépasser la capacité de levage prescrite du treuil – maximum 1,814 kg.

Figure A-1. Capacity Chart

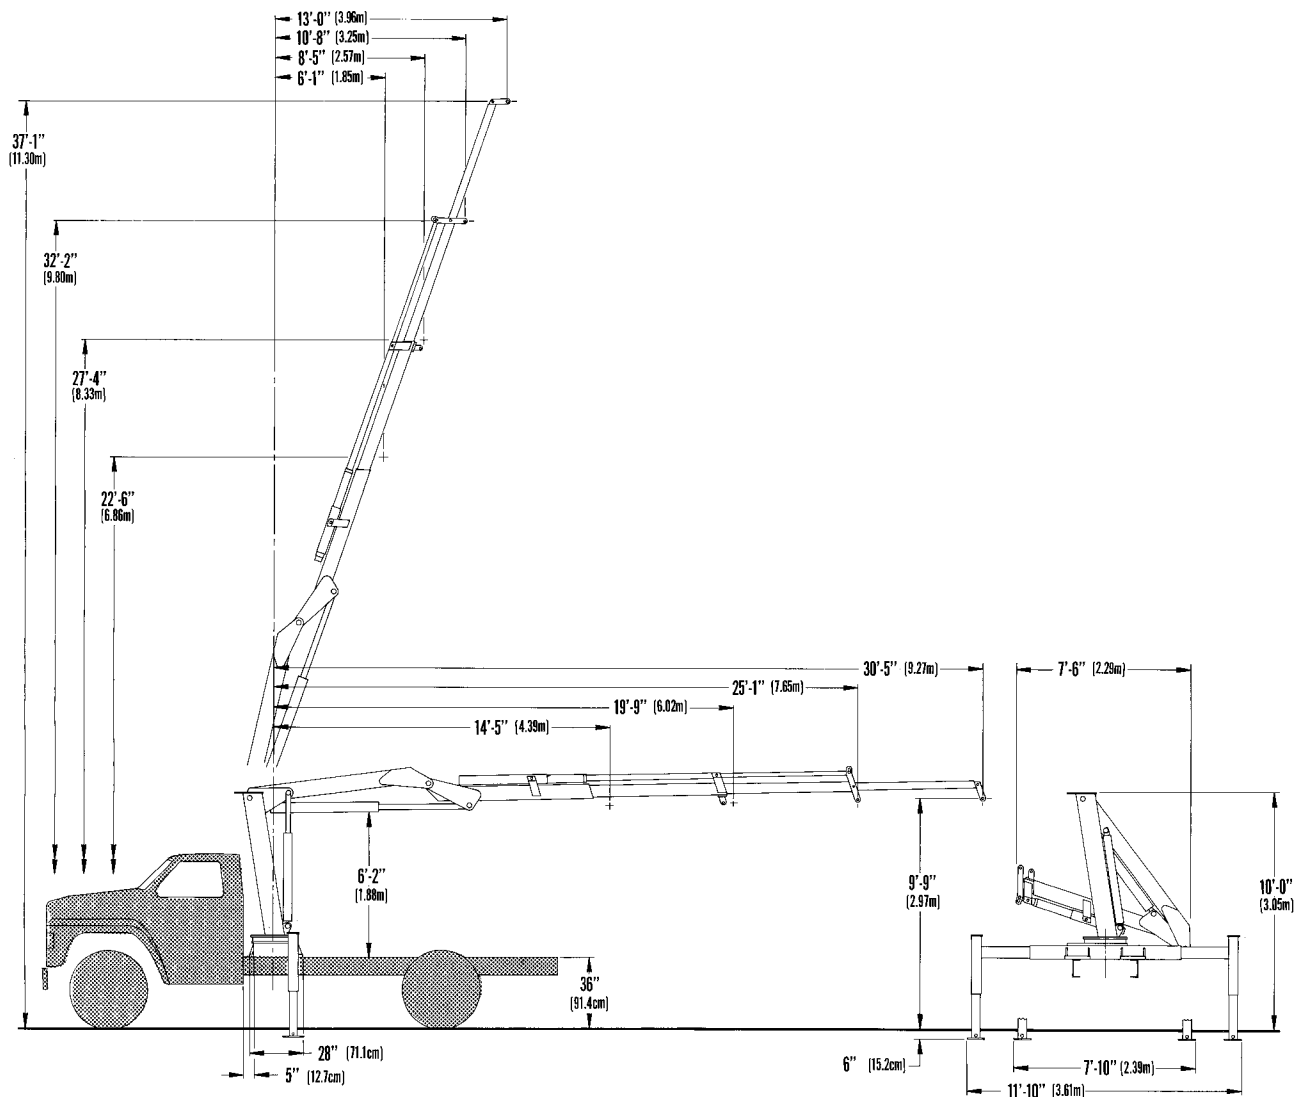


Figure A-2. Geometric Configuration

Section 2. CRANE DESCRIPTION

2-1. GENERAL

This section describes the major assemblies that are available with this crane. Figure B-1 illustrates the locations of the assemblies.

There are three different models covered in this manual. They are the 4819, 4825, and 4830 cranes. The 4825 is considered to be the standard crane model with the other models offered as optional cranes. The differences are discussed in paragraph 2-6.

2-2. BASE

The base provides a platform for mounting the crane to a truck. It incorporates the 370 degrees (6.46 Rad.) rotation mechanism. With modification (Figure D-6) the base is used to anchor the base end of the optional power-out outrigger cylinders.

2-3. MAST

The mast provides the necessary elevation for crane operation as well as a hinge point for the inner boom.

2-4. INNER BOOM

The inner boom will swing through a full 123 degrees (2.15 Rad.) from -52 degrees to +71 degrees (0.91 to +1.24 Rad.). It is raised and lowered through the use of twin double-acting hydraulic cylinders.

2-5. OUTER BOOM

The outer boom will swing through a full 139 degrees (2.43 Rad.). It provides an additional mounting point for attachment of the crane hook. It provides a mounting point for the optional winch. The boom is raised and lowered with a single double-acting hydraulic cylinder.

2-6. EXTENSION BOOMS

The differences between the 4819, 4825, and 4830 cranes are in the extension booms. The 4819 crane uses a one-stage hydraulic extension for an additional 64" of reach. The 4825 uses a 2-stage hydraulic extension for an additional 64" of reach for each stage for a total of 128". The 4830 uses a 2-stage telescoping hydraulic extension cylinder for an additional 128" of reach, plus a 1-stage manual extension for another 64" of reach.

2-7. CONTROLS

The crane may be operated from the driver's side or the curb side of the base.

2-8. HYDRAULIC KITS

The crane hydraulics consist of double-braided pressure and return hoses, hydraulic filters, control valve bank and all necessary hydraulic fittings.

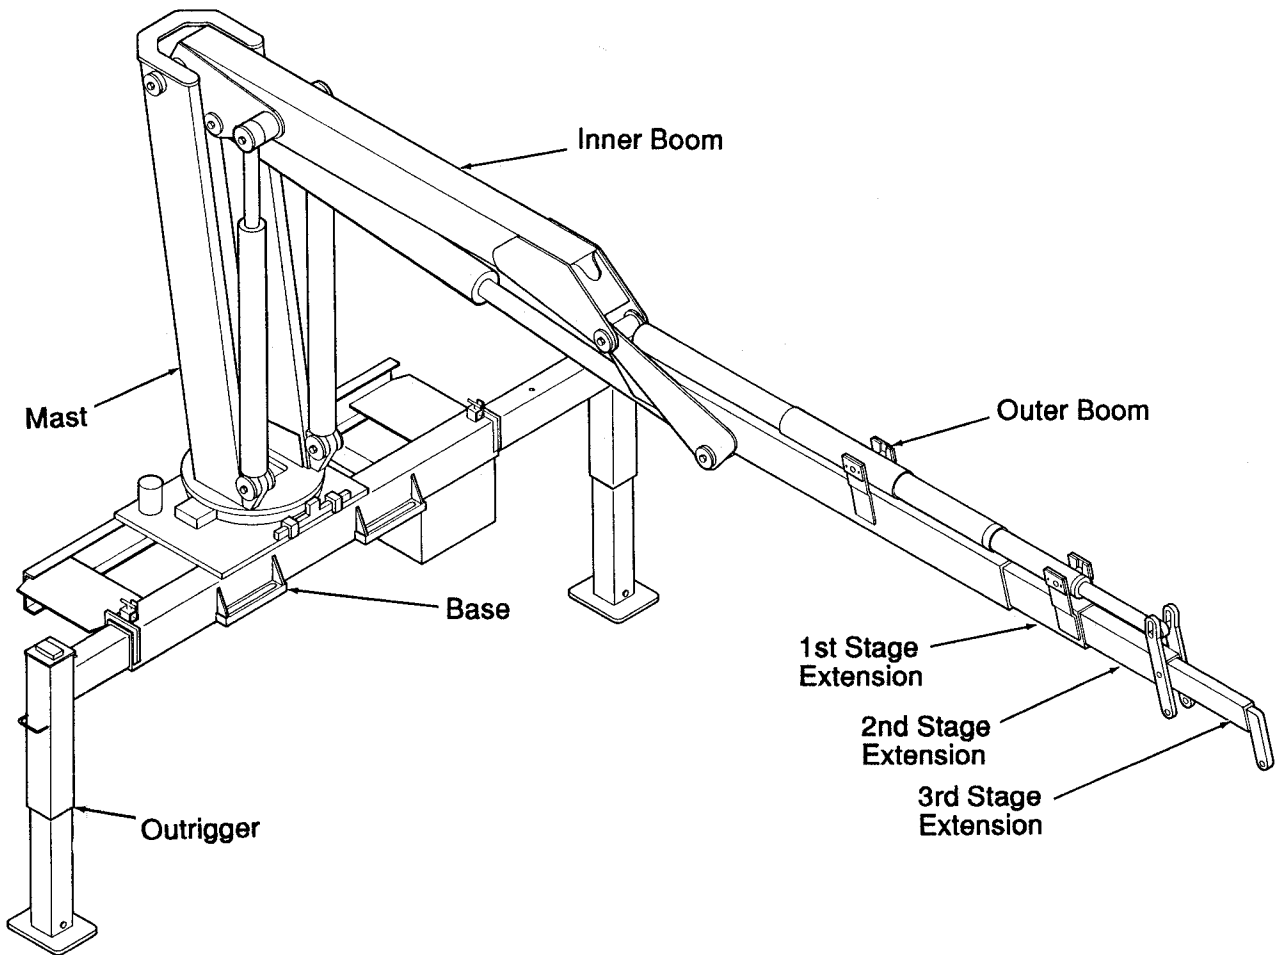


Figure B-1. 4825 Crane Group


Section 3. INSTALLATION

3-1. GENERAL

This section contains specific instructions for the installation of your crane. Prior to installing the crane and hydraulic components, make sure the chassis is ready to receive the crane (refer to VOLUME 1, Installation).

3-2. CRANE MOUNTING

1. See SPECIFICATIONS in Section 1 for crane weight. Using an overhead hoist and fabric slings of adequate capacity, lift the crane about a foot to see if the crane is adequately balanced. If not, lower hoist and adjust slings. Re-check balance and re-position crane until mounting surface is level.
2. Install the truck frame support so that the tie-down studs pass through the supports (Figure C-1). Cut the support to the inside dimensions of the truck frame. Allow about 1/16" extra. Grind the end of the support to fit inside the frame channel. Use a hammer to drive it into position if necessary.

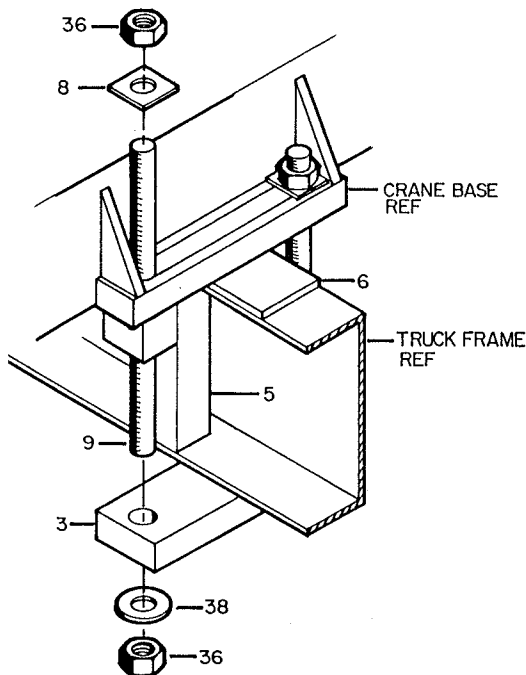

ITEM	DESCRIPTION	QTY
3.	CLAMP PLATE	4
5.	FRAME SUPPORT	4
6.	SPACER	2
8.	SQUARE WASHER	8
9.	TIE DOWN STUD	8
36.	LOCK NUT	16
38.	WASHER	8

3. Position one bar on top of each frame rail where crane will be located, allowing sufficient clearance between the cab and crane base, at least 5" (12.7cm). Position the crane on the chassis per the applicable installation drawing, centering the mounting slots over the truck frame rails. While holding crane with hoist, start mounting hardware per Figure C-1. Note position of support weldments on truck frame. Hand tighten nuts. Observe underside of crane base. No clearance between base and frame bars is allowed. Grind bar on frame rails to eliminate clearance.

4. Torque the 1"-8 UNC Grade 5 mounting hardware to 442 ft-lbs (62 kg-m). When torquing the mounting hardware the following precautions must be followed:

A. Never use lock washers.

B. Hardened washers must be used, and under the turning element, whether the turning element is the nut or the head of the bolt.

C. Torque values specified are with residual oils or without special lubricants applied to the threads. If special lubricants are used, such as Never-Seize compound graphite and oil, molybdenum disulphite colloidal copper or white lead, reduce torque values 10%. Torque values for threaded fasteners are not affected with the use of Loctite.

D. Do not use rusty fasteners, the rust will alter torque values significantly.

E. Touch-up paint around mounting anchor plates.

CAUTION

Do not attempt to apply the same torque to the tie rod and self-locking nuts as shown in the Torque Data Chart. Do not exceed 442 ft. lbs. (62 kg-m). Exceeding this torque value could damage either the chassis or crane base.

Power wrenching is not recommended until the lead thread of the nut insert is engaged by hand turning.

Figure C-1. CRANE INSTALLATION

3-3. HYDRAULIC INSTALLATION

To install the hydraulic hoses, fittings, etc.:

1. Install the hydraulic reservoir on the crane base.
2. Plumb the suction-line filter as shown in Figure C-2.
3. Install the 1-1/4" suction hose between the suction-line filter and the pump inlet. Tighten the hose clamps.
4. Install the 1/2" pressure hoses between the pump outlet and the inlet port on the valve bank.
5. Install the return filter and gate valve on the reservoir. Install the hose between the valve bank and return filter.

6. Fill the hydraulic reservoir to the "FULL" mark.

7. Open the gate valve at the suction-line filter.


CAUTION

Failure to open the gate valve will result in a dry running pump which may damage the pump.

8. Open the return gate valve.

9. Start the vehicle's engine and engage the PTO. Allow the system to run for about five minutes and then check the vacuum gauge on the suction-line filter (it should read 8" mercury or less). If the vacuum reading is too high, check to make certain that the gate valve is opened completely. If the valve is fully opened, check for a collapsed or restricted suction line.

10. Cycle all hydraulic functions. Check for leaks, and refill the reservoir if necessary.

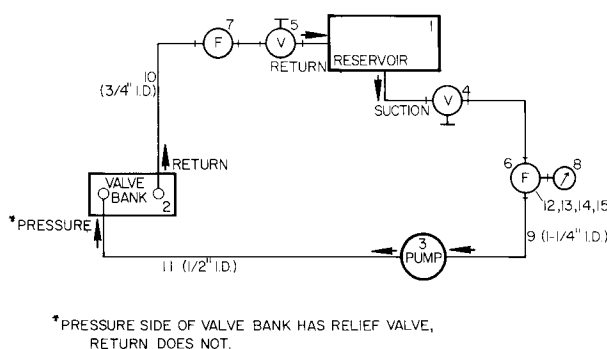

Item No.	Description	Qty
1.	Oil Reservoir	1
2.	Valve Bank	1
3.	Pump	1
4.	Gate Valve	1
5.	Ball Valve	1
6.	Suction Filter	1
7.	Return Filter	1
8.	Vacuum Gauge	1
9.	Suction Hose	1
10.	Return Hose	1
11.	Pressure Hose	1
12.	Oil Filter Bracket	1
13.	Screw	4
14.	Nut	2
15.	Lock Washer	4

Figure C-2. Hydraulic Installation

Section 4. PARTS LIST

4-1. GENERAL

This section contains the exploded parts drawings with the accompanying parts list for the assemblies used on this crane. These drawings are intended to be used in conjunction with the instructions found in the REPAIR section in Volume 1. For optional equipment such as winches and remote controls, refer to the appropriate service manual.

WARNING

DO NOT ATTEMPT TO REPAIR ANY COMPONENT WITHOUT READING THE INFORMATION CONTAINED IN THE REPAIR SECTION IN VOLUME 1. PAY PARTICULAR ATTENTION TO THE WARNING'S, CAUTION'S AND NOTE'S CONTAINED IN THAT SECTION. FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY RESULT IN DAMAGE TO THE EQUIPMENT, AN INJURY OR EVEN DEATH.

4-2. CRANE IDENTIFICATION

Every crane has an identification placard (Figure D-1) attached to the mast. When ordering parts, communicating warranty information or referring to the unit in correspondence, always include the assigned serial and model numbers.

All inquiries should be addressed to:

Iowa Mold Tooling Company, Inc.
Box 189, Garner, Iowa 50438-0189
Telephone: 515-923-3711
Product Support Fax: 515-923-3674

or

IMT Crane Canada, Ltd.
385 West Street South,
Orillia, Ontario, L3V 5H2, Canada
Telephone: 705-325-7458
Fax: 705-325-7625

4-3. CYLINDER IDENTIFICATION

To ensure proper replacement parts are received, it is necessary to specify a complete number/letter sequence for any part request. Part numbers may be cross checked by comparing the stamped identification of the cylinder case (Figure D-2) against the information contained in this manual. You must use the part number stamped on the cylinder case when ordering parts.

MODEL MODELO MODÈLE	SERIAL NUMBER NUMERO DE SERIE NUMERO DE SERIE
DRAWING NUMBER NUMERO DE PLANO NUMERO DE PLAN	DATE FECHA DE FABRICACION DATE
	
Iowa Mold Tooling Co., Inc. Garner, Iowa U.S.A.	IMT Cranes Canada, Ltd. Orillia, Ontario, Canada

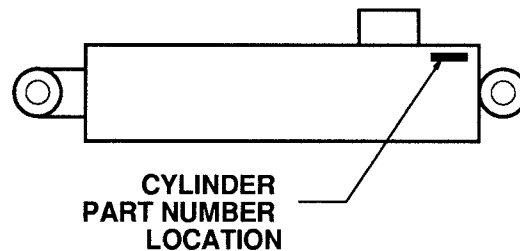


Figure D-1. SERIAL NUMBER PLACARD

Figure D-2. CYLINDER PART NUMBER LOCATION

4-4. WELDMENT IDENTIFICATION

Each of the major weldments - base, mast, inner boom, outer boom, extension boom and outrigger weldments bear a stamped part number. Any time a major weldment is replaced, you must specify the complete part number as stamped on the weldment. The locations of the part numbers are shown in Figure D-4.

4-5. ORDERING REPAIR PARTS

When ordering replacement parts:

1. Give the model number of the unit.
2. Give the serial number of the unit.
3. Specify the complete part number. When ordering cylinder parts or one of the main weldments, always give the stamped part number.
4. Give a complete description of the part.
5. Specify the quantity required.


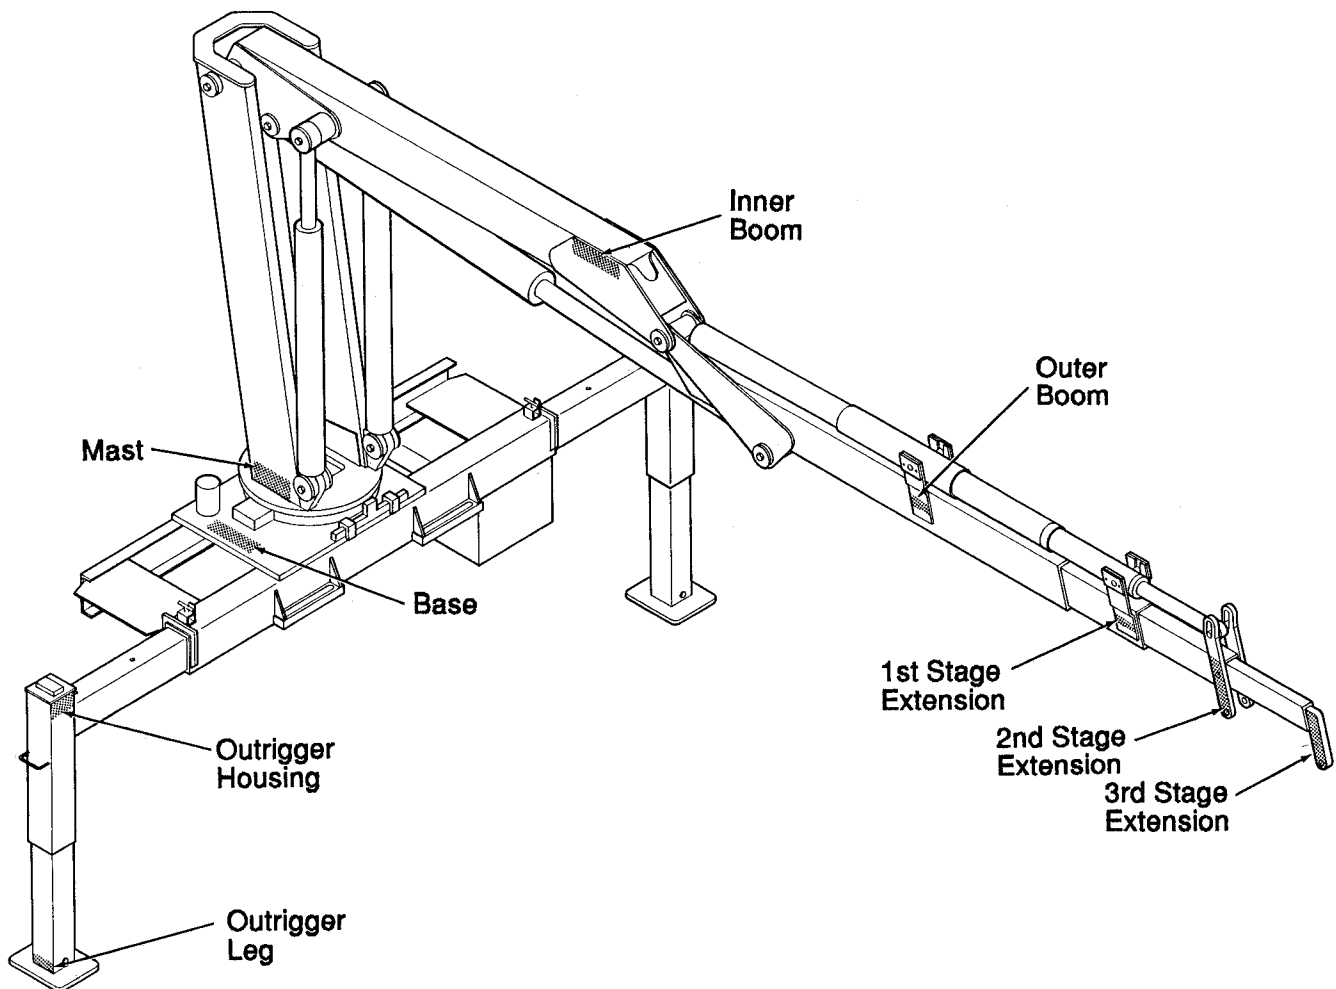


Figure D-3. Weldment Part Number Location

WARNING

Anytime a gear-bearing bolt is removed, it must be replaced with a new bolt of the identical grade and size. Failure to replace gear-bearing bolts may result in bolt failure due to metal fatigue, causing serious injury or death.

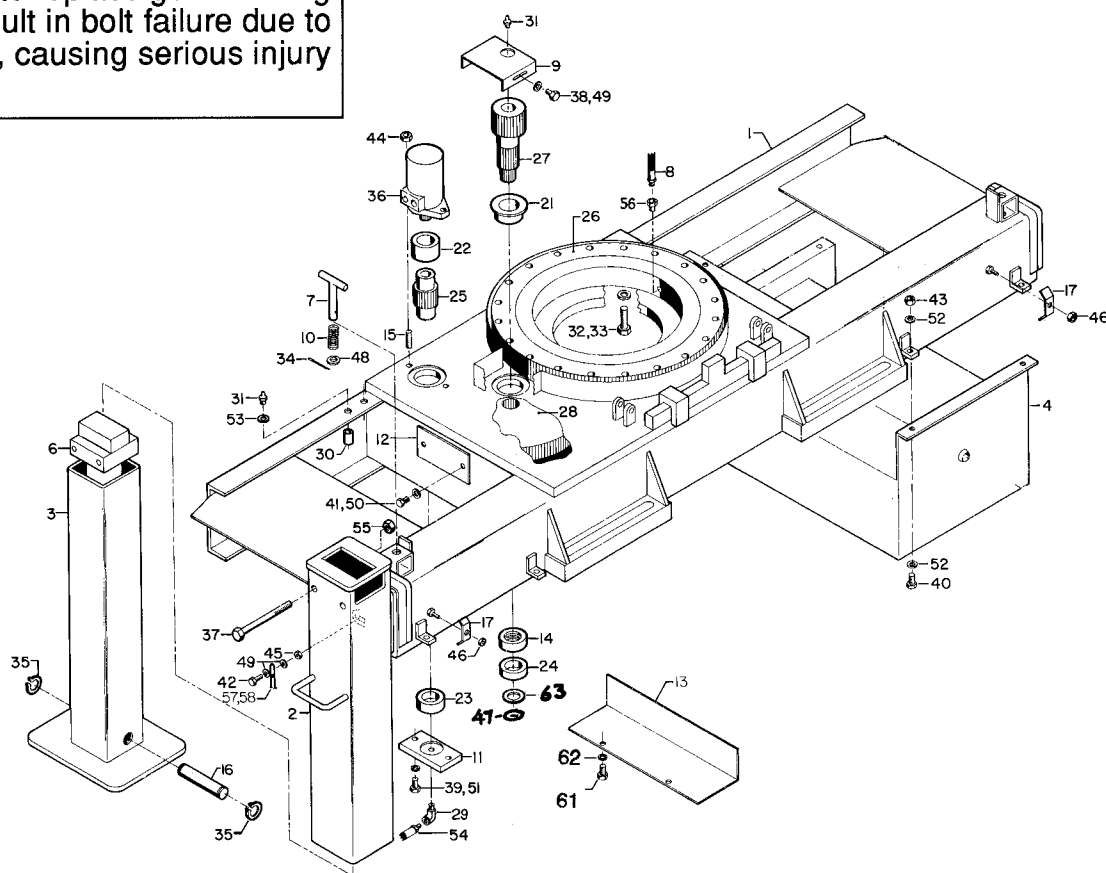

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1.	52704391	BASE (INCL:21-25)	1	33.	72063119	WASHER 5/8 FLAT HARD	20
2.	52704387	OUTRIGGER HOUSING	2	34.	72066185	COTTER PIN 5/32X1	2
3.	52704388	OUTRIGGER LEG	2	35.	72066125	RETAINER RING 1	4
4.	70732573	RESERVOIR ASM	1	36.	73051384	HYDRAULIC MOTOR	1
6.	3B166820	POWER DOWN CYLINDER	2	37.	72060102	CAP SCR 1/2-13X5-1/2 HH GR5	4
7.	52070138	T-PIN	2	38.	72060833	CAP SCR 5/16-18X3/4 HH GR5	2
8.	53000717	GREASE EXTENSION	1	39.	72060092	CAP SCR 1/2-13X1-1/4 HH GR5	2
9.	60010235	PINION COVER	1	40.	72060046	CAP SCR 3/8-16X1 HH GR5	4
10.	60010351	SPRING	2	41.	72060002	CAP SCR 1/4-20X3/4 HH GR5	2
11.	60010844	GREASE PLATE	1	42.	72060028	CAP SCR 5/16-18X1-3/4 HH GR5	2
12.	60102767	COVER	1	43.	72062103	NUT 3/8-16 LOCK	4
13.	60102769	GUARD	1	44.	72062080	NUT 1/2-13 LOCK	2
14.	60104694	SPACER	1	45.	72062109	NUT 5/16-18 LOCK	2
15.	60106032	STUD 1/2-13X2	2	46.	72062103	NUT 3/8-16 LOCK	2
16.	60106968	PIN	2	47.	72066084	RETAINING RING 1-1/4"	1
17.	60107648	HOSE CLAMP	2	48.	72063027	BUSHING 5/8	2
21.	60020114	BUSHING (PART OF 1)	1REF	49.	72063002	WASHER 5/16 WRT	6
22.	60020115	BUSHING (PART OF 1)	1REF	50.	72063049	WASHER 1/4 LOCK	2
23.	60020116	BUSHING (PART OF 1)	1REF	51.	72063053	WASHER 1/2 LOCK	2
24.	60020154	BUSHING (PART OF 1)	1REF	52.	72063003	WASHER 3/8 WRT	10
25.	71056011	DRIVE GEAR (PART OF 1)	1REF	53.	72063003	WASHER 3/8 WRT	2
26.	71056001	GEAR BEARING	1	54.	53000714	GREASE EXTENSION	1
27.	71056010	PINION GEAR	1	55.	72062107	NUT 1/2-13 CTR LOCK	4
28.	71056012	INTERMEDIATE GEAR	1	56.	72531826	REDUCER BUSHING 1/4-1/2NPT	1
29.	72053281	STREET ELBOW 1/8NPT 90°	1	57.	60108883	CHAIN	2
30.	72053301	COUPLING 1/8 NPT	2	58.	70058060	COLD SHUT LINK	2
31.	72053508	ZERK 1/8NPT	3	61.	72060023	CAP SCR 5/16-18 X 3/4 HH	2
32.	72060151	CAP SCR 5/8-11X2 HH GR8	20	62.	72063050	WASHER 5/16 WRT	2
				63.	72063035	MACH BUSHING 1-1/4 X 10GA	1

Figure D-4. BASE AND OUTRIGGER (41704349)

NOTE

IT IS RECOMMENDED THAT ALL COMPONENTS OF THE SEAL KIT BE REPLACED WHENEVER THE CYLINDER IS DISASSEMBLED. THIS WILL REDUCE FUTURE DOWNTIME.

APPLY "LUBRIPLATE #630-2" MEDIUM HEAVY, MULTI-PURPOSE LUBRICANT OR EQUIVALENT TO ALL PISTON AND HEAD GLANDS, LOCK RING AND ROD THREADS BEFORE ASSEMBLY.

USE "NEVER-SEEZ" OR EQUIVALENT BETWEEN THE HEAD AND THE CASE WHEN ASSEMBLING THE CYLINDER.

ITEM	PART NO.	DESCRIPTION	QTY
1.	4B166820	CASE (INCL:6)	1
2.	4G166820	ROD	1
3.	6I025087	PISTON	1
4.	6H025015	HEAD	1
5.	73054004	VALVE	1
6.	7PNPXT02	PIPE PLUG 1/8 (PART OF 1)	3REF
7.	6C075015	STOP TUBE	1
8.	72060708	CAP SCR 1/4-20 X 1-1/4 SH	6
9.	9B101214	SEAL KIT (INCL:10-18)	1
10.	7Q072137	O-RING (PART OF 9)	1REF
11.	7T66P025	PISTON SEAL (PART OF 9)	1REF
12.	7T61N087	LOCK RING SEAL (PART OF 9)	1REF
13.	7T2N8015	WEAR RING (PART OF 9)	1REF
14.	6A025015	WAFFER LOCK (PART OF 9)	1REF
15.	7Q072228	O-RING (PART OF 9)	1REF
16.	7Q10P228	BACK-UP RING (PART OF 9)	1REF
17.	7R546015	ROD SEAL (PART OF 9)	1REF
18.	7R14P015	ROD WIPER (PART OF 9)	1REF



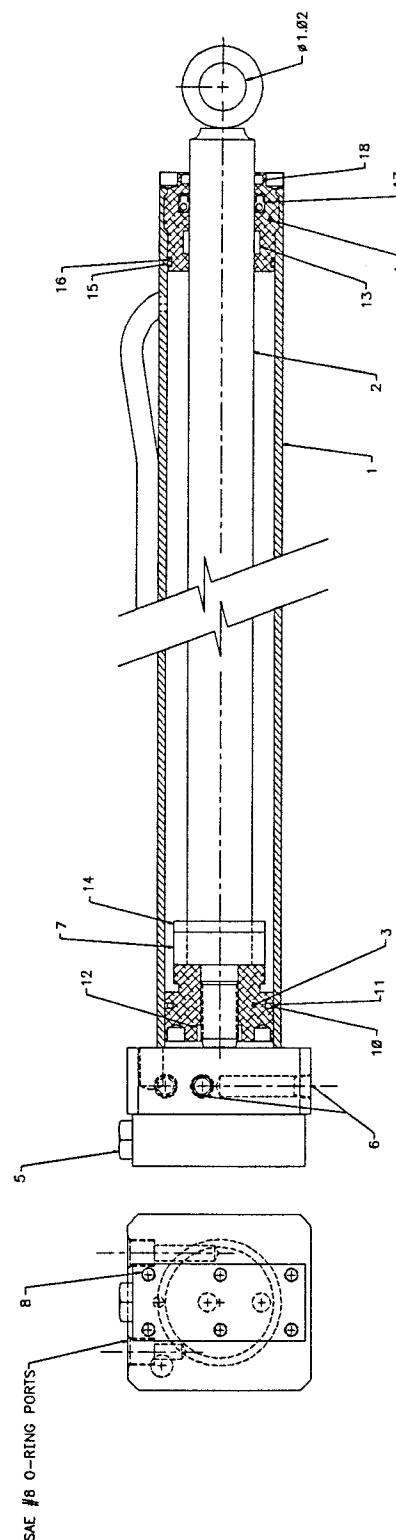


Figure D-5. OUTRIGGER CYLINDER (3B166820)

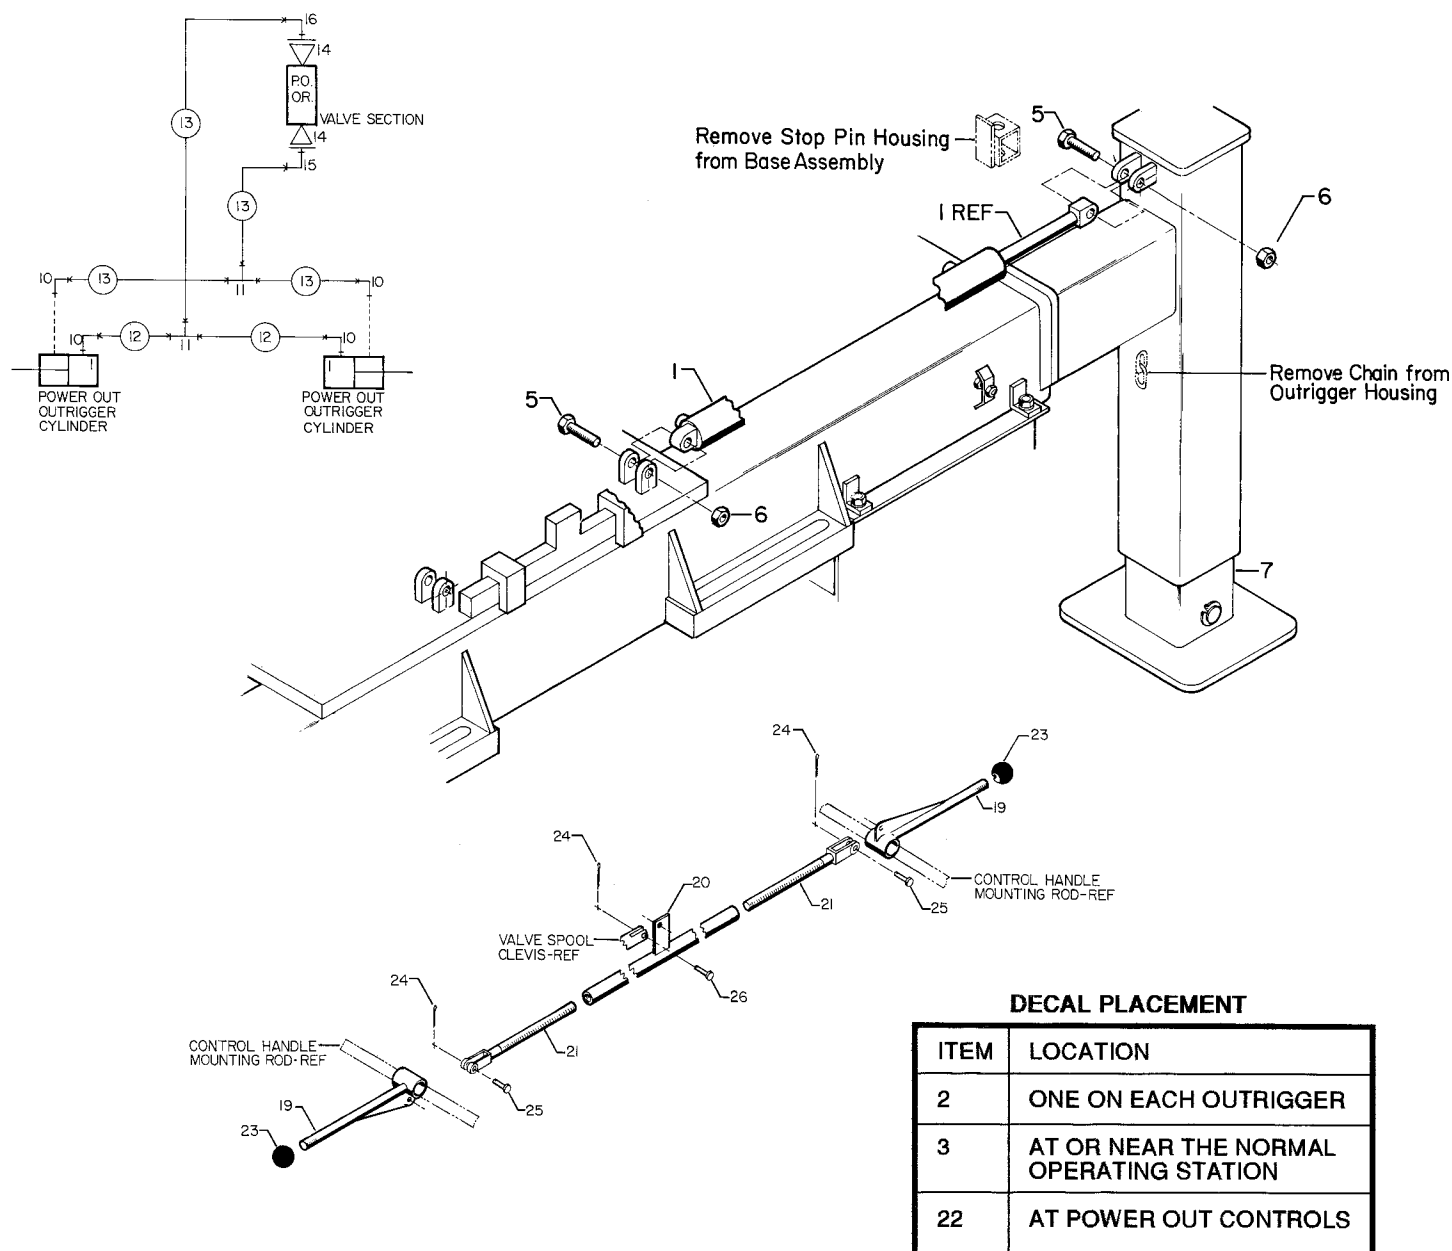

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1.	3B115830	Cylinder, Power-out	2	15.	72532700	Elbow, 9/16mstr x 9/16mjic xlg	1
2.	70392864	Decal, outrg stand clear	2	16.	72053760	Elbow, 9/16mstr x 9/16mjic 90 deg	1
3.	70392867	Decal, outrg moving	1	17.	70029451	Handle, Control	2
5.	72060928	Cap screw; 1/2 x 2 1/4	4	20.	52704744	Rod, Control, Female	1
6.	72062080	Nut, Lock, 1/2	4	21.	52704745	Rod, Control, Male	2
7.	52704388	Leg, Outrigger	ref	22.	71392277	Decal, control	2
10.	72053758	Elbow, 7/16mstr x 7/16mjic 90 deg.	4	23.	71039096	Knob, Control	2
11.	72532768	Tee, 7/16 JIC (m)	2	24.	72066168	Pin, Cotter	3
12.	51704620	Hose, 1/4 ID x 20	2	25.	72066338	Pin, Clevis	2
13.	51705970	Hose, 1/4 ID x 33	4	26.	72661169	Pin, Clevis	1
14.	72532707	Adapter, 7/16 JIC (m) x 9/16 JIC (f)	2				

Figure D-6. Power-Out Outrigger (Part Number 31704357)

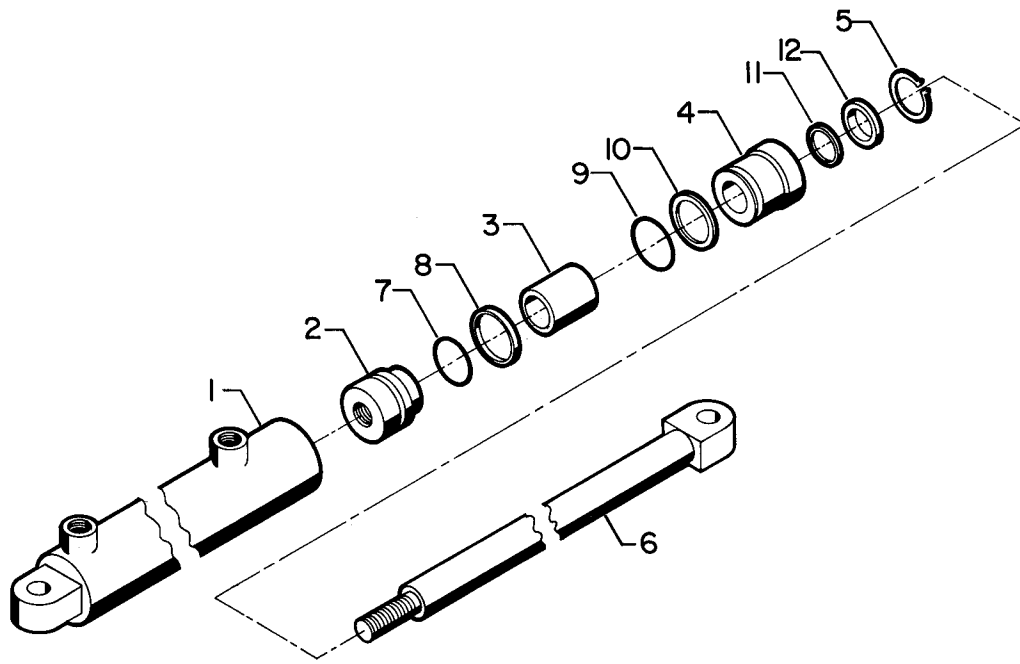

DIMENSIONS

Bore	1 1/4
Stroke	24
Rod Diameter	3/4
Pin Diameter	1/2
C-C Closed	30 7/16

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1.	4B115830	Case, Cylinder	1	8.	7T66P012	Seal, Piston	1*
2.	6I012050	Piston	1	9.	7Q072214	O-ring	1*
3.	6C125007	Tube, Stop	1	10.	7Q10P214	O-Ring, Back-up	1*
4.	6H012007	Head	1	11.	7R66P075	Seal	1*
5.	72066029	Ring, Retaining	1	12.	7R13P007	Wiper, Rod	1*
6.	4G115830	Rod	1				
7.	7Q072021	O-ring	1*				

* Part of seal kit (Part number 9B050608)

**Figure D-7. Power-Out Outrigger Cylinder
(Part Number 3B115830)**

Item No.	Part No.	Description	Qty
1.	3B110820	Cylinder, Inner boom	2
2.	52704342	Pin, Mast/inner boom	1
3.	52704347	Weldment, Inner boom	1
4.	7BF81220	Bushing (part of 3)	12ref
5.	60106331	Plate, Pin retainer	7
6.	60107303	Pin, Inner cyl./inner boom	1
7.	60107305	Pin, Inner cyl./mast	2
8.	60010118	Clamp, Hose	1
9.	72053508	Zerk, 1/8 npt	1
10.	72060049	Cap screw, 3/8 x 1 3/4	1
11.	72060147	Cap screw, 5/8 x 1	7
12.	72062103	Nut, Lock, 3/8	1

NOTE

Anytime the pin retainer plate bolts (Item 11) have been removed, apply Loctite 262 to the threads before re-assembly.



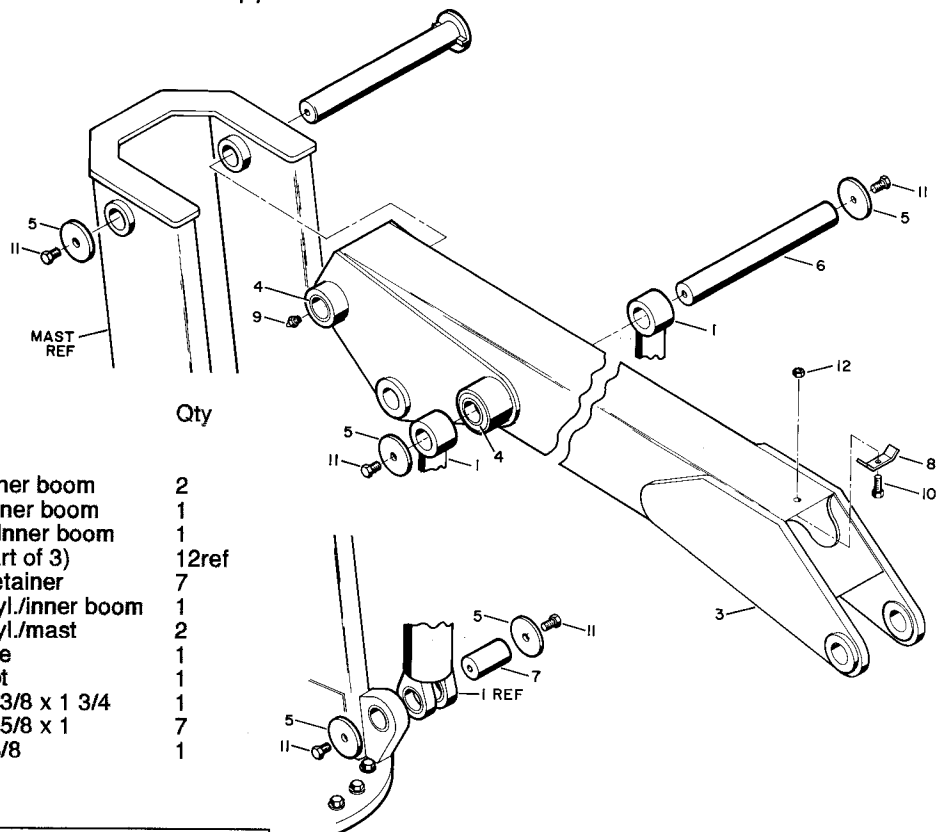


Figure D-8. Inner Boom (Part Number 41704351)

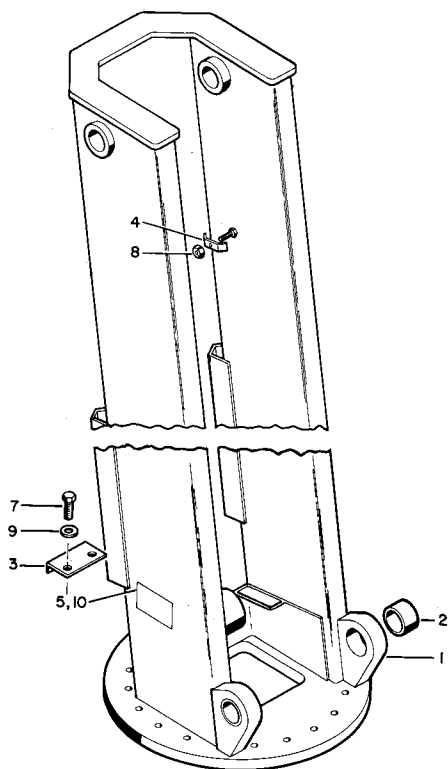

Item No.	Part No.	Description	Qty
1.	52704348	Mast weldment	1
2.	7BF81520	Bushing	2
3.	60104539	Cover, Pinion gear	1
4.	60010118	Clamp, Hose	2
5.	70029119	Placard, Serial no.	1
7.	72060151	Cap screw, 5/8 x 2 gr8	18
8.	72062103	Nut, Lock, 3/8	2
9.	72063119	Washer, Hardened, 5/8	18
10.	72066340	Rivet, 1/8	

Figure D-9. Mast (Part Number 41704350)

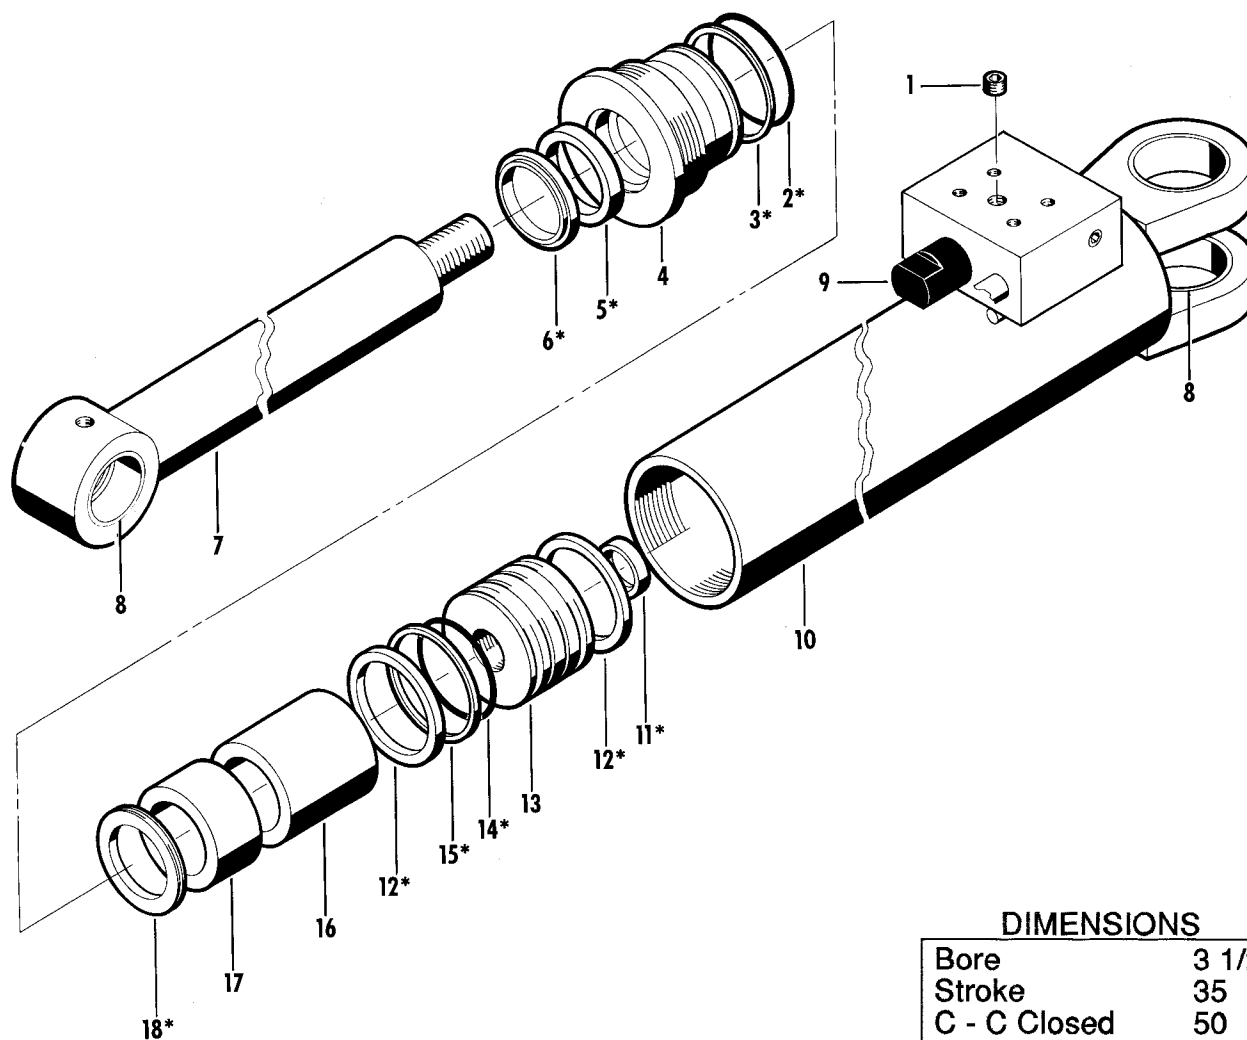


DIMENSIONS

Bore	3 1/2
Stroke	35
C - C Closed	50
Rod Diameter	2 1/4
Pin Diameter	2

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1.	7PNPXT02	Plug, 1/8 npt (part of 10)	3ref	11.	7T61N125	Seal, Lock ring	1*
2.	7Q072338	O-ring	1*	12.	7T65I035	Ring, Piston	2*
3.	7Q10P338	Ring, Back-up	1*	13.	6I035125	Piston	1
4.	6H035022	Head	1	14.	7Q072151	O-ring	1*
5.	7R546022	Seal, Rod	1*	15.	7T66P035	Seal, Piston	1*
6.	7R14P022	Wiper, Rod	1*	16.	6C075022	Tube, Stop	1
7.	4G110820	Rod	1	17.	6C300022	Tube, Stop	1
8.	7BF81020	Bushing (part of 7 & 10)	4ref	18.	6A025022	Ring, Wafer lock	1*
9.	73054242	Valve, Counter balance	1				
10.	4B110820	Case	1				

* Part of seal kit (Part number 9C141820)

Figure D-10. Inner Cylinder (Part Number 3B110820)

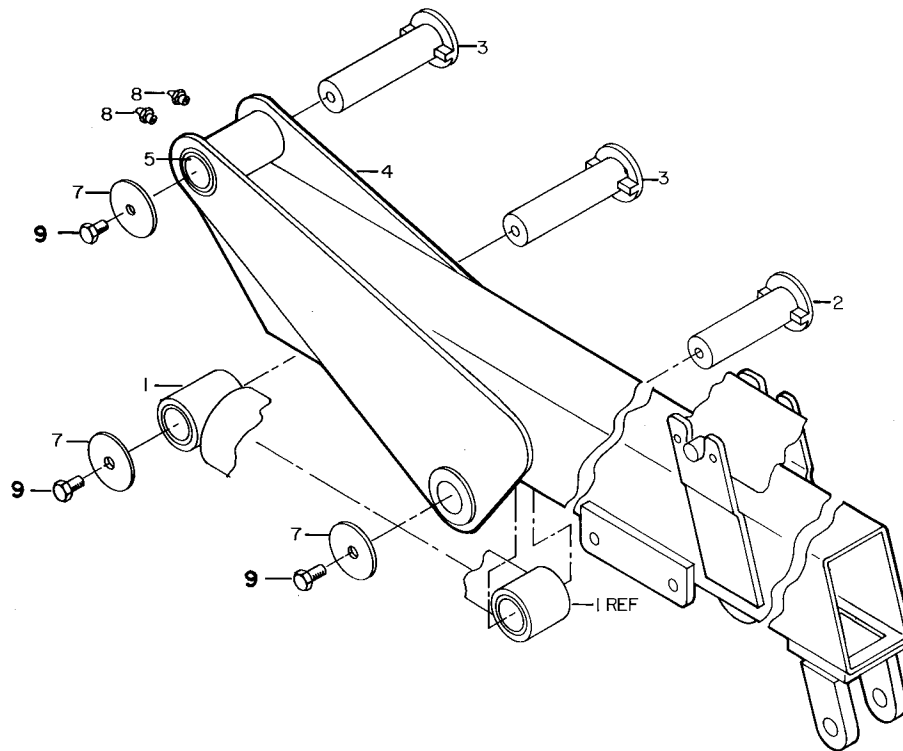

Item No.	Part No.	Description	Qty
1.	3C132820	Cylinder, Outer	1
2.	52704340	Pin	1
3.	52704341	Pin	2
4.	52704343	Boom, Outer (incl. 5)	1
5.	7BF81220	Bushing (part of 4)	4ref
6.			
7.	60106331	Plate, Pin retainer	3
8.	72053508	Zerk, 1/8 npt	2
9.	72060147	Cap screw, 5/8 x 1	3


NOTE

Anytime the pin retainer plate bolts (item 9) have been removed, apply Loctite 262 to the threads before re-assembly.

Figure D-11. Outer Boom (Part Number 41704359)

DIMENSIONS


Bore	4 1/2
Stroke	44 3/8
C-C Closed	60
Rod Diameter	3
Pin Diameter	2

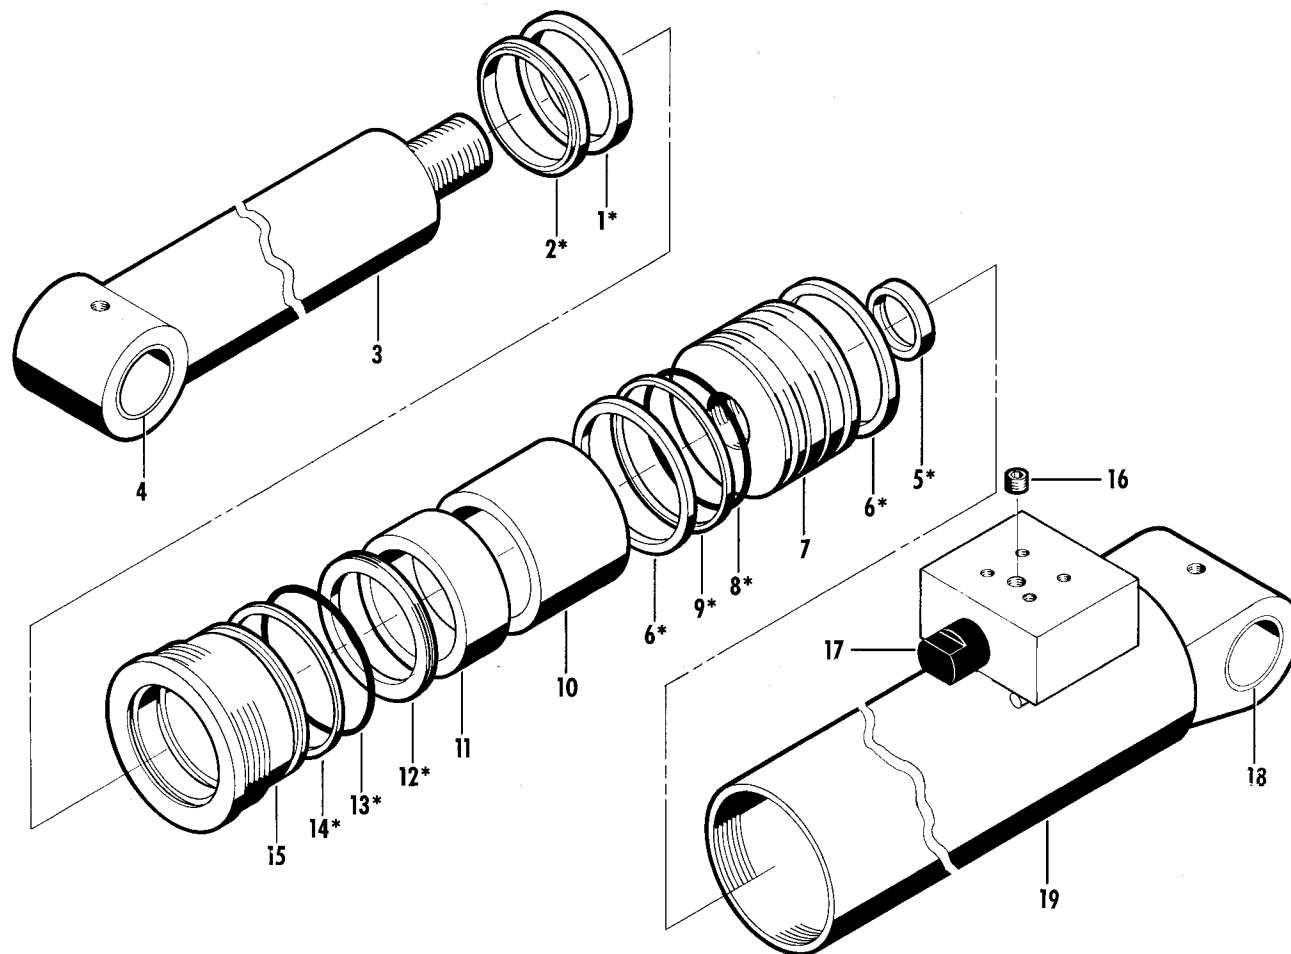

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1.	7R546030	Seal, Rod	1*	11.	6C150030	Tube, Stop	1
2.	7R14P030	Wiper, Rod	1*	12.	6A025030	Ring, Wafer lock	1*
3.	4G132820	Rod	1	13.	7Q072345	O-ring	1*
4.	7BF81220	Bushing (part of 3)	2ref	14.	7Q10P346	Ring, Back-up	1*
5.	7T61N143	Seal, Lock ring	1*	15.	6H045030	Head	1
6.	7T65I045	Ring, Piston	2*	16.	7PNPXT02	Plug, 1/8 npt (part of 19)	3ref
7.	6I045143	Piston	1	17.	73054242	Valve, Counter balance	1
8.	7Q072155	O-ring	1*	18.	7BF81520	Bushing (part of 19)	2ref
9.	7T66P045	Seal, Piston	1*	19.	4C132820	Case, Cylinder	1
10.	6C300030	Tube, stop	1				


*Part of seal kit (Part Number 9C182423)

Figure D-12. Outer Cylinder (Part Number 3C132820)

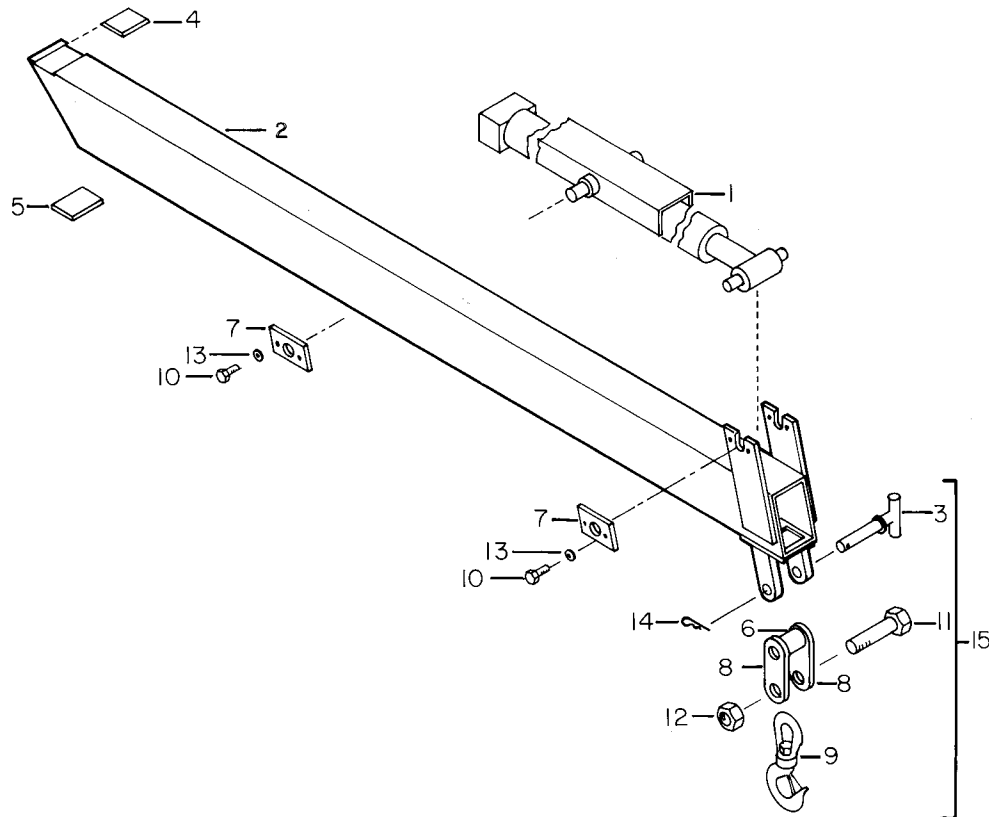

ITEM	PART	DESCRIPTION	QTY
1.	3B059840	EXTENSION CYLINDER	1
2.	52704344	EXTENSION BOOM	1
3.	52070151	PIN (PART OF 15)	1REF
4.	60030064	WEAR PAD	1
5.	60030067	WEAR PAD	1
6.	60108857	SPACER (PART OF 15)	1REF
7.	60107292	LOCKPLATE	4
8.	60107324	HOOK LINK (PART OF 15)	2REF
9.	71073035	SWIVEL HOOK (PART OF 15)	1REF
10.	72060091	CAP SCR 1/2-13X1 HH GR5	8
11.	72601666	CAP SCR 1 1/4-7X4 (PART OF 15)	1REF
12.	72062073	NUT 1 1/4-7 LOCK (PART OF 15)	1REF
13.	72063053	WASHER 1/2 LOCK	8
14.	72066145	HAIR PIN (PART OF 15)	1REF
15.	51706199	HOOK ASM (INCL:3,6,8,9,11,12,14)	1

Figure D-13. 4819 EXTENSION BOOM (41704360)

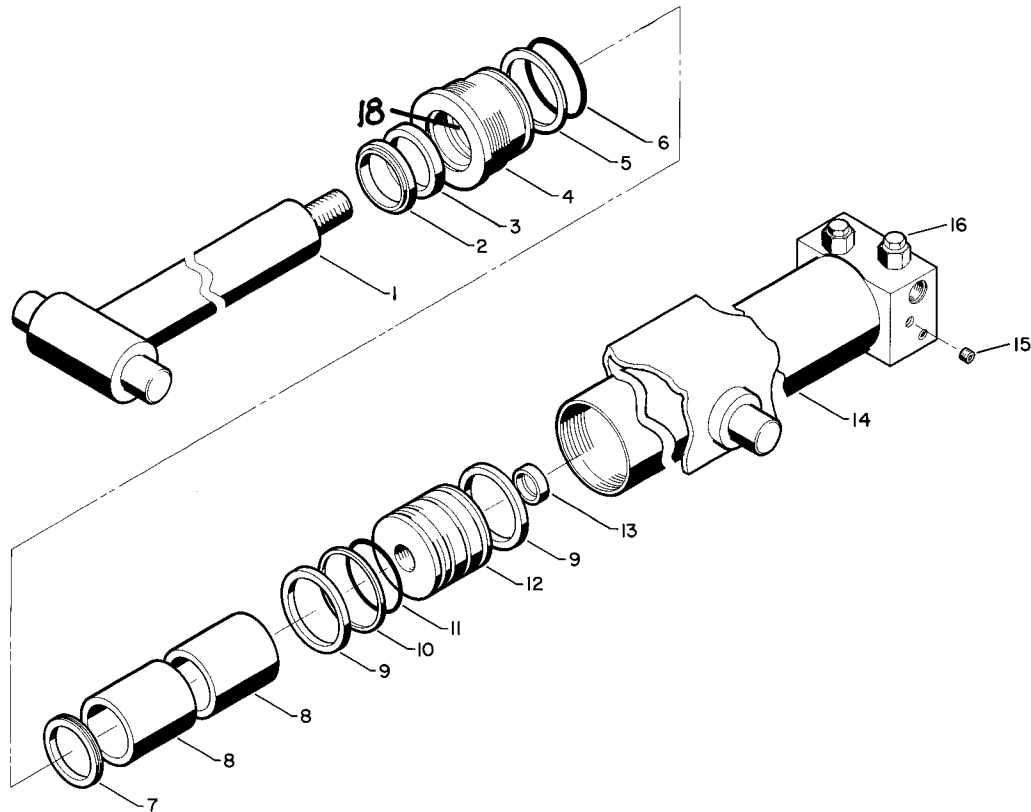

DIMENSIONS

Bore	3
Stroke	64
C-C Closed	31 1/2
Rod Diameter	2
Pin Diameter	1 1/4

ITEM	PART NO.	DESCRIPTION	QTY
1.	4G059840	ROD	1
2.	7R14P020	ROD WIPER (PART OF 17)	1REF
3.	7R546020	ROD SEAL (PART OF 17)	1REF
4.	6H030020	HEAD	1
5.	7Q10P334	BACK-UP RING (PART OF 17)	1REF
6.	7Q072334	O-RING (PART OF 17)	1REF
7.	6A025020	WAFER LOCK (PART OF 17)	1REF
8.	6C300020	STOP TUBE	2
9.	7T65I030	PISTON RING (PART OF 17)	2REF
10.	7T66P030	PISTON SEAL (PART OF 17)	1REF
11.	7Q072145	O-RING (PART OF 17)	1REF
12.	6I030106	PISTON	1
13.	7T61N106	LOCK RING SEAL (PART OF 17)	1REF
14.	4B059840	CASE	1
15.	7PNPXT02	PLUG 1/8NPT (PART OF 14)	6REF
16.	73054304	COUNTERBALANCE VALVE	2
17.	9C121617	SEAL KIT (INCL:2,3,5-7,9-11,13,18)	1
18.	7T2N4022	WEAR RING-ROD (PART OF 17)	1REF


NOTE

IT IS RECOMMENDED THAT ALL COMPONENTS OF THE SEAL KIT BE REPLACED WHENEVER THE CYLINDER IS DISASSEMBLED. THIS WILL REDUCE FUTURE DOWNTIME.

APPLY "LUBRIPLATE #630-2" MEDIUM HEAVY, MULTI-PURPOSE LUBRICANT OR EQUIVALENT TO ALL PISTON AND HEAD GLANDS, LOCK RING AND ROD THREADS BEFORE ASSEMBLY.

USE "NEVER-SEEZ" OR EQUIVALENT BETWEEN THE HEAD AND THE CASE WHEN ASSEMBLING THE CYLINDER.

Figure D-14. 4819 EXTENSION CYLINDER (3B059840)

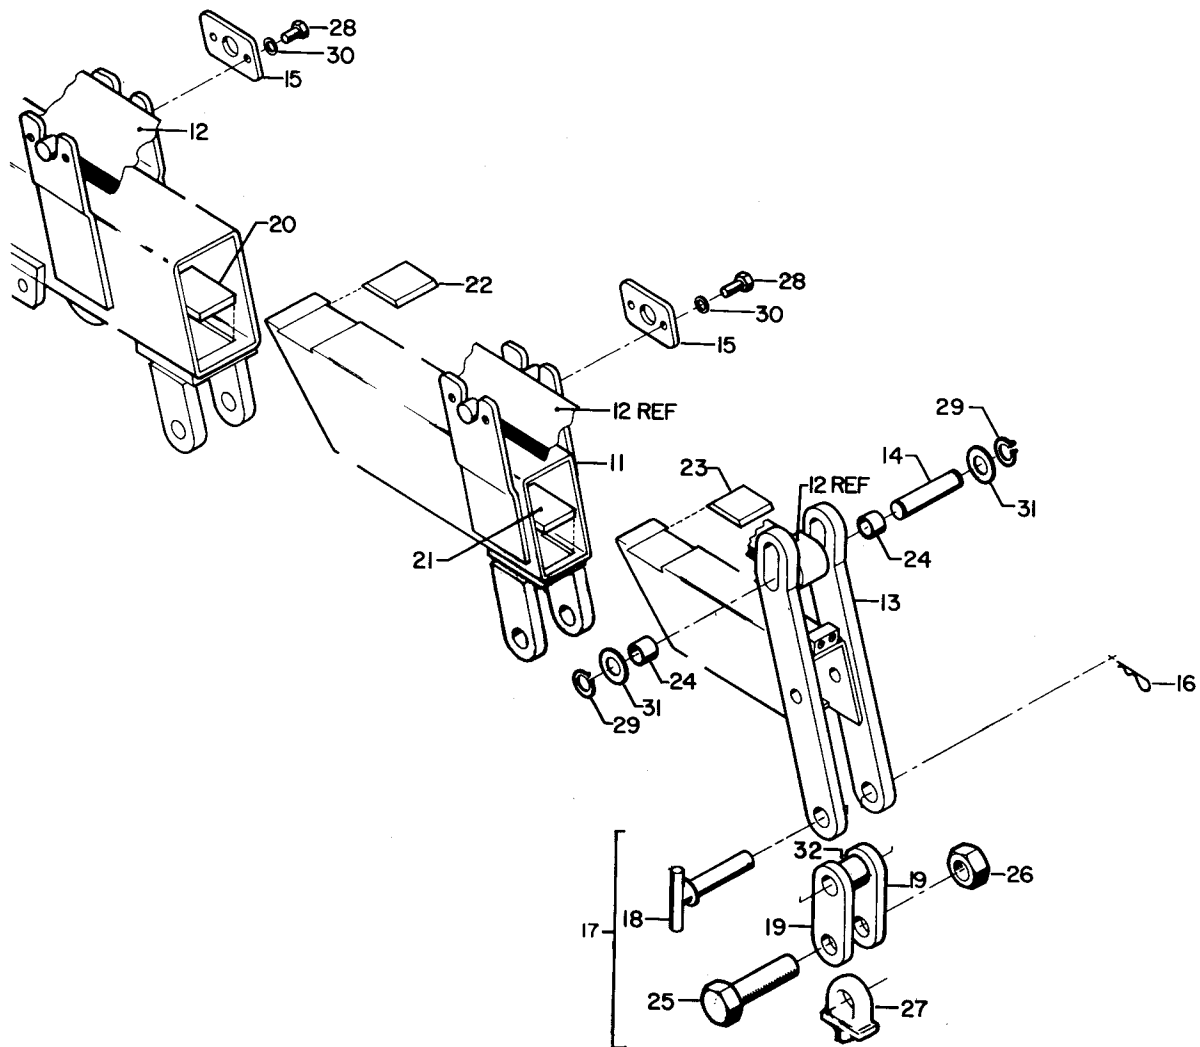


ITEM	PART	DESCRIPTION	QTY
11.	52704344	1ST STG EXT BOOM	1
12.	3K120850	TELESCOPIC CYLINDER	1
13.	52704345	2ND STG EXT BOOM	1
14.	60101906	PIN	1
15.	60107292	LOCKPLATE	4
16.	72066145	HAIR PIN (PART OF 17)	1REF
17.	51706199	HOOK ASSEMBLY	1
18.	52070151	PIN (PART OF 17)	1REF
19.	60107324	LINK (PART OF 17)	2REF
20.	60030067	WEAR PAD	1
21.	60030065	WEAR PAD	1
22.	60030064	WEAR PAD	1

ITEM	PART	DESCRIPTION	QTY
23.	60030066	WEAR PAD	1
24.	60020197	ROLLER	2
25.	72601666	CAP SCR 1 1/4X4 GR5 (PART OF 17)	1REF
26.	72062073	NUT 1 1/4-7 LOCK (PART OF 17)	1REF
27.	71073035	SWIVEL HOOK (PART OF 17)	1REF
28.	72060091	CAP SCR 1/2X1 GR5	8
29.	72066125	RETAINING RING 1	2
30.	72063053	WASHER 1/2 LOCK	8
31.	72063010	WASHER 1	2
32.	60108857	SPACER (PART OF 17)	1REF

Figure D-15. 4825 EXTENSION BOOM (41704638)

REPLACED BY 3K070000
ON FOLLOWING PAGE
20001108

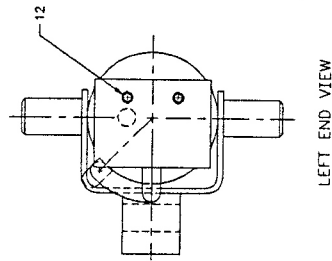

NOTE

IT IS RECOMMENDED THAT ALL COMPONENTS OF THE SEAL KIT BE REPLACED WHENEVER THE CYLINDER IS DISASSEMBLED. THIS WILL REDUCE FUTURE DOWNTIME.

APPLY "LUBRIPLATE #630-2" MEDIUM HEAVY, MULTI-PURPOSE LUBRICANT OR EQUIVALENT TO ALL PISTON AND HEAD GLANDS, LOCK RING AND ROD THREADS BEFORE ASSEMBLY.

USE "NEVER-SEEZ" OR EQUIVALENT BETWEEN THE HEAD AND THE CASE WHEN ASSEMBLING THE CYLINDER.

ITEM	PART	DESCRIPTION	QTY
1.	4K120850	CASE ASM	1
2.	4H120850	INNER CASE	1
3.	4G120850	ROD (INCL:33)	1
4.	6H271511	HEAD	1
5.	6H112820	HEAD	1
6.	6I025087	PISTON	1
7.	6I095850	PISTON	1
8.	4FG12085	MOUNTING RING	1
9.	6C300015	STOP TUBE	2
10.	6C075015	STOP TUBE	1
11.	73054242	COUNTER BALANCE VALVE	2
12.	7PNPXT02	PLUG 1/8NPT (PART OF 1)	6REF
13.	9X095850	SEAL KIT	1
14.	7Q072228	O-RING (PART OF 13)	1REF
15.	7Q10P228	BACK-UP RING (PART OF 13)	1REF
16.	7Q072342	O-RING (PART OF 13)	1REF
17.	7Q10P342	BACK-UP RING (PART OF 13)	1REF
18.	7T2N4037	WEAR RING (PART OF 13)	1REF
19.	7R546015	ROD SEAL (PART OF 13)	1REF
20.	7R546035	ROD SEAL (PART OF 13)	1REF
21.	7R14P015	ROD WIPER (PART OF 13)	1REF
22.	7R14P035	ROD WIPER (PART OF 13)	1REF
23.	7T65I040	PISTON RING (PART OF 13)	2REF
24.	7Q072137	O-RING (PART OF 13)	1REF
25.	7T66P025	PISTON SEAL (PART OF 13)	1REF
26.	7Q072153	O-RING (PART OF 13)	1REF
27.	7T66P040	PISTON SEAL (PART OF 13)	1REF
28.	7Q072151	O-RING (PART OF 13)	1REF
29.	7T61N087	LOCK RING SEAL (PART OF 13)	1REF
30.	7T2N8015	ROD WEAR RING (PART OF 13)	1REF
31.	6A025015	WAFER LOCK (PART OF 13)	1REF
32.	5M126820	SADDLE	1
33.	72053507	ZERK 1/4-28 (PART OF 3)	1REF

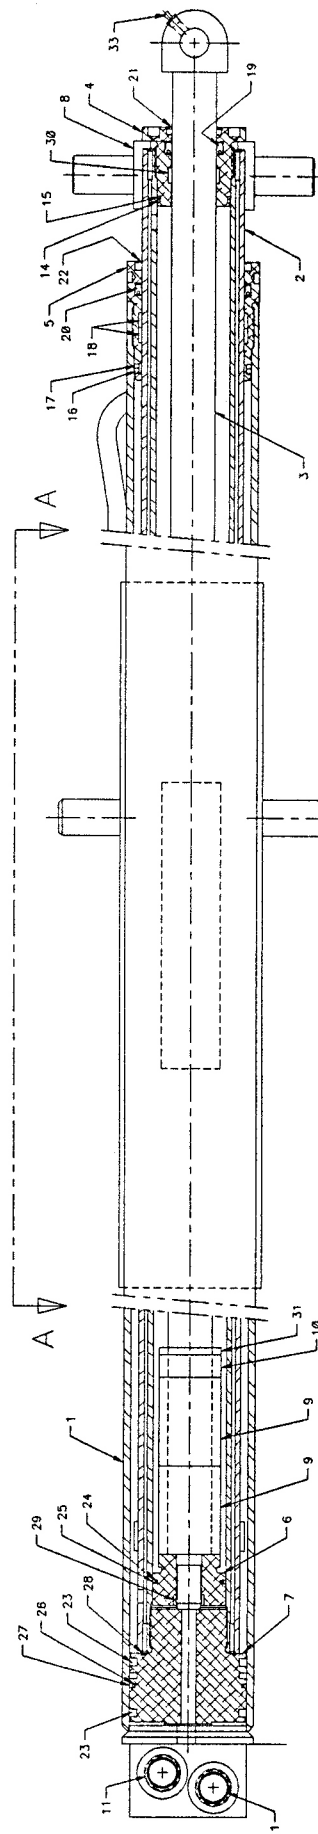



Figure D-16. 2 STAGE EXTENSION CYLINDER (3K120850)


EXT BOOM CYL-2 STG (3K070000)

REPLACES 3K120850 (20001108)

1.	4K070000	CASE ASM (INCL:12)	1
2.	4H120850	CASE-INNER	1
3.	4G120850	ROD ASM (INCL:33)	1
4.	6H271511	HEAD	1
5.	6H112820	HEAD	1
6.	6I025087	PISTON 2-1/2" BORE	1
7.	6I095850	PISTON 4" BORE	1
8.	4FG12085	MOUNTING RING	1
9.	6C300015	STOP TUBE 3"	2
10.	6C075015	STOP TUBE 3/4"	1
11.	73054242	C'BAL VALVE 25GPM	2
12.	7PNPXT02	PLUG 1/8NPT (PART OF 1)	6REF
13.	9X095850	SEAL KIT (INCL:14-31)	1
14.	7Q072228	O-RING (PART OF 13)	1REF
15.	7Q10P228	BACK-UP RING (PART OF 13)	1REF
16.	7Q072342	O-RING (PART OF 13)	1REF
17.	7Q10P342	BACK-UP RING (PART OF 13)	1REF
18.	7T2N4037	WEAR RING (PART OF 13)	1REF
19.	7R546015	U-CUP SEAL (PART OF 13)	1REF
20.	7R546035	U-CUP SEAL (PART OF 13)	1REF
21.	7R14P015	ROD WIPER (PART OF 13)	1REF
22.	7R14P035	ROD WIPER (PART OF 13)	1REF
23.	7T65I040	PISTON RING (PART OF 13)	2REF
24.	7Q072137	O-RING (PART OF 13)	1REF
25.	7T66P025	PISTON SEAL (PART OF 13)	1REF
26.	7Q072153	O-RING (PART OF 13)	1REF
27.	7T66P040	PISTON SEAL (PART OF 13)	1REF
28.	7Q072147	O-RING (PART OF 13)	1REF
29.	7T61N087	LOCK RING (PART OF 13)	1REF
30.	7T2N8015	WEAR RING (PART OF 13)	1REF
31.	6A025015	WAFER LOCK (PART OF 13)	1REF
33.	72053507	ZERK 1/4-28 (PART OF 3)	1REF

- 1.) APPLY "NEVER-SEEZ" REGULAR GRADE ANTI-SEIZE AND LUBRICATING COMPOUND TO THREADS ON THE CYLINDER HEAD ONLY. KEEP AWAY FROM ALL SEALS.
- 2.) APPLY "LUBRIPLATE" NO. 630-2 MEDIUM HEAVY, MULTI PURPOSE LUBRICANT, TO ALL PISTON, HEAD GLAND, AND HOLDING VALVE SEALS, NYLON LOCK RING, CAST IRON PISTON RINGS, AND ROD STINGER THREADS

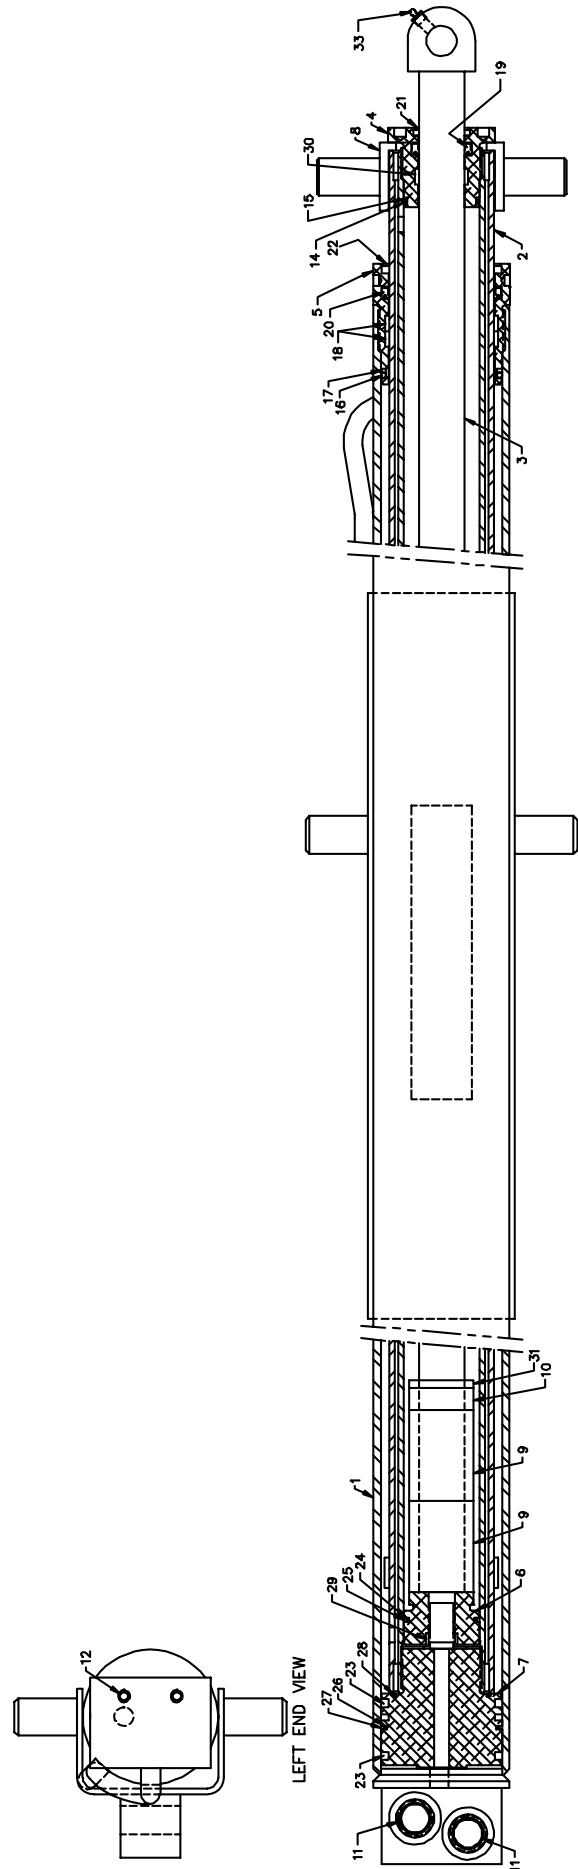


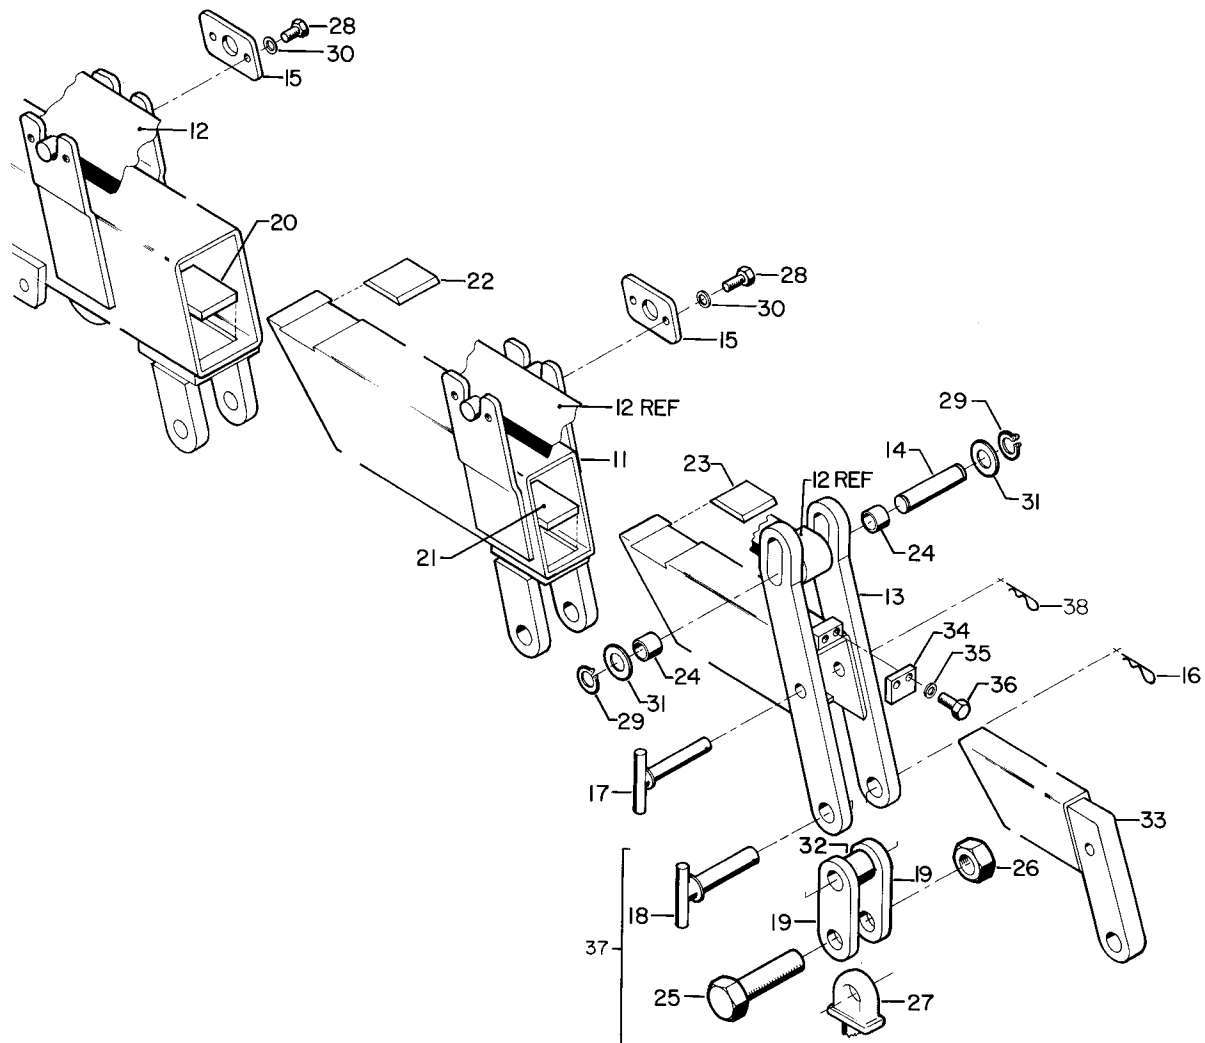

ITEM	PART	DESCRIPTION	QTY
11.	52704344	1ST STG EXT BOOM	1
12.	3K120850	EXTENSION CYLINDER	1
13.	52704345	2ND STG EXT BOOM	1
14.	60101906	PIN	1
15.	60107292	LOCKPLATE	4
16.	72066145	HAIR PIN (PART OF 37)	1REF
17.	52704383	PIN	1
18.	52070151	PIN (PART OF 37)	1REF
19.	60107324	LINK (PART OF 37)	2REF
20.	60030067	WEAR PAD	1
21.	60030065	WEAR PAD	1
22.	60030064	WEAR PAD	1
23.	60030066	WEAR PAD	1
24.	60020197	ROLLER	2


ITEM	PART	DESCRIPTION	QTY
25.	72601666	CAP SCR 1 1/4-7X4(PART OF 37)	1REF
26.	72062073	NUT 1 1/4-7 LOCK (PART OF 37)	1REF
27.	71073035	SWIVEL HOOK (PART OF 37)	1REF
28.	72060091	SCR 1/2X1	8
29.	72066125	RETAINING RING 1	2
30.	72063053	WASHER 1/2 LOCK	8
31.	72063010	WASHER 1	2
32.	60108857	SPACER (PART OF 37)	1REF
33.	52704346	3RD STG EXT BOOM	1
34.	60107294	STOP	1
35.	72063053	WASHER 1/2 LOCK	2
36.	72060094	CAP SCR 1/2X1 3/4	2
37.	51706199	HOOK(INCL:16,18,19,25-27,32)	1
38.	72066145	HAIR PIN .19	1

Figure D-17. 4830 EXTENSION BOOM (41704362)

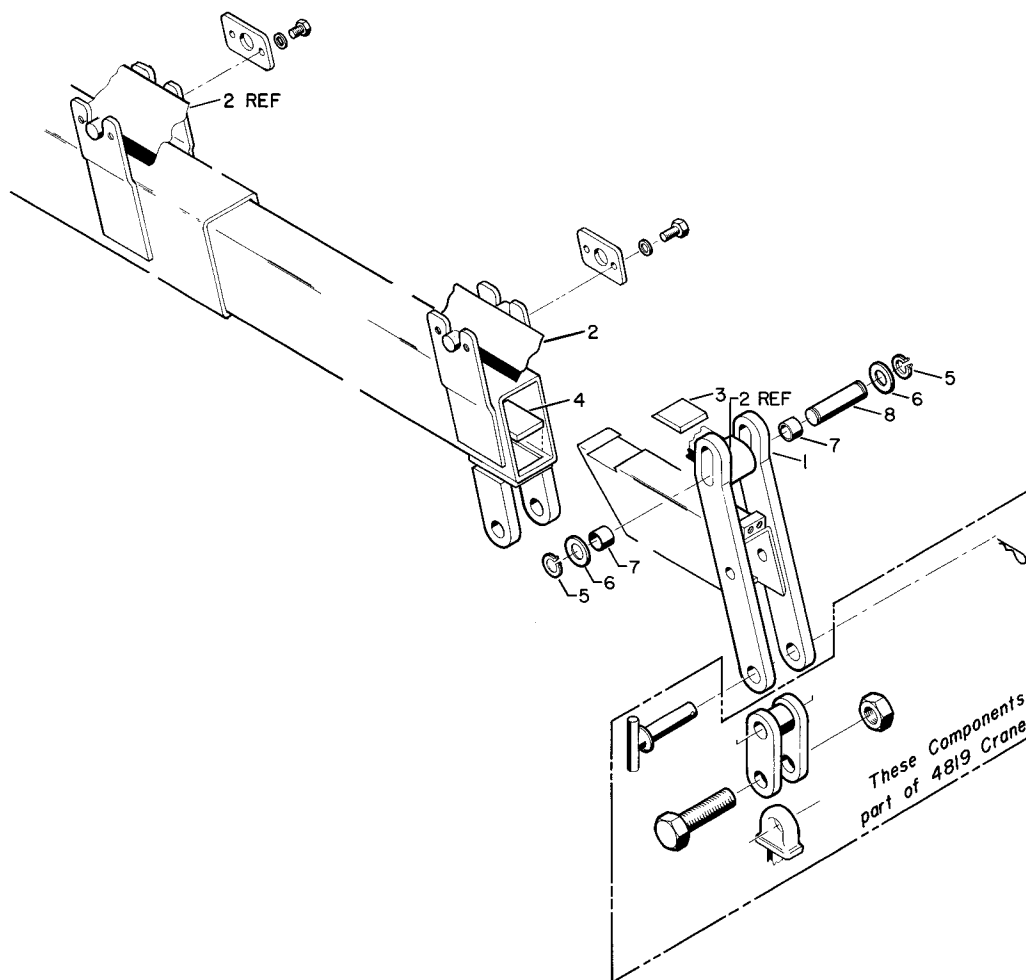

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1.	52704345	Boom, 2nd stage extension	1	5.	72066125	Ring, Retaining, 1	2
2.	3K120850	Cylinder, Telescoping	1	6.	72063010	Washer, 1	2
3.	50030066	Pad, Wear	1	7.	60020197	Roller	2
4.	60030065	Pad, Wear	1	8.	60101906	Pin	1


**Figure D-18. 4819 to 4825 Conversion Kit
(Part Number 95705066)**

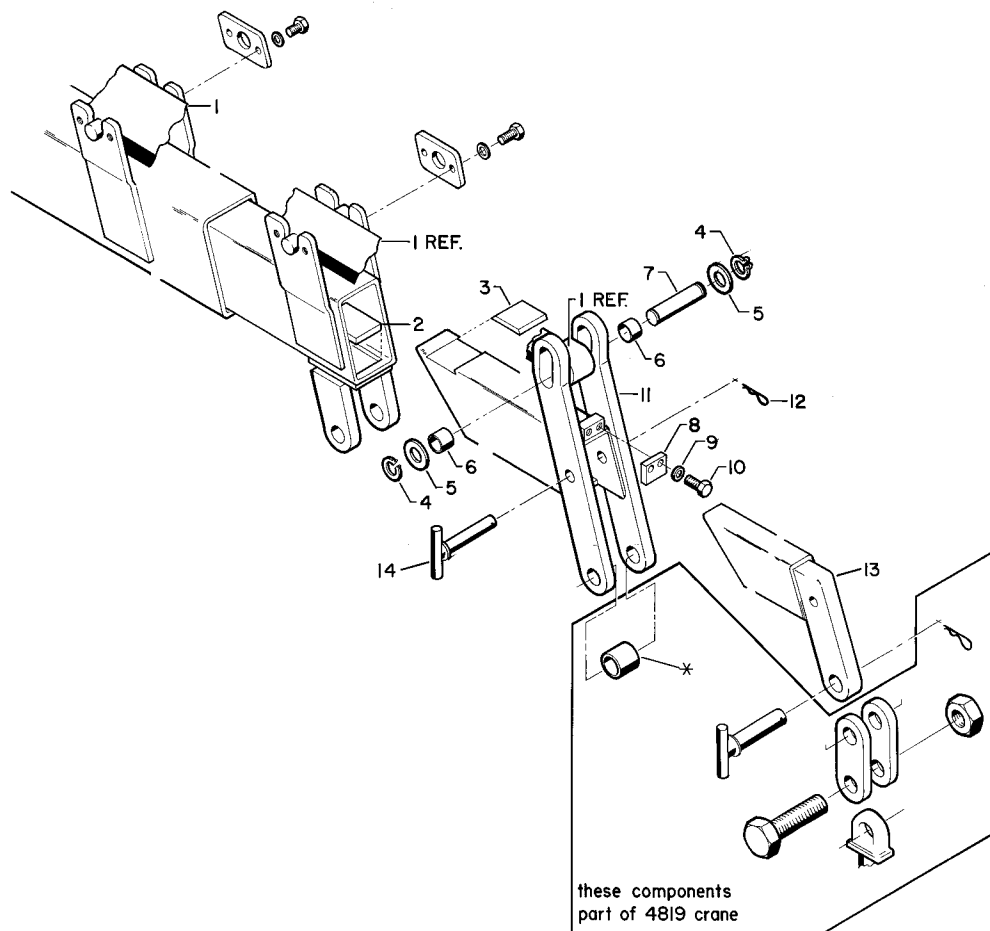

* This spacer is used only when the 3rd-stage (pin-on)
extension boom is removed.

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1.	3K120850	Cylinder, Telescoping	1	8.	60107294	Stop	1
2.	60030065	Pad, Wear	1	9.	72063053	Washer, Lock, 1/2	2
3.	60030066	Pad, Wear	1	10.	72060094	Cap screw, 1/2 x 1-3/4,	2
4.	72066125	Ring, Retaining, 1	2	11.	52704345	Boom, 2nd stage extension	1
5.	72063010	Washer, 1	2	12.	72066145	Pin, Hair	1
6.	60020197	Roller	2	13.	52704346	Boom, 3rd stage extension	1
7.	60101906	Pin	1	14.	52704383	Pin	1


**Figure D-19. 4819 to 4830 Conversion Kit
(Part Number 95705082)**

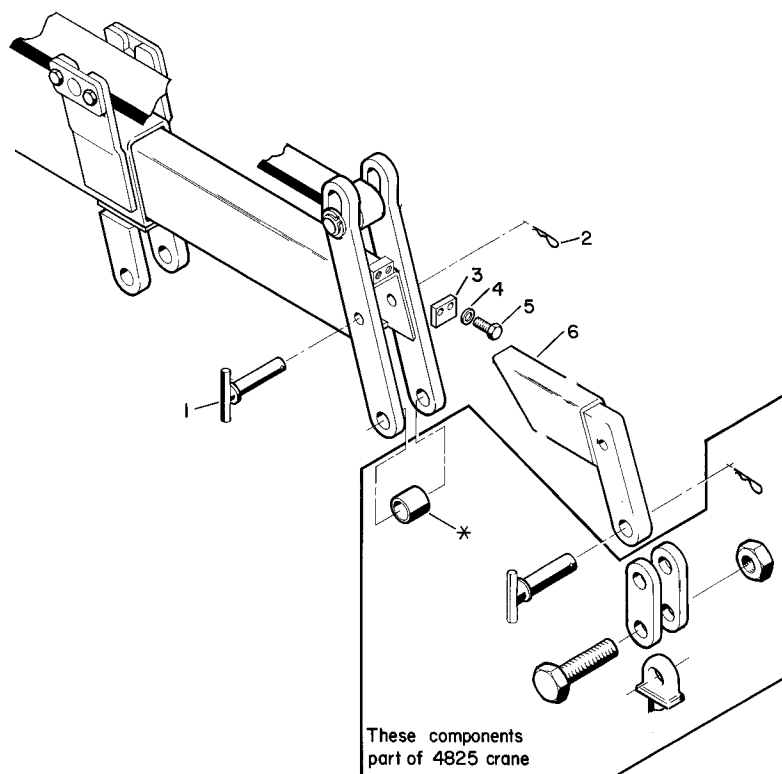

* This spacer is used only when the 3rd-stage (pin-on)
extension boom is removed.


Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1.	52704383	Pin	1	4.	72063053	Washer, Lock, 1/2	2
2.	72066145	Pin, Hair	1	5.	72060094	Cap screw, 1/2 x 1 3/4	2
3.	60107294	Stop	1	6.	52704346	Boom, 3rd stage extension	1

**Figure D-20. 4825 to 4830 Conversion Kit
(Part Number 95705083)**

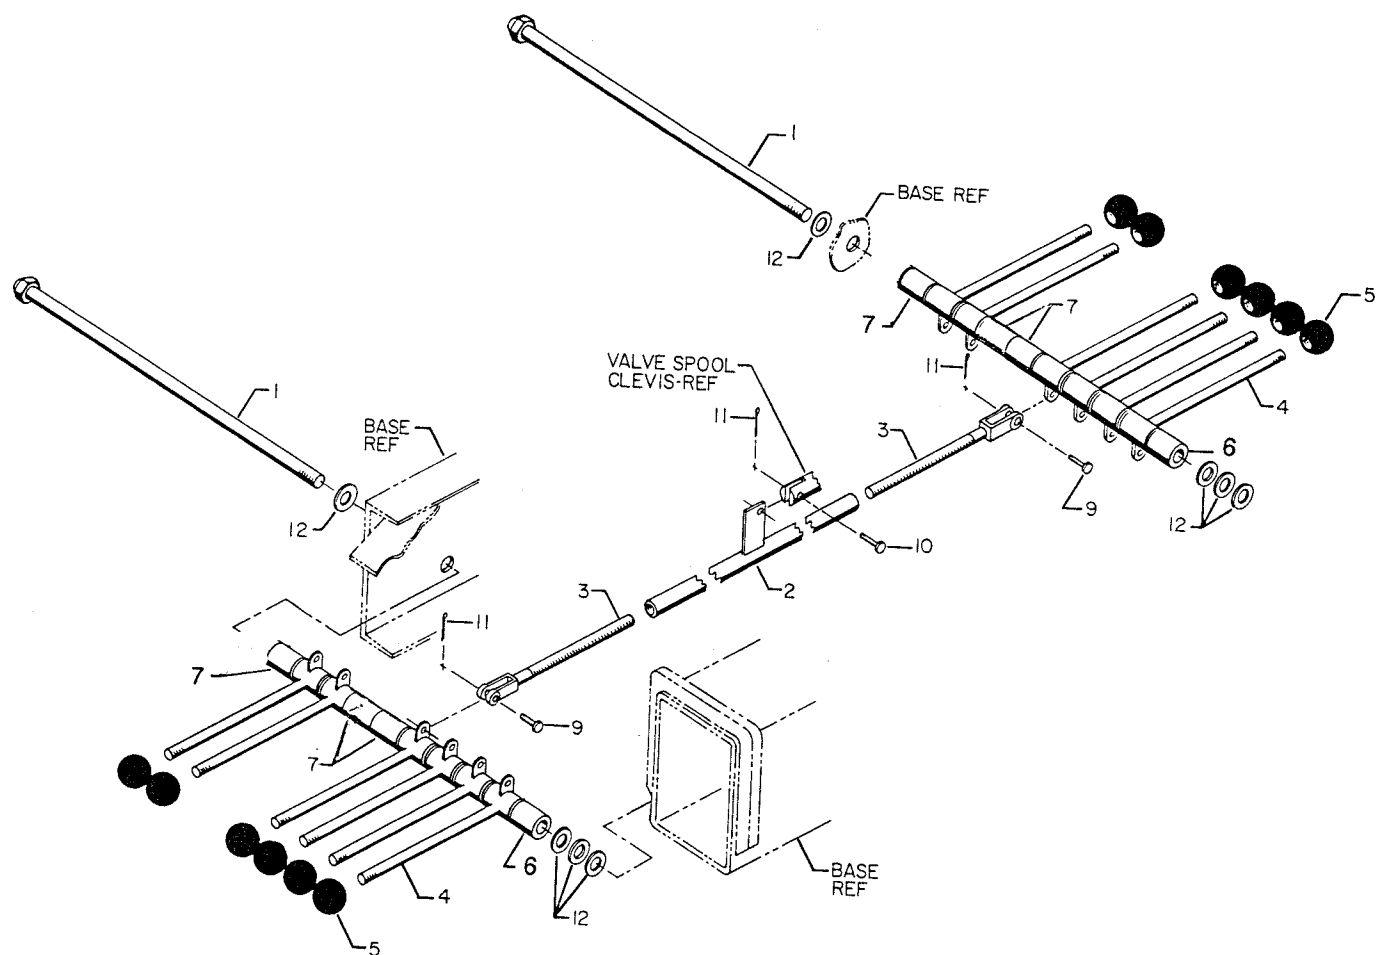


ITEM	PART	DESCRIPTION	QTY
1.	52704397	ROD-CTRL HANDLE MTG	2
2.	52704744	CONTROL ROD-F	6
3.	52704745	CONTROL ROD-M	12
4.	70029451	CONTROL HANDLE	12
5.	71039096	KNOB	12
6.	60030068	SPACER 1-3/8	2
7.	60030069	SPACER 1-3/4	6
9.	72066338	CLEVIS PIN 5/16X1	12
10.	72661169	CLEVIS PIN 5/16X3/4	6
11.	72066168	COTTER PIN 3/32X3/4	18
12.	72063119	WASHER 5/8 WRT	8

Figure D-21. CONTROL KIT (90704417)

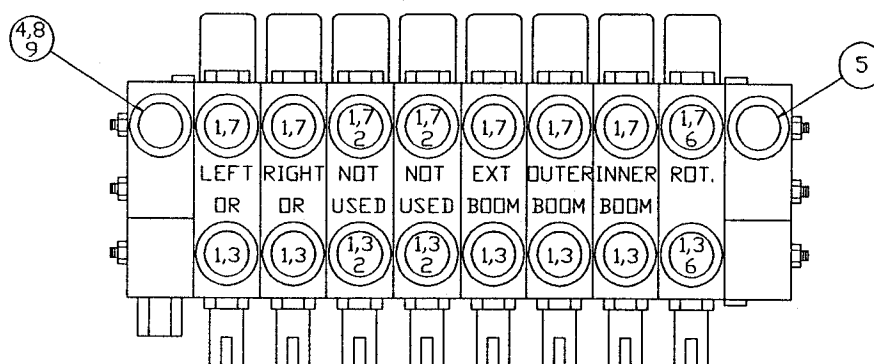


ITEM	PART NO.	DESCRIPTION	QTY
1.	72532722	ADAPTER 7/8MSTR 9/16FSTR	16
2.	72532738	CAP 9/16JIC STL	4
3.	72053760	ELBOW 9/16MSTR 9/16MJIC 90°	8
4.	72053763	ELBOW 3/4MSTR 3/4MJIC 90°	1
5.	72053766	ELBOW 7/8MSTR 1-1/16MJIC 90°	1
6.	72532707	ADAPTER 7/16MJIC 9/16FJIC	2
7.	72532700	ELBOW 9/16MSTR 9/16MJIC XLG	8
8.	72532657	TEE 3/4JIC SWIVEL NUT	1
9.	72532675	CAP 3/4JIC STL	1
10.	70731499	VALVEBANK 8-SECTION	1

Figure D-22. VALVEBANK-8 SECTION MANUAL (51710944)

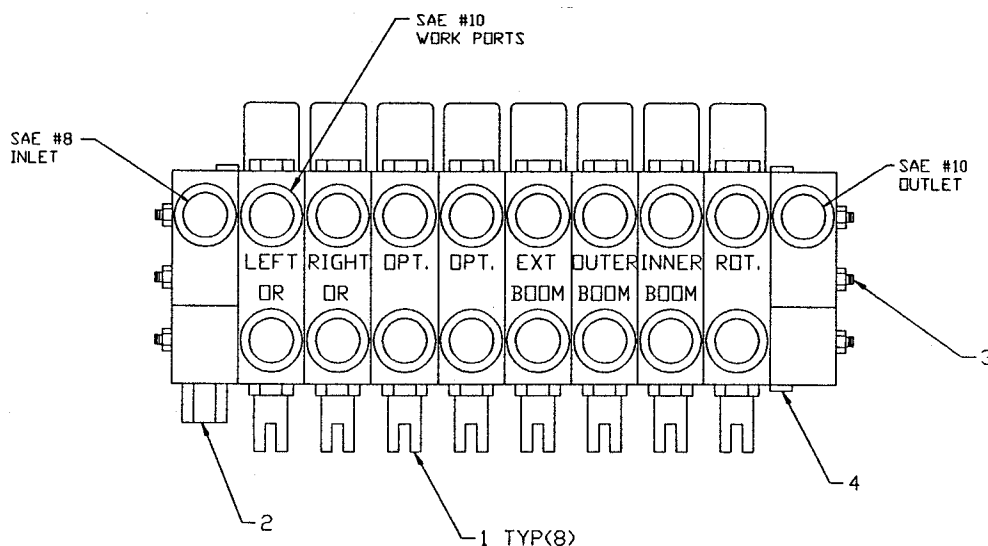

ITEM	PART NO.	DESCRIPTION	QTY
1.	73054490	TANDEM VALVE SECTION	8
2.	73054488	END CAP LH	1
3.	94731681	TIE ROD KIT	1
4.	73731576	END CAP RH	1
5.	7Q072019	O-RING (NOT SHOWN)	18
6.	7Q072021	O-RING (NOT SHOWN)	18


Figure D-22A. VALVEBANK (70731499)

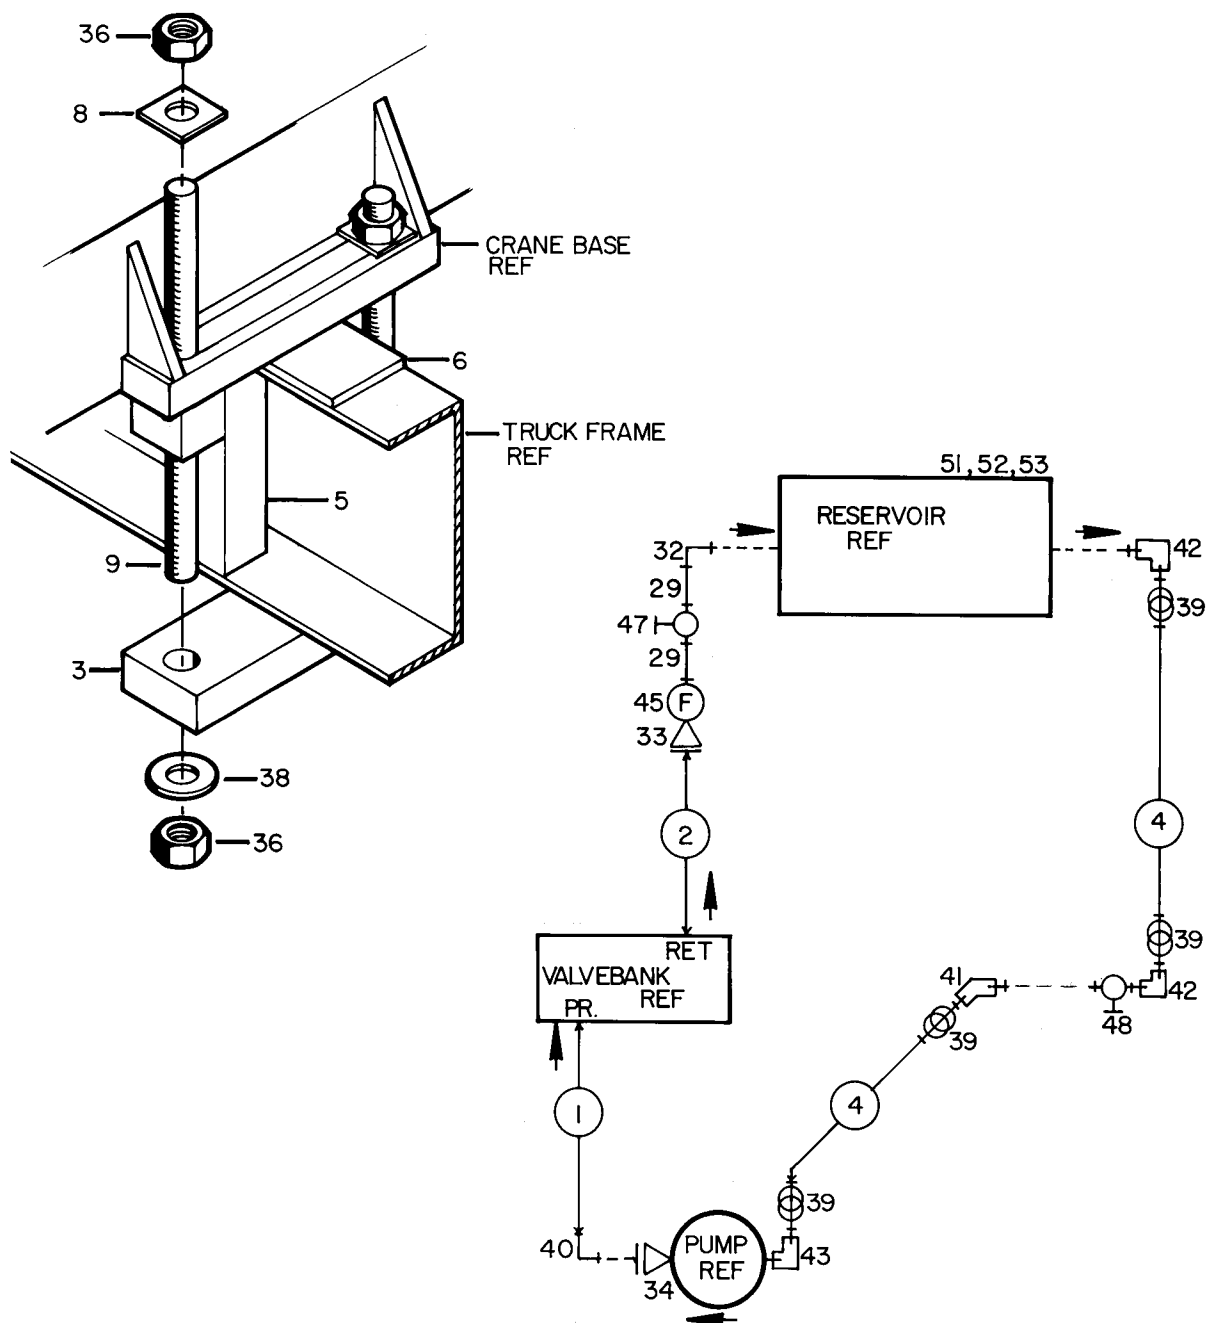

ITEM	PART NO.	DESCRIPTION	QTY
1.	51703939	HOSE ASM 1/2X96	1
2.	51704572	HOSE ASM 3/4X60	1
3.	60010354	CLAMP PLATE	4
4.	60035829	HOSE 1-1/4X48	2
5.	52706660	SUPPORT	4
6.	60103563	SPACER	2
8.	60107478	WASHER 1" SQUARE	8
9.	60107829	TIE-DOWN STUD 1X18	8
29.	72053141	NIPPLE 3/4NPT X CLOSE	2
32.	72053556	ELBOW 3/4NPT 90°	1
33.	72053676	ADAPTER 3/4MPT 1-1/16MJIC	1
34.	72532963	ADAPTER 1-5/16MSTR 3/4FSTR	1

ITEM	PART NO.	DESCRIPTION	QTY
36.	72062141	NUT 1" LOCK GR5	16
38.	72063066	WASHER 1" WRT	8
39.	72066516	HOSE CLAMP 1-1/4	4
40.	72053763	ELBOW 3/4MSTR 3/4MJIC 90°	1
41.	72531196	BARB NIPPLE 1-1/4NPT 45°	1
42.	72532346	BARB NIPPLE 1-1/4NPT 90°	2
43.	72532708	BARB NIPPLE 1-5/16NPT 1-1/4 90°	1
45.	73052000	RETURN FILTER	1
47.	73054129	GATE VALVE 3/4NPT	1
48.	73054130	GATE VALVE 1-1/4NPT	1
51.	72060046	CAP SCR 3/8-16X1 HH GR5	4REF
52.	72062003	WASHER 3/8 WRT	8REF
53.	72062103	NUT 3/8-16 LOCK	4REF


Figure D-23. INSTALLATION KIT (93704355)

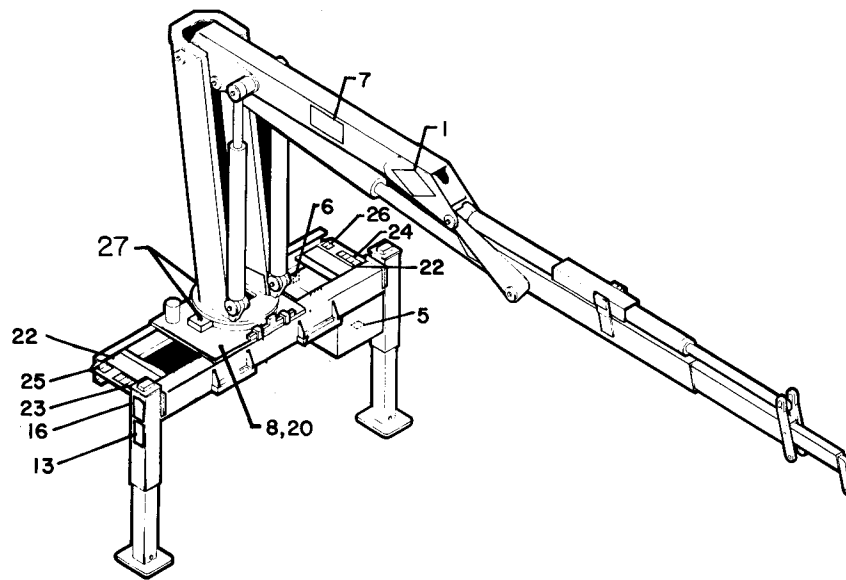

DECAL PLACEMENT	
ITEM NO.	LOCATION
2,10,11,12,15, 17,18,19,21	At or near the normal operating stations.
13,16	One on each outrigger.
14	One on each side of the carrier vehicle.
9	At the turntable grease zerk.
3,4	At all grease zerks.
6	On the reservoir, at the return line.
5	On the reservoir, at the suction line.


Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1.	70029251	Placard, IMT Diamond	1	14.	70392865	Decal, Danger electrocution	4
2.	70391583	Decal, Setup/stow instruction	2	15.	70392866	Decal, Danger oper. cond.	2
3.	70391612	Decal, Grease weekly, Lt.	6	16.	70392867	Decal, Danger outrgr. move	2
4.	70391613	Decal, Grease weekly, Rt.	6	17.	70392888	Decal, Danger oper. restrict.	2
5.	70392108	Decal, Suction line	1	18.	70392890	Decal, Danger stow/unfold	2
6.	70392109	Decal, Return line	1	19.	70392891	Decal, Danger driveline	2
7.	70392209	Decal, 4825 identification	2	20.	70392982	Decal, Contact IMT	1
8.	70392213	Decal, Caution wash/wax	1	21.	71039134	Decal, Caution oil level	2
9.	70392524	Decal, Rotate crane/grease	1	22.	71392254	Placard, Capacity, 4825	2
10.	70392813	Decal, Danger electrocution	2	23.	71392255	Decal, 4825 control, Rt.	1
11.	70392814	Decal, Danger operator	2	24.	71392256	Decal, 4825 control, Lt.	1
12.	70392815	Decal, Danger operation	2	25.	71392257	Decal, Outtrgr., Pwr, dn., Rt.	1
13.	70392864	Decal, Danger outrgr. std. clr.	2	26.	71392258	Decal, Outtrgr., Pwr. dn., Lt.	1
				27.	71392365	Decal, Alignment crane rot.	1

Figure D-24. Decal Kit (Part Number 95708693)

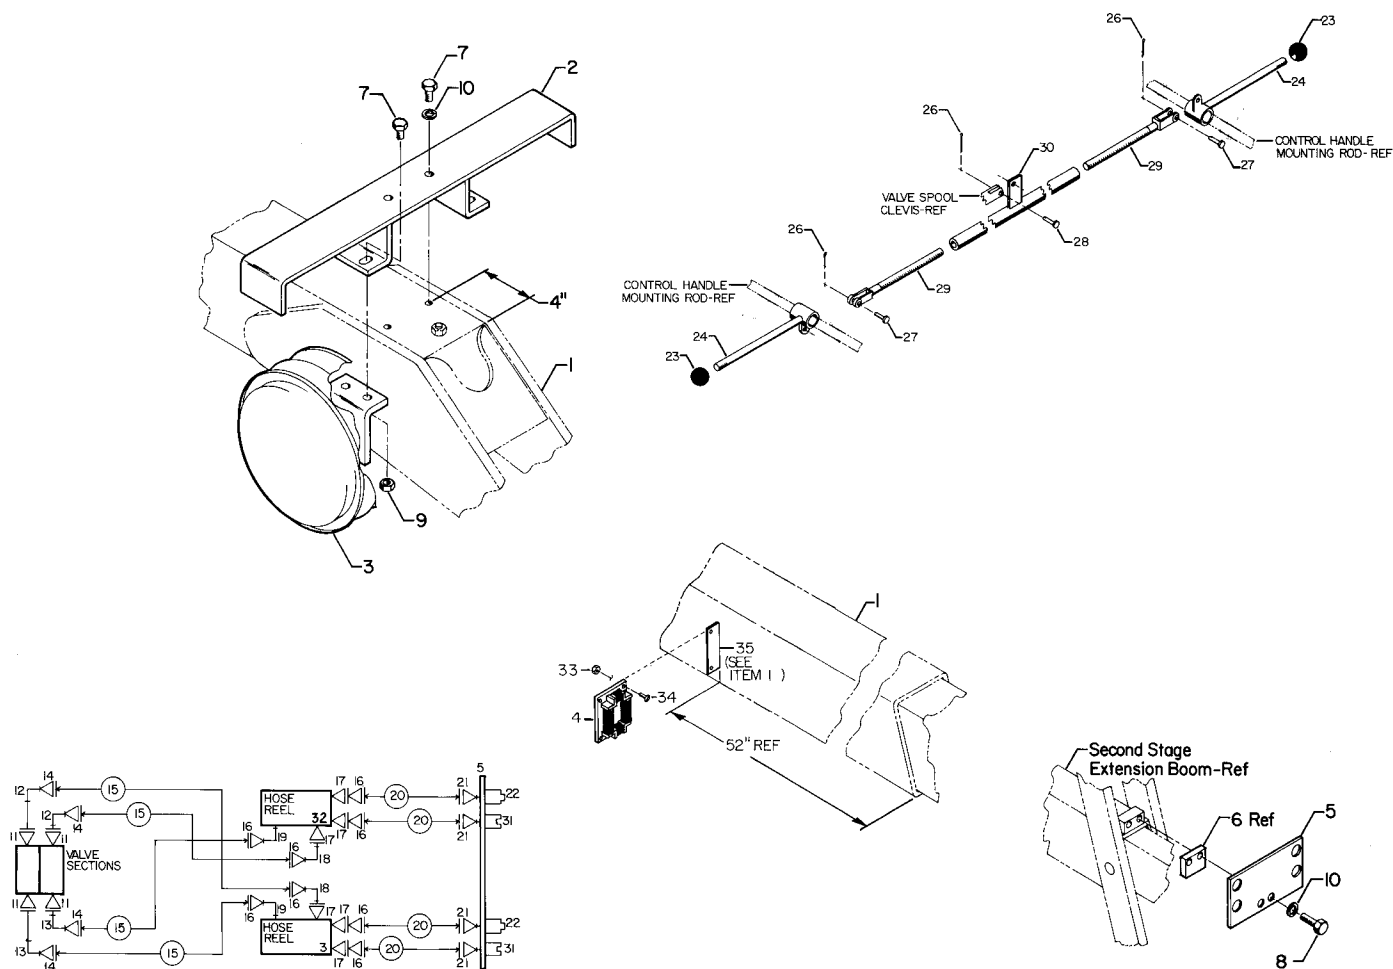

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1.				17.	72532358	Adapter; 3/4-16 str. thd.(m) x 3/4-16 JIC(m)	6
2.	52704578	Bracket	1	18.	72532658	Elbow, 90 deg swivel; 3/4-16 JIC(m) x 3/4-16 JIC(m)	2
3.	70731403	Reel, hose, right hand	1	19.	72053763	Elbow, 90 deg.; 3/4-16 str. thd.(m) x 3/4-16 JIC(m)	2
4.	70731371	Guide	2	20.	51704028	Hose; 1/4" ID x 276" lg.	4
5.	60107590	Plate, bulkhead	1	21.	72053499	Adapter; 1/4" npt(m) x 7/16-20 JIC(m)	4
6.	60107294	Stop, extension	Ref	22.	72053541	Nipple, disconnect; 1/4" npt (f)	2
7.	72060091	Screw; 1/2-13 x 1" hex hd.	6	23.	71039096	Knob, black plastic	4
8.	72060093	Screw; 1/2-13 x 1-1/2" hex hd.	2	24.	70029451	Handle, control	4
9.	72062080	Nut, lock, 1/2-13	4	25.			
10.	72063053	Washer, lock; 1/2"	4	26.	72066168	Pin, cotter; 3/32" x 3/4" lg.	6
11.	72532722	Adapter; 7/8-14 str. thd.(m) x 9/16-18 str. thd.(f)	4	27.	72066338	Pin, clevis; 5/16" x 1"	4
12.	72053760	Elbow, 90 deg.; 9/16-18 str. thd.(m) x 9/16-18 JIC(m)	2	28.	72066337	Pin, valve bank; special	2
13.	72532700	Elbow, extra long 90 deg.; 9/16-18 str. thd.(m) x 9/16-19 JIC(m)	2	29.	52704745	Rod, male control	4
14.	72532707	Adapter; 7/16-20 JIC(m) x 9/16-18 JIC(f)	4	30.	52704744	Rod, female control	2
15.	51706161	Hose; 1/4" ID x 180" lg.	4	31.	72053539	Coupler, quick disconnect	2
16.	72532665	Adapter; 7/16-20 JIC(m) x 3/4 JIC(f)	8	32.	70731515	Reel, hose, left hand	1
				33.	72062106	Nut, Self lock, 10-24	4
				34.	72060638	Screw, 10-24 x 1	4
				35.	60112973	Plate, Hose guide mounting	2
				36.	99900011	Boom Modification Drawing	1


Figure D-25. Hose Reel Kit (Part Number 31704590)

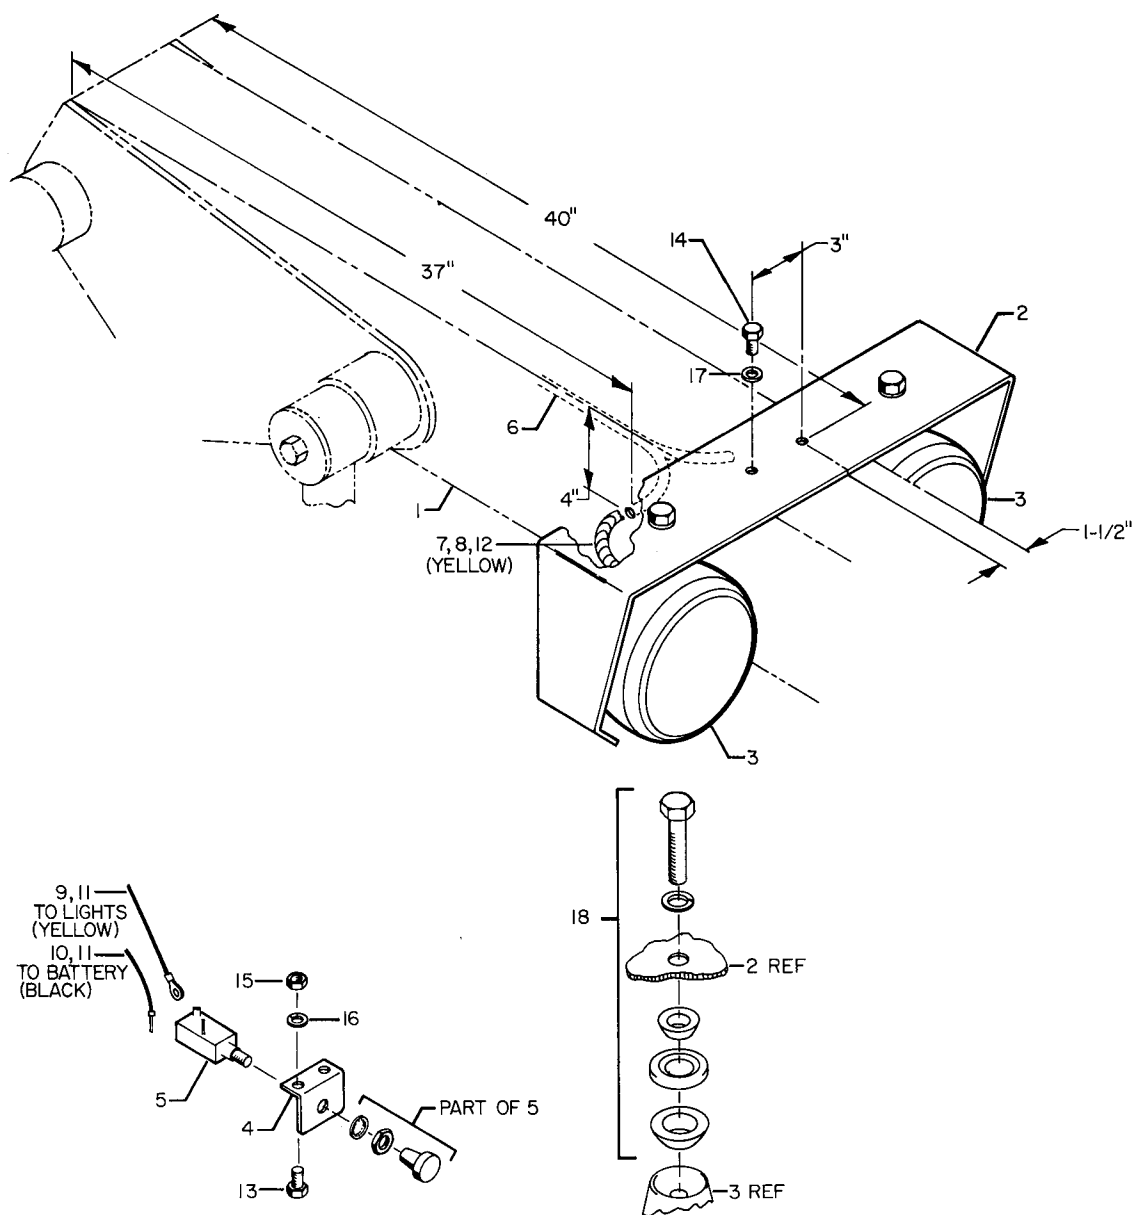

ITEM	PART NO.	DESCRIPTION	QTY
1.	99900019	BOOM MODIFICATION DRAWING	1
2.	60107762	LIGHT GUARD	1
3.	77040281	FLOOD LIGHT 12 VDC	2
4.	60103535	SWITCH BRACKET	1
5.	77041014	PUSH/PULL SWITCH	1
6.	60030048	LOOM 5/16 ID X 240	1
7.	60030049	SPIRAL WRAP 10" CLEAR	2
8.	60045055	WIRE 14 GA X 60 YEL	2
9.	60045054	WIRE 14 GA X 20 YEL	1

ITEM	PART NO.	DESCRIPTION	QTY
10.	60045056	WIRE 14 GA X 36" BLK	1
11.	77040000	TERMINAL RING	2
12.	77040048	BUTT CONNECTOR	2
13.	72060000	CAP SCR 1/4-20X1/2 HHGR5	2
14.	72060046	CAP SCR 3/8-16X1 HHGR5	2
15.	72062000	NUT 1/4-20	2
16.	72063049	WASHER 1/4 LOCK	2
17.	72063051	WASHER 3/8 LOCK	2
18.	77040280	LIGHT MOUNTING KIT	2REF

Figure D-26. LIGHT KIT (31704781)

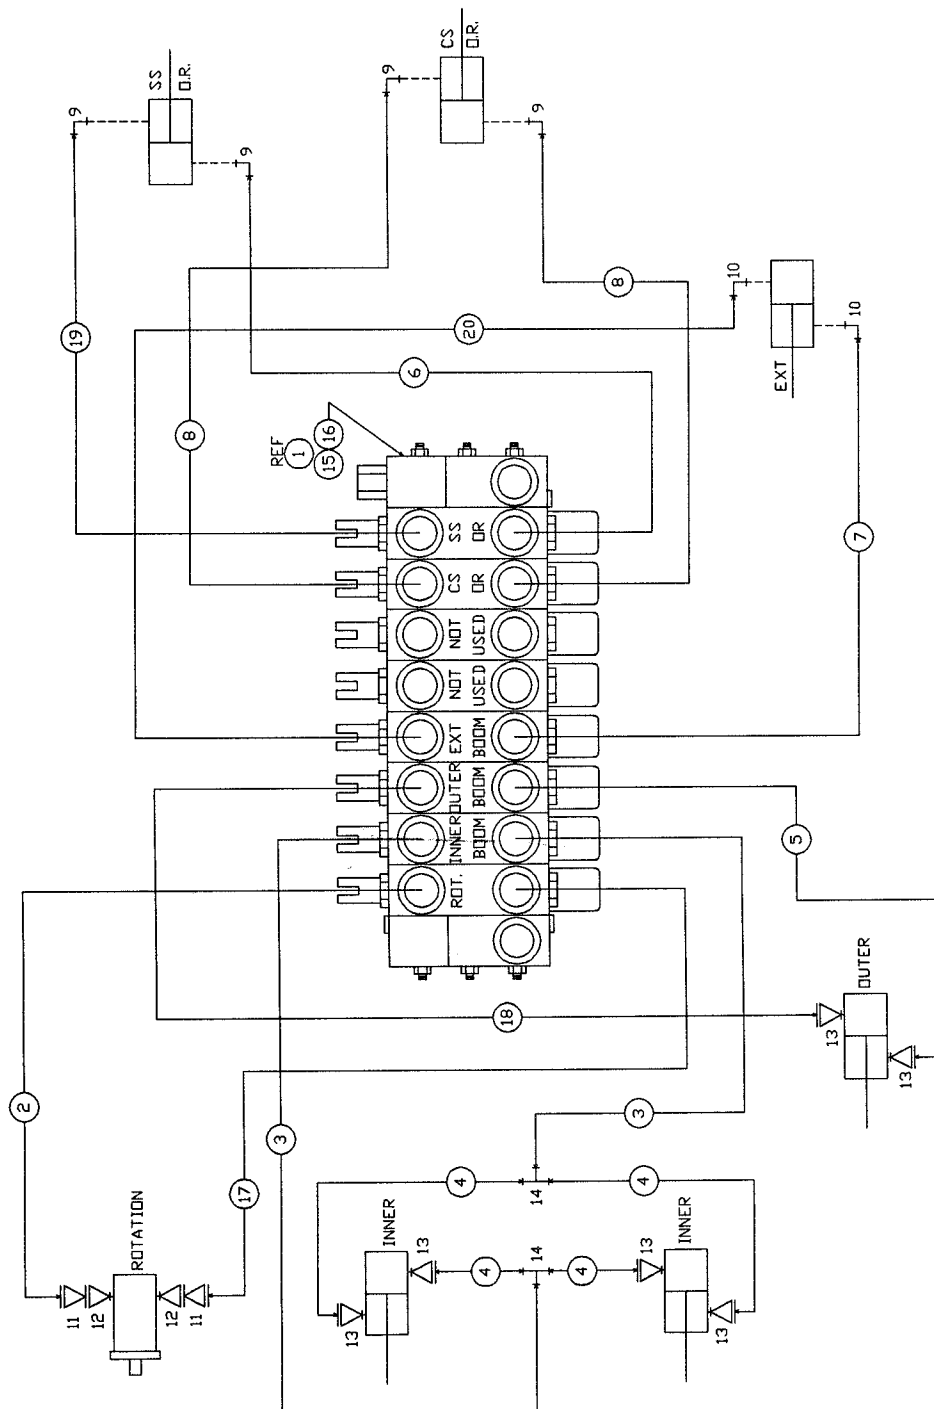

ITEM	PART NO.	DESCRIPTION	QTY
1.	51710944	VALVEBANK ASM	1 REF
2.	51705893	HOSE ASM 1/4X46 FF	1
3.	51704579	HOSE ASM 3/8X30 FF	2
4.	51704580	HOSE ASM 3/8X23 FF	4
5.	51704581	HOSE ASM 3/8X108 FF	2
6.	51705892	HOSE ASM 3/8X102 FF	1
7.	51704582	HOSE ASM 3/8X209 FF	1
8.	51704807	HOSE ASM 3/8X80 FF	2
9.	72532700	ELBOW 9/16MSTR 9/16MJIC XLG	4
10.	72532740	ELBOW 3/4MSTR 3/4MJIC 90° SW	2

ITEM	PART NO.	DESCRIPTION	QTY
11.	72532353	ADAPTER 9/16MSTR 7/16MJIC	2
12.	72532722	ADAPTER 7/8MSTR 9/16FSTR	2
13.	72532358	ADAPTER 3/4MSTR 3/4MJIC	6
14.	72531205	TEE 3/4-16MJIC 1/2TUBE	2
15.	72062103	NUT 3/8-16 LOCK	3
16.	72060048	CAP SCR 3/8-16X1-1/2 HHGR5	3
17.	51705894	HOSE ASM 1/4X48 FF	1
19.	51705895	HOSE ASM 3/8X96 FF	1
20.	51704583	HOSE ASM 1/2X209 FF	1

Figure D-26. HYDRAULIC KIT (91704356)

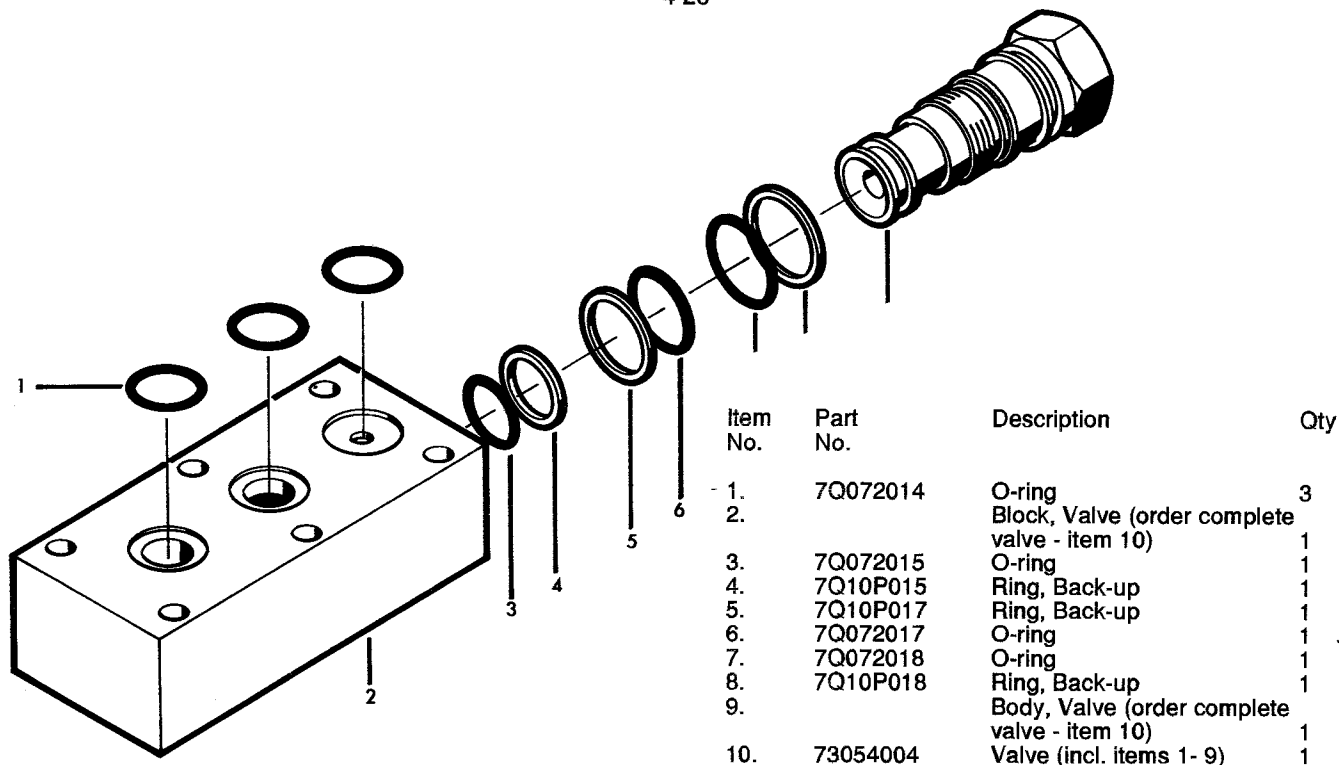


Figure D-28. Locking /Holding Valve (Part Number 73054004)

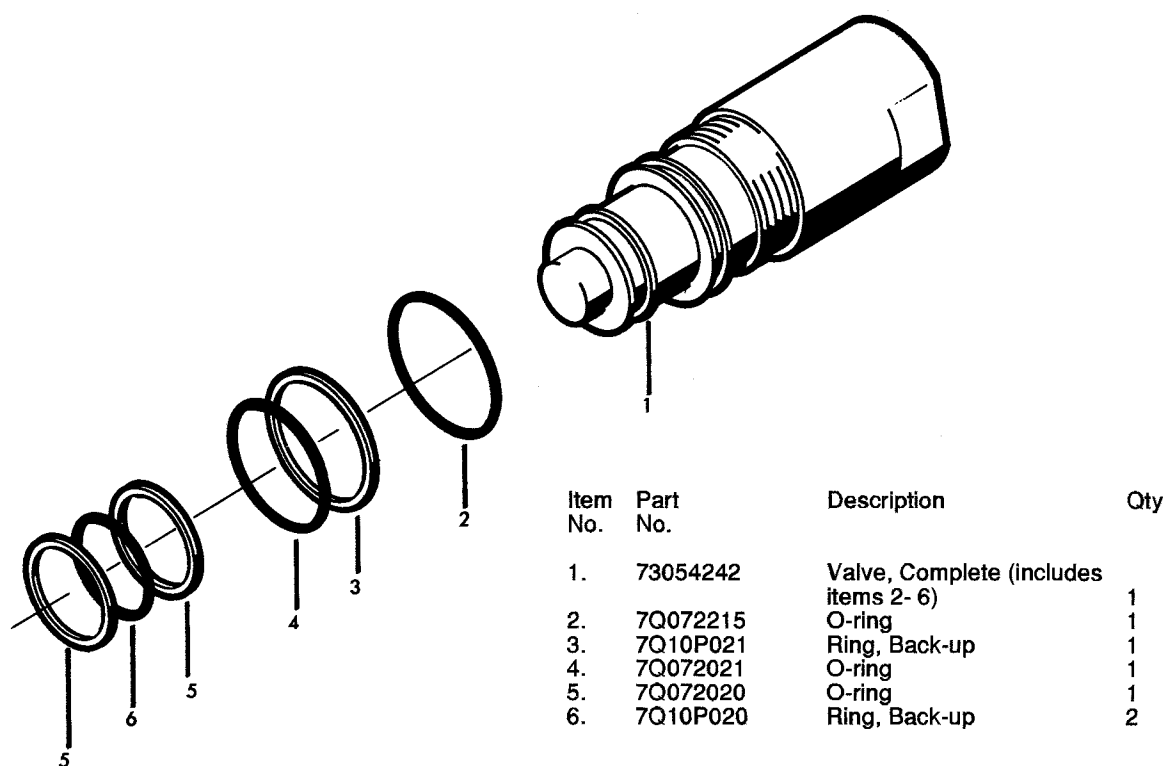
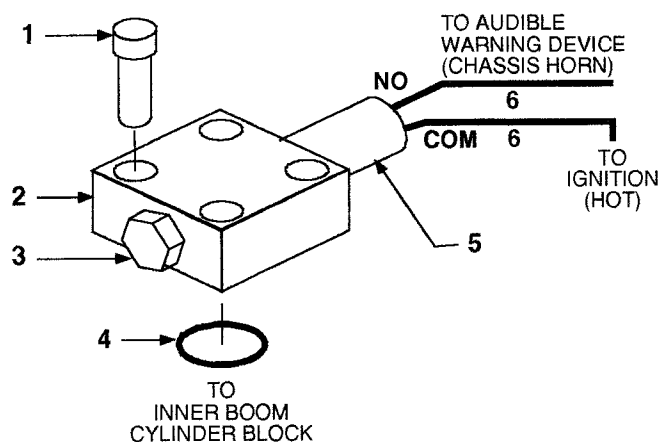



Figure D-29. 25-GPM Counter-Balance /Holding Valve (Part Number 73054242)

**NOTE**

This capacity alert system consists of a pressure switch mounted on the lift side of the inner boom lift cylinder which senses hydraulic pressure. It is to be connected electrically (by the customer) to an audible warning device such as the truck chassis horn, using 14-gauge wire.


ITEM	PART NO.	DESCRIPTION	QTY
1.	72060731	CAP SCR 5/16-18X3/4 SH	4
2.	60025221	MANIFOLD	1
3.	72532140	PLUG 9/16-18 STR THD HH	1
4.	7Q072015	O-RING	1
5.	77041283	PRESSURE SWITCH	1
6.	89044188	WIRE-14GA (Customer Supplied)	REF
7.	99900118	INSTALLATION DWG	1

Figure D-29A. CAPACITY ALERT KIT - AUDIBLE (31705698)

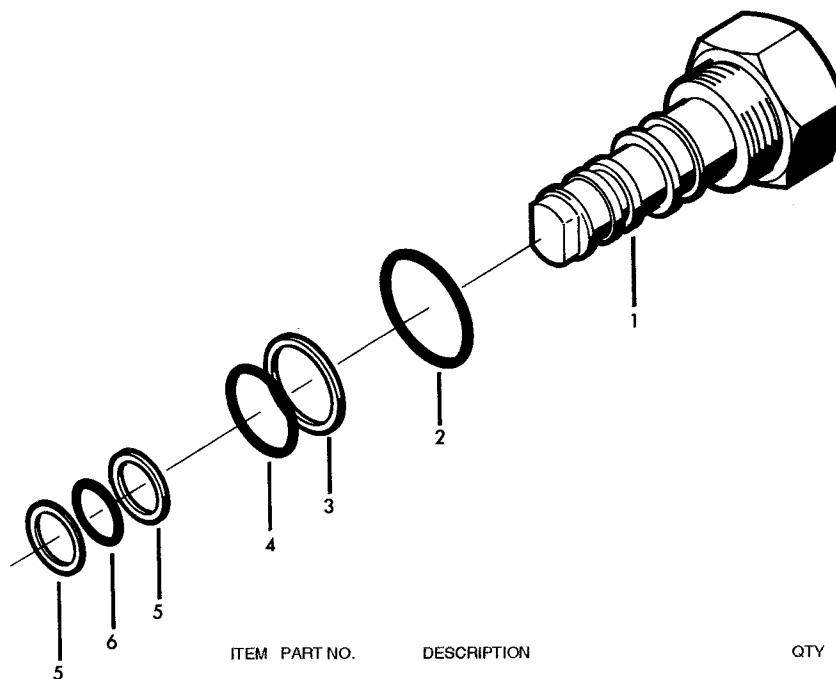


ITEM	PART NO.	DESCRIPTION	QTY
1.	73054304	VALVE, COMPLETE (INCL. ITEMS 2 THRU 6)	1
2.	7Q073912	O-RING	1
3.	7Q10P018	RING, BACK-UP	1
4.	7Q072018	O-RING	1
5.	7Q10P015	RING, BACK-UP	2
6.	7Q072016	O-RING	1

Figure D-30. 10-GPM COUNTER-BALANCE/ HOLDING VALVE (73054304)

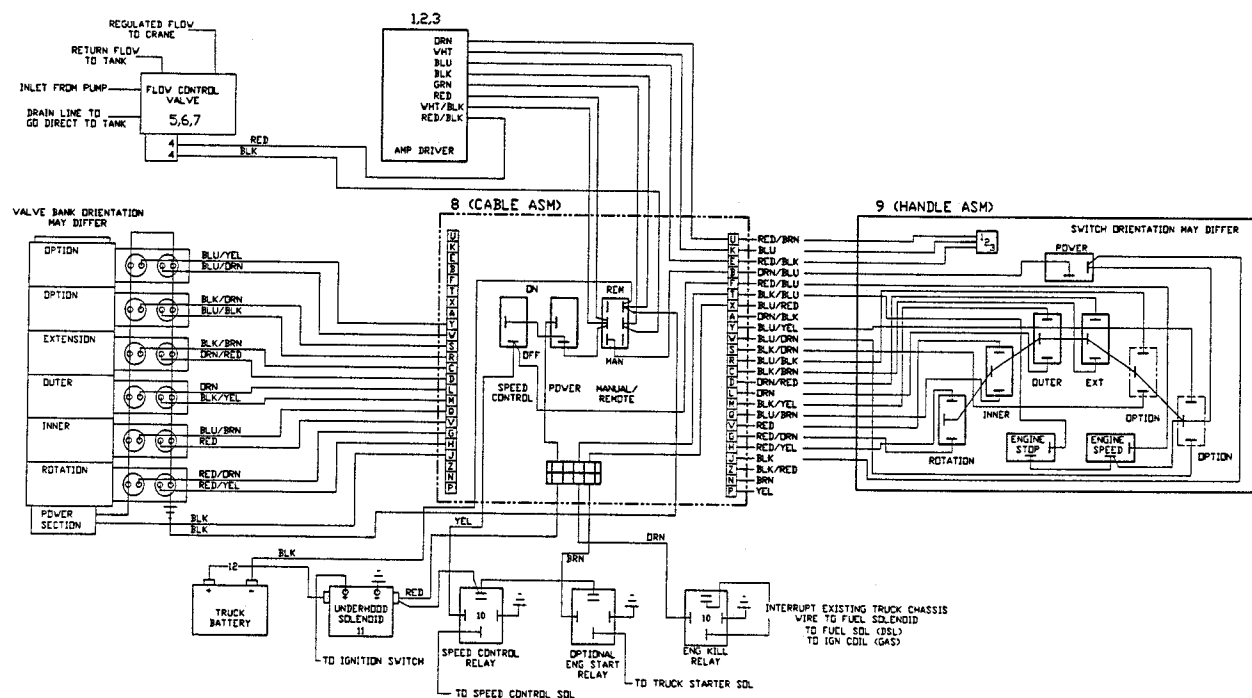

ITEM	PART NO.	DESCRIPTION	QTY
1.	77041390	AMP DRIVER	1
2.	72060004	CAP SCR 1/4-20X1 HH GR5	4
3.	72062104	NUT 1/4-20 LOCK	4
4.	77040186	TERMINAL 1/4 FSLPON 16-14GA	2
5.	73054584	PROPORTIONAL VALVE 10GPM	1
6.	72060051	CAP SCR 3/8-16X2-1/4 HH GR5	2
7.	72062103	NUT 3/8-16 LOCK	2
8.		CABLE ASM-JIC BOX	1
9.		HANDLE ASM	1
10.	77041251	RELAY	2
11.	77041237	SOLENOID 12V 150A	1
12.	51704784	CABLE ASM #1WIRE X 6"	1

Figure D-31. PROPORTIONAL REMOTE CONTROL DIAGRAM (Ref. 99900197)

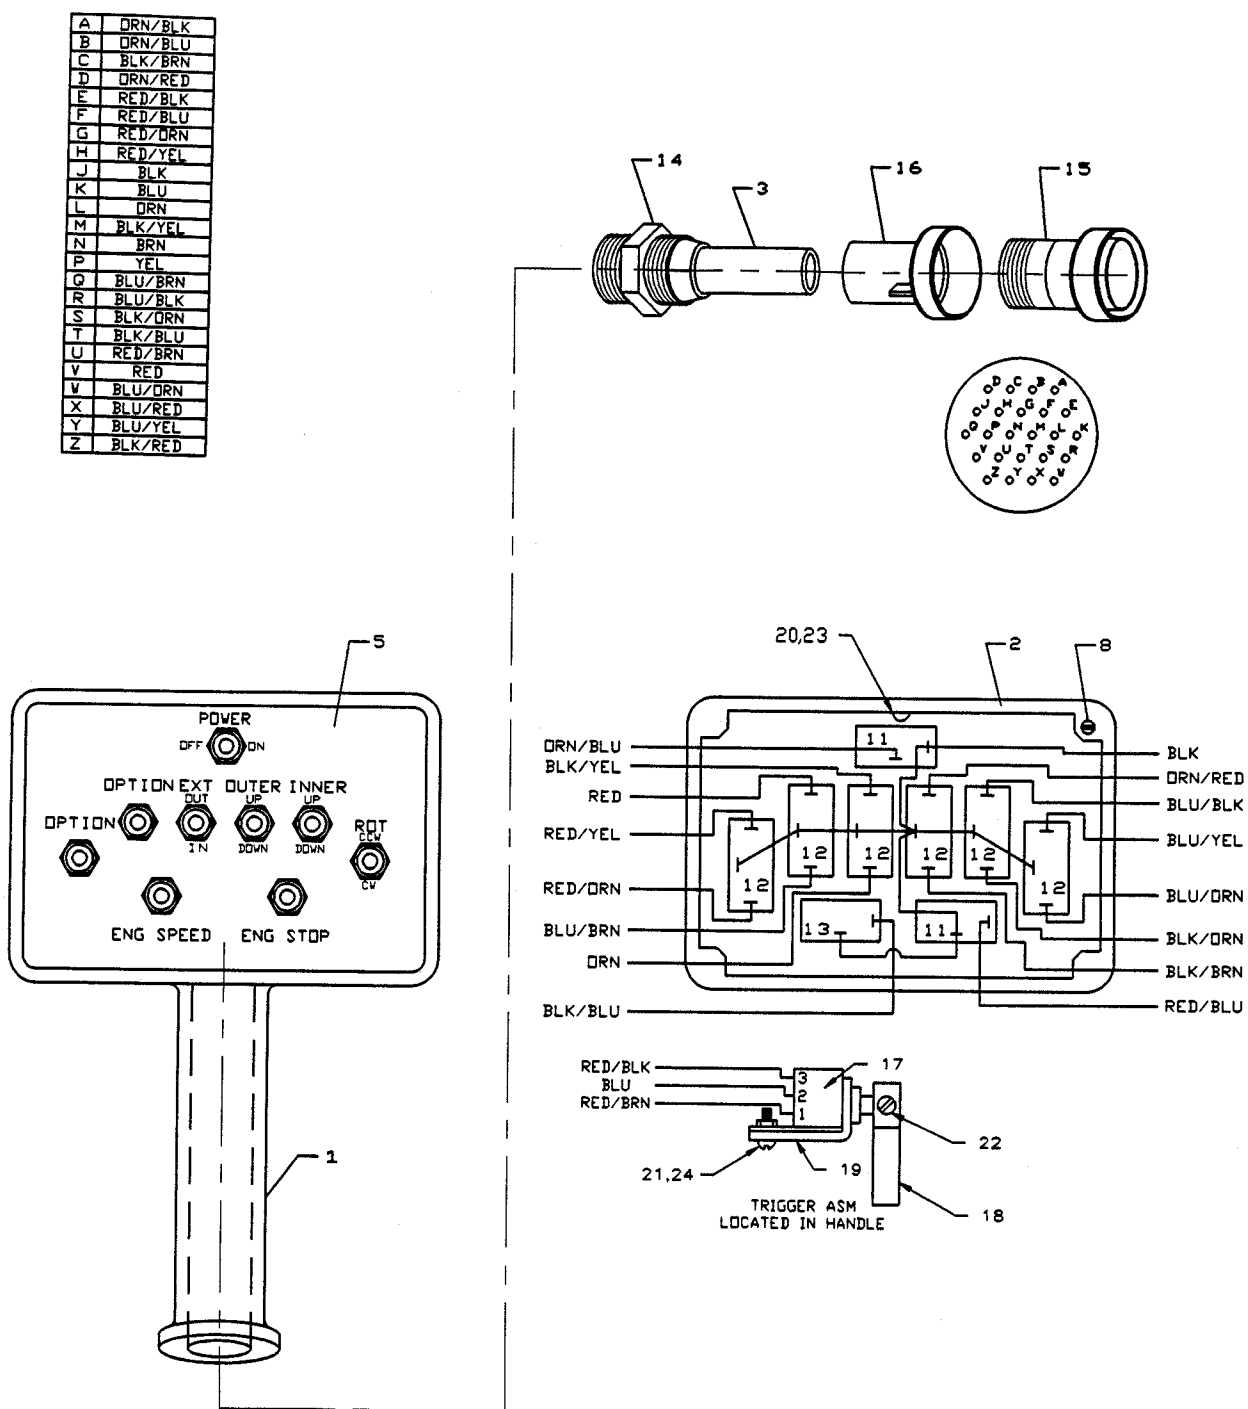

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1.	60111140	HANDLE	1	13.	77041347	TOGGLE SWITCH MOMENTARY	1
2.	70034306	BACK	1	14.	77044196	STRAIN RELIEF 3/4	1
3.	89044100	CABLE 18GA/24WIRE	45 FT	15.	77044146	CONNECTOR 16PIN	1
4.	89044214	WIRE 18GA GRN	2.33 FT	16.	77044147	CABLE CLAMP	1
5.	70392703	DECAL-REMOTE CONTROL	1	17.	51708800	POTENTIOMETER ASM	1
6.	70392862	DECAL-DANGER RC ELECTRO	1	18.	60111141	TRIGGER	1
7.	70029119	SERIAL NUMBER PLACARD	1	19.	60111142	MOUNTING BRACKET	1
8.	72061009	SHT MTL SCR #6X3/4 PH	4	20.	70143223	SPRING	1
9.	72066340	POP RIVET 1/8	2	21.	72060636	MACH SCR #10-24X3/4	2
10.	77040186	TERMINAL 1/4 FSLPON 16-14GA	24	22.	72060669	CAP SCR #10-32X5/8	1
11.	77041345	TOGGLE SWITCH ST	2	23.	72061000	SHT MTL SCR #6X1/2	1
12.	77041346	TOGGLE SWITCH DT	6	24.	72062106	NUT #10-24 HEX	2

Figure D-32. REMOTE HANDLE ASM-6F PROPORTIONAL W/SPD (51710014)

ITEM	PART NO.	DESCRIPTION	QTY
1.	73054432	VALVE SECT 4-WAY SAE#8	2
2.	73054468	VALVE SECT 4-WAY SAE#8	4
3.	73054502	VALVE SECT UTILITY	1
4.	73054442	END COVER RH	1
5.	73073022	CONVERSION PLUG	1
6.	73731424	END COVER LH 2300PSI	1
7.	73054643	RELIEF VALVE 2300PSI	1
8.	73054007	RELIEF RC NON-ADJ 1800PSI	2
9.	73054400	RELIEF RC NON-ADJ 2300PSI	1
10.	73054010	LOAD CHECK PLUG ASM	9
11.	73014596	STUD 3/8-24X15-1/4	3
12.	72062037	NUT 3/8-24 HEX	6
13.	70142402	ORIFICE PLATE	3
14.	70142403	ORIFICE SPRING	6
15.	51393494	O-RING KIT (SERVICE PART)	REF
16.	7Q072117	O-RING .81X1X.09	16
17.	7Q072119	O-RING .94X1.12X.09	16
18.	51705093	TUBE ASM "L"	1
19.	51705092	TUBE ASM "U"	1

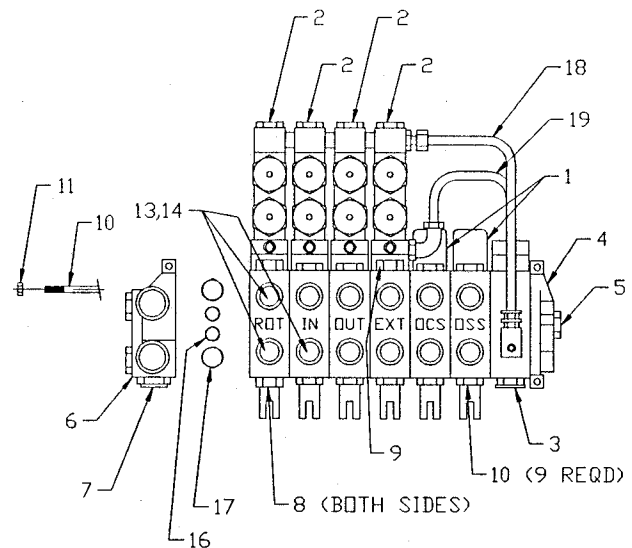


Figure D-33. VALVEBANK - 4 REMOTE/2 MANUAL (51705094)

ITEM	PART NO.	DESCRIPTION	QTY
1.	73054468	VALVE SECT 4-WAY SAE#8	5
2.	73054502	VALVE SECT UTILITY	1
3.	73054442	END COVER RH	1
4.	73073022	CONVERSION PLUG	1
5.	73731424	END COVER LH 2300PSI	1
6.	73054010	LOAD CHECK PLUG ASM	6
7.	73054643	RELIEF VALVE 2300PSI	1
8.	73054400	RELIEF RC NON-ADJ 2300PSI	2
9.	73054007	RELIEF RC NON-ADJ 1800PSI	2
10.	73014595	STUD 3/8-24X13-1/2	3
11.	72062037	NUT 3/8-24 HEX	6
12.	70142402	ORIFICE PLATE	3
13.	70142403	ORIFICE SPRING	3
14.	51393494	O-RING KIT (SERVICE PART)	REF
15.	7Q072117	O-RING .81X1X.09	14
16.	7Q072119	O-RING .94X1.12X.09	14




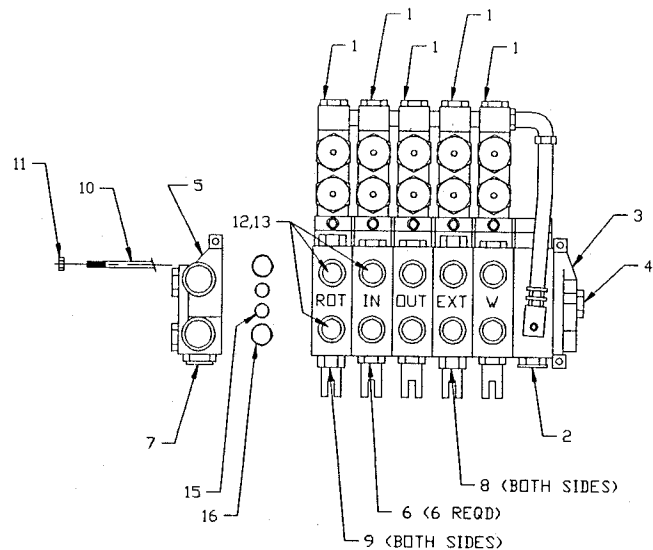


Figure D-34. VALVEBANK - 5 REMOTE (51705974)

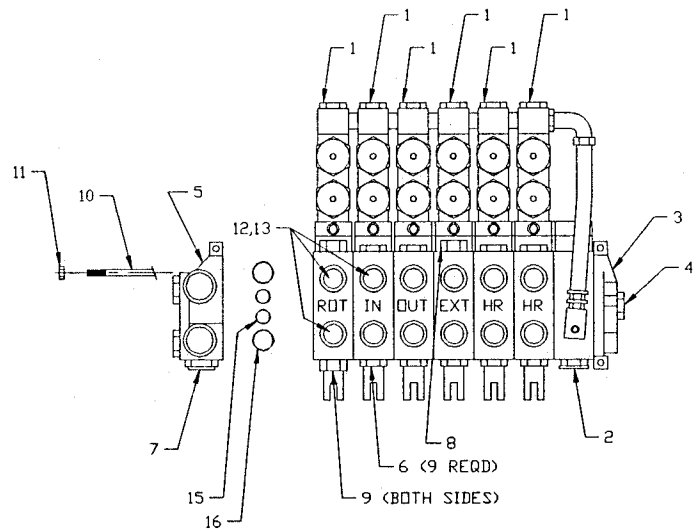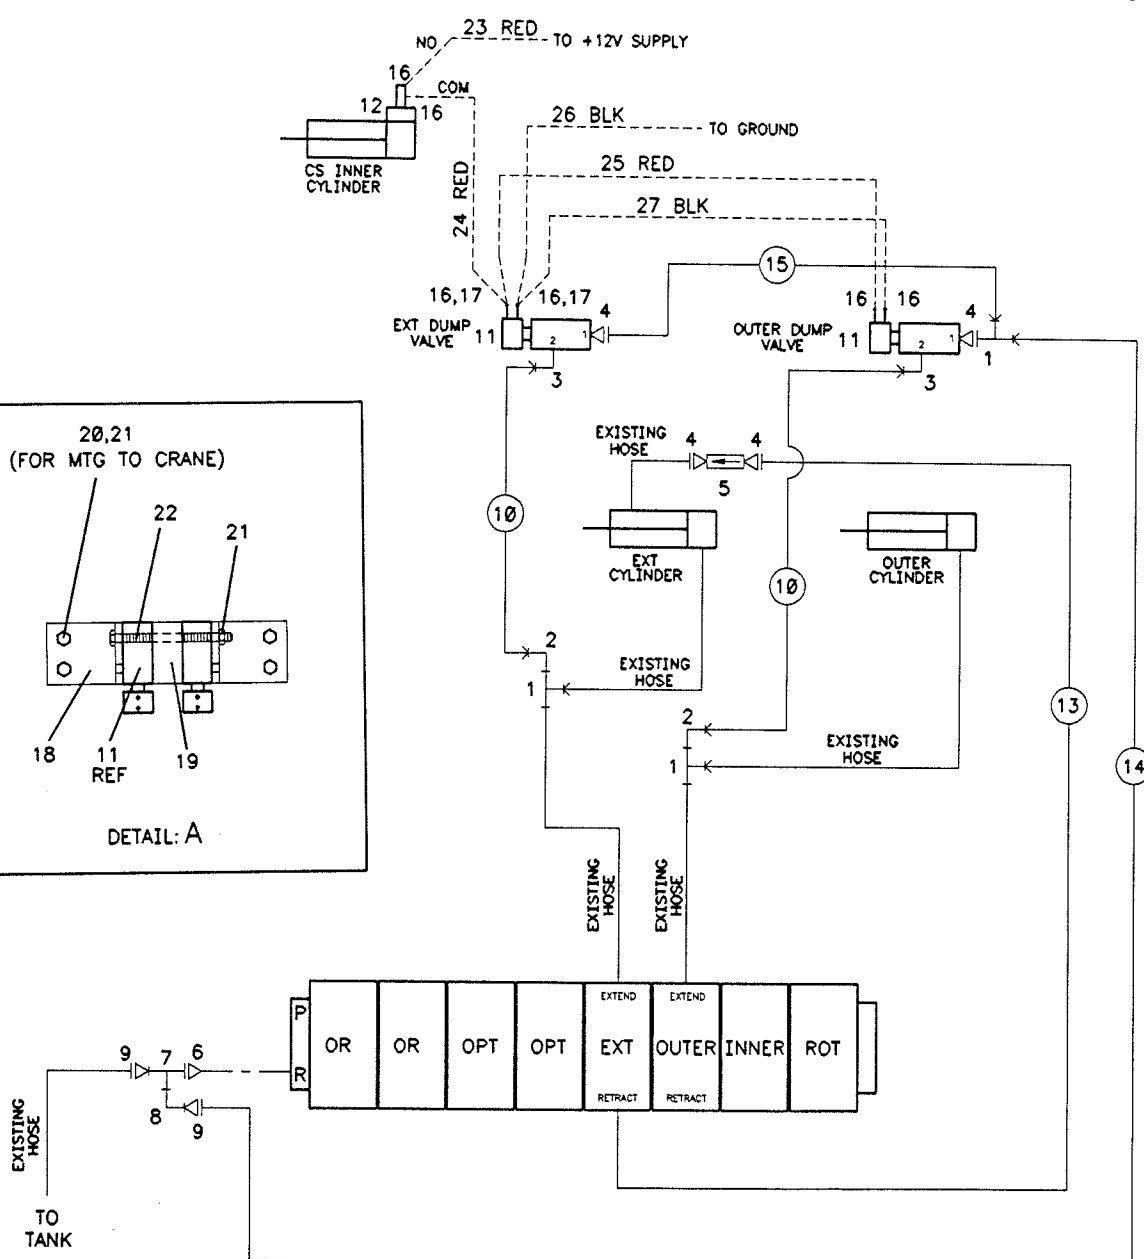

ITEM	PART NO.	DESCRIPTION	QTY
1.	73054468	VALVE SECT 4-WAY SAE#8	6
2.	73054502	VALVE SECT UTILITY	1
3.	73054442	END COVER RH	1
4.	73073022	CONVERSION PLUG	1
5.	73731424	END COVER LH 2300PSI	1
6.	73054010	LOAD CHECK PLUG ASM	9
7.	73054643	RELIEF VALVE 2300PSI	1
8.	73054400	RELIEF RC NON-ADJ 2300PSI	1
9.	73054007	RELIEF RC NON-ADJ 1800PSI	2
10.	73014596	STUD 3/8-24X15-1/4	3
11.	72062037	NUT 3/8-24 HEX	6
12.	70142402	ORIFICE PLATE	3
13.	70142403	ORIFICE SPRING	3
14.	51393494	O-RING KIT (SERVICE PART)	REF
15.	7Q072117	O-RING .81X1X.09	16
16.	7Q072119	O-RING .94X1.12X.09	16

Figure D-35. VALVEBANK - 6 REMOTE (51705972)

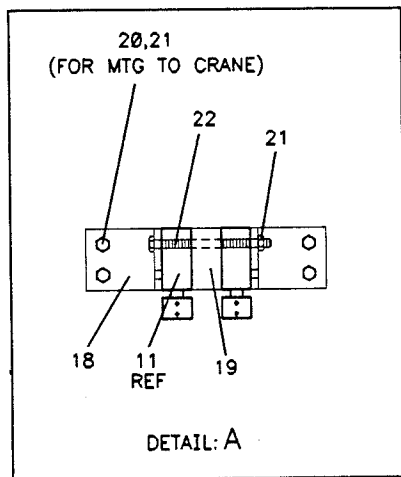

ITEM	PART NO.	DESCRIPTION	QTY
1.	72532657	TEE 3/4JIC SWVL NUT RUN	3
2.	72532658	ELBOW #8MJIC #8FJIC	2
3.	72053763	ELBOW #8MSTR #8MJIC 90°	2
4.	72532358	ADAPTER #8MSTR #8MJIC	4
5.	73054426	RELIEF VALVE - ADJ	1
6.	72053676	ADAPTER 3/4MPT #12MJIC	1
7.	72532950	TEE 1-1/16JIC SWVL NUT RUN	1
8.	72532696	ELBOW #12MJIC #12FJIC SWVL	1
9.	72532972	ADAPTER #8MJIC #12FJIC	2
10.	51703863	HOSE ASM 3/8X14 FF	2
11.	73054576	SOLENOID VALVE	2
12.	31705698	KIT-CAPACITY ALERT (ELECT)	1
13.	51706239	HOSE ASM 1/2X5 FF	1
14.	51704914	HOSE ASM 3/8X60 FF	1
15.	51703701	HOSE ASM 3/8X10 FF	1
16.	77040186	TERM-FSLPON 1/4TAB 16-14GA	6
17.	77040282	TERM-PIGBAC 1/4TAB 16-14GA	2
18.	60250259	MTG ANGLE-DUMP VALVE	2
19.	60250260	MTG SPACER-DUMP VALVE	1
20.	72060004	CAP SCR 1/4-20X1 HH GR5	4
21.	72062104	NUT 1/4-20 LOCK	6
22.	72060017	CAP SCR 1/4-20X4-1/2 HH GR5	2
23.	89044232	WIRE 14GA RED X 180	1
24.	89044232	WIRE 14GA RED X 120	1
25.	89044232	WIRE 14GA RED X 6	1
26.	89044274	WIRE 14GA BLK X 60	1
27.	89044274	WIRE 14GA BLK X 6	1

NOTES:

1. FUNCTION OF SYSTEM IS SUCH THAT WHEN THE INNER CYLINDERS ARE OVERLOADED, THE PRESSURE SWITCH WILL ACTIVATE THE SOLENOID DUMP VALVE(S); THUS DUMPING OIL TO "TANK" INSTEAD OF THE OUTER CYLINDER "EXTEND", EXTENSION CYLINDER "EXTEND", OR WINCH "UP" FUNCTIONS WHICH WILL NOT ALLOW PRESSURE TO BUILD FOR THESE FUNCTIONS. THIS SYSTEM IS BASED ON THE FACT THAT THE OIL WILL TAKE THE PATH OF LEAST RESISTANCE.


2. THE FUNCTIONS THAT ARE SHUT DOWN, IF OVERLOADED, ARE THE FOLLOWING:

- A. OUTER BOOM "EXTEND"
B. EXTENSION CYLINDER "EXTEND"

3. INSTALL A RELIEF (PART NO. 73054426, 700PSI) IN LINE OF THE RETRACT SIDE OF THE EXTENSION CYLINDER TO CREATE BACK PRESSURE SO EXTENSION CYLINDER WILL NOT EXTEND WHEN THE DUMP SYSTEM IS ACTIVATED.

4. ITEMS 11, 18, 19, 20, 21 AND 22 SHOULD BE BOLTED TOGETHER BEFORE THEY ARE MOUNTED TO THE CRANE (SEE DETAIL A).

Figure D-36. OPTION-HYDRAULIC OVERLOAD KIT 2-FUNCTION (51710922)

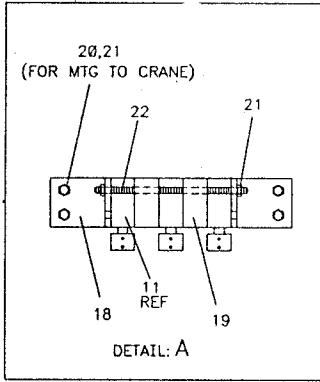


NOTES:

2. THE FUNCTIONS THAT ARE SHUT DOWN, IF OVERLOADED, ARE THE FOLLOWING:

- A. OUTER BOOM "EXTEND"
- B. EXTENSION CYLINDER "EXTEND"
- C. WINCH "UP"

4. ITEMS 11, 18, 19, 20, 21 AND 22 SHOULD BE BOLTED TOGETHER BEFORE THEY ARE MOUNTED TO THE CRANE (SEE DETAIL A).


Figure D-37. OPTION-HYDRAULIC OVERLOAD KIT 3-FUNCTION (51710923)

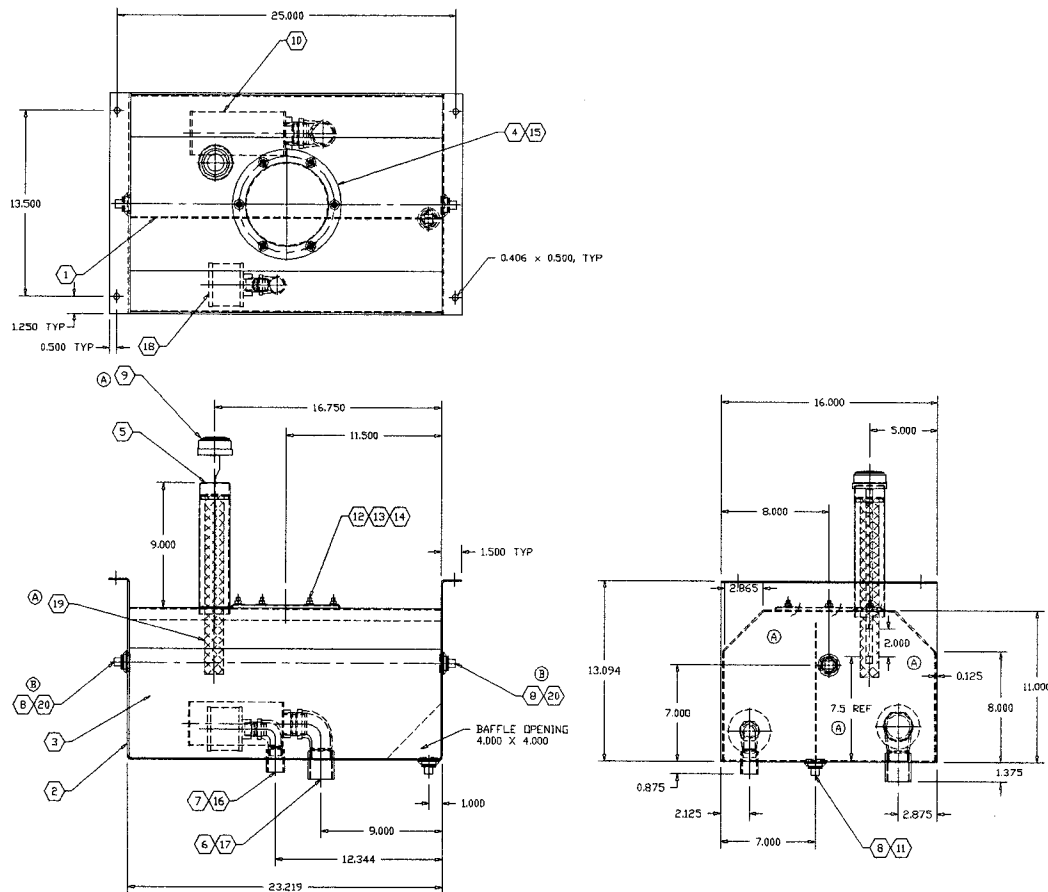

ITEM	PART NO.	DESCRIPTION	QTY
1.	*	BAFFLE	
2.	*	SHELL	
3.	*	SHELL	
4.	70144163	COVER	1
5.	*	FILLNECK ASM	
6.	*	PIPE ASM 1-1/4NPT	
7.	*	PIPE ASM	
8.	*	FLANGE	
9.	70732790	DIPSTICK ASM	1
10.	70144326	STRAINER 100MESH	1
11.	73052001	PLUG 3/4FPT SQHD MAGNETIC	1
12.	*	WELD STUD	
13.	*	NUT 1/4-28 HEX	6
14.	*	WASHER 1/4 FLAT	6
15.	76393565	O-RING	1
16.	*	PLASTIC CLOSURE	1
17.	*	PLASTIC CLOSURE	1
18.	70034410	DIFFUSER 3/4NPT	1
19.	70732793	SCREEN 100MESH	1
20.	*	PLUG 3/4FPT SQHD	2


* NOT AVAILABLE SEPARATELY.

Figure D-38. RESERVOIR ASSEMBLY (70732573)

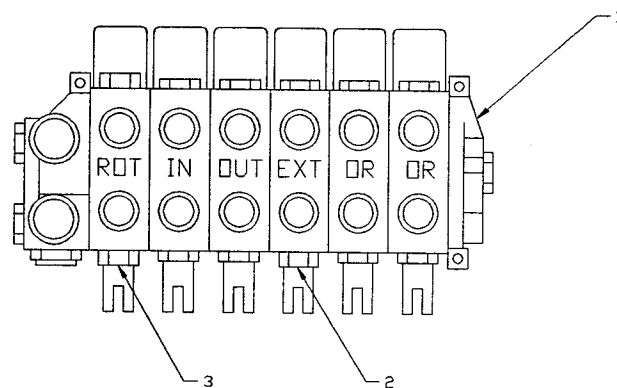


ITEM	PART NO.	DESCRIPTION	QTY
1.	73731386	VALVEBANK 6-SECT V20	1
2.	73054400	RELIEF 2300PSI NON-ADJ	1
3.	73054007	RELIEF 1800PSI NON-ADJ	1

Figure D-39. VALVEBANK ASSEMBLY 6-SECTION V20 (51705277)

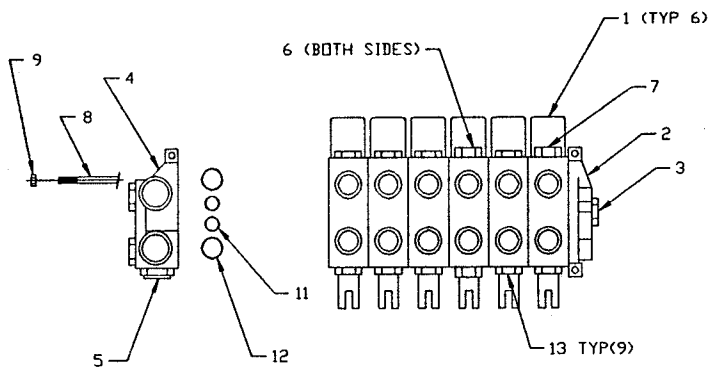


ITEM	PART NO.	DESCRIPTION	QTY
1.	73054432	VALVE SECT V20 4WAY	6
2.	73054442	END COVER RH	1
3.	73073022	CONVERSION PLUG	1
4.	73731424	END COVER LH	1
5.	73054643	RELIEF VALVE 2300PSI	1
6.	73054516	RELIEF 1300PSI NON-ADJ	2
7.	73054007	RELIEF 1800PSI NON-ADJ	1
8.	73014595	STUD 3/8X13-1/2	3
9.	72062037	NUT 3/8-24 HEX	6
10.	51393494	O-RING KIT	REF
11.	7Q072117	O-RING	14
12.	7Q072119	O-RING	14
13.	73054010	LOAD CHECK PLUG	9

Figure D-39A. VALVEBANK (73731386)

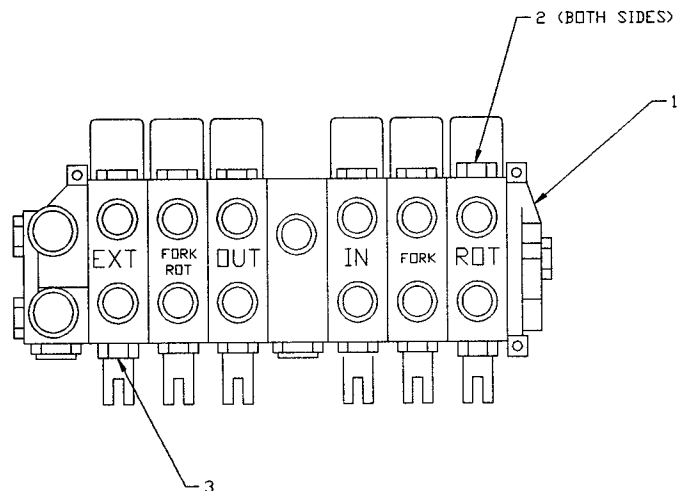


ITEM	PART NO.	DESCRIPTION	QTY
1.	51703623	VALVEBANK 6-SECT MID-INLET	1
2.	73054007	RELIEF 1800PSI NON-ADJ	2
3.	73054400	RELIEF 2300PSI NON-ADJ	1

Figure D-40. VALVEBANK ASSEMBLY 6-SECTION V20 CHAIR MOUNT (51709005)

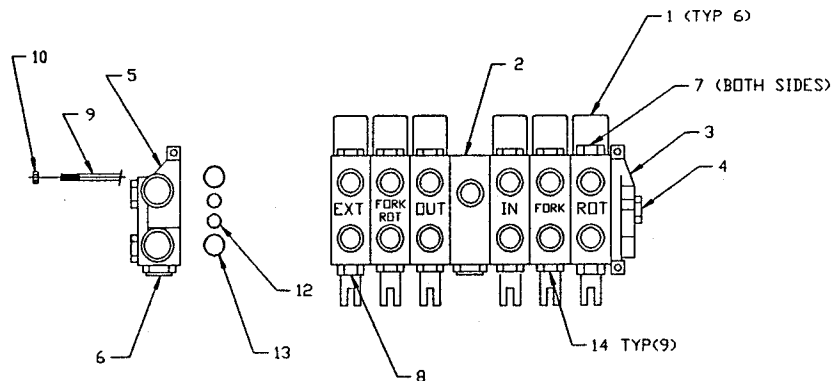

ITEM	PART NO.	DESCRIPTION	QTY
1.	73054432	VALVE SECT V20 4WAY SAE#8	6
2.	73054467	MID-INLET W/2300WH #12	1
3.	73054442	END COVER RH	1
4.	73073022	CONVERSION PLUG	1
5.	73731424	END COVER LH	1
6.	73054673	RELIEF VALVE	1
7.	73054516	RELIEF 1300PSI NON-ADJ	2
8.	73054007	RELIEF 1800PSI NON-ADJ	1
9.	73014596	STUD 3/8X15-1/4	3
10.	72062037	NUT 3/8-24 HEX	6
11.	51393494	O-RING KIT	REF
12.	7Q072117	O-RING	16
13.	7Q072119	O-RING	16
14.	73054010	LOAD CHECK PLUG	9


Figure D-40A. VALVEBANK (51703623)

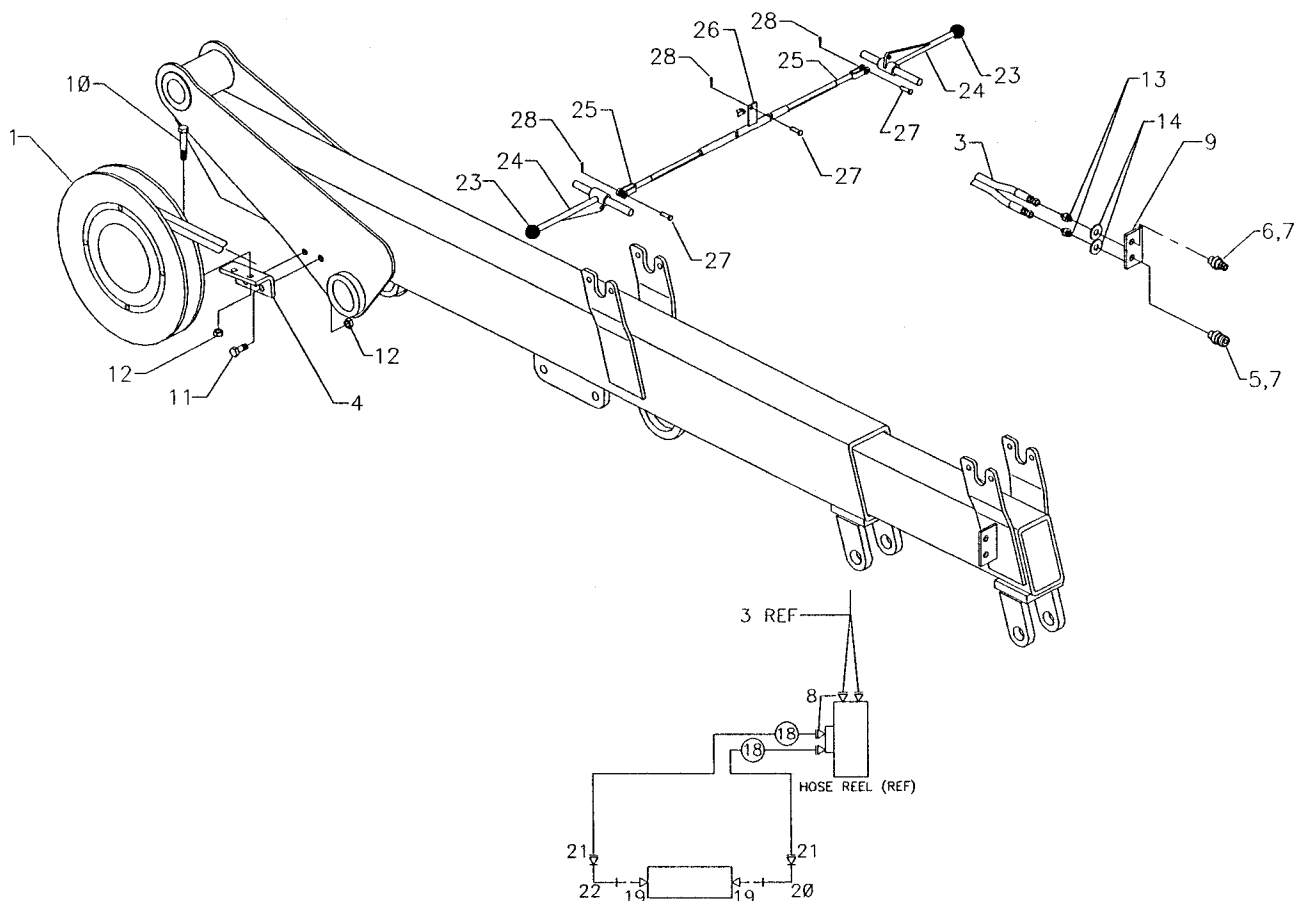

ITEM	PART NO.	DESCRIPTION	QTY
2.	70732864	HOSE REEL-RH	1
3.	51393812	HOSE ASM 1/4X300 FF TWIN LINE	1
4.	60117715	MOUNTING BRACKET	1
5.	72533380	DISCONNECT COUPLER 1/4	1
6.	72533382	DISCONNECT NIPPLE 1/4	1
7.	72533381	DUST CAP	2
8.	72532353	ADAPTER #6MSTR #4MJIC	4
9.	60110232	BULKHEAD MTG PLATE	1
10.	72060097	CAP SCR 1/2-13X3 HHGR5	2
11.	72060093	CAP SCR 1/2-13X1-1/2 HHGR5	2
12.	72062080	NUT 1/2-13 LOCK	4
13.	72053499	ADAPTER 1/4MPT #4MJIC	2

ITEM	PART NO.	DESCRIPTION	QTY
14.	72063003	WASHER 3/8 WRT	2
18.	51705175	HOSE ASM 1/4X212 FF	2
19.	72532722	ADAPTER #10MSTR #6FSTR	2
20.	72532700	ELBOW #6MSTR #6MJIC 90° XLG	1
21.	72532707	ADAPTER #4MJIC #6FJIC	2
22.	72053760	ELBOW #6MSTR #6MJIC 90°	1
23.	71039096	KNOB	2
24.	70029451	CONTROL HANDLE	2
25.	52704745	CONTROL ROD-M	2
26.	52704744	CONTROL ROD-F	1
27.	72066338	CLEVIS PIN 5/16X1	3
28.	72066168	COTTER PIN .09X.75	3

Figure D-41. HOSE REEL KIT-SGL (31712008)

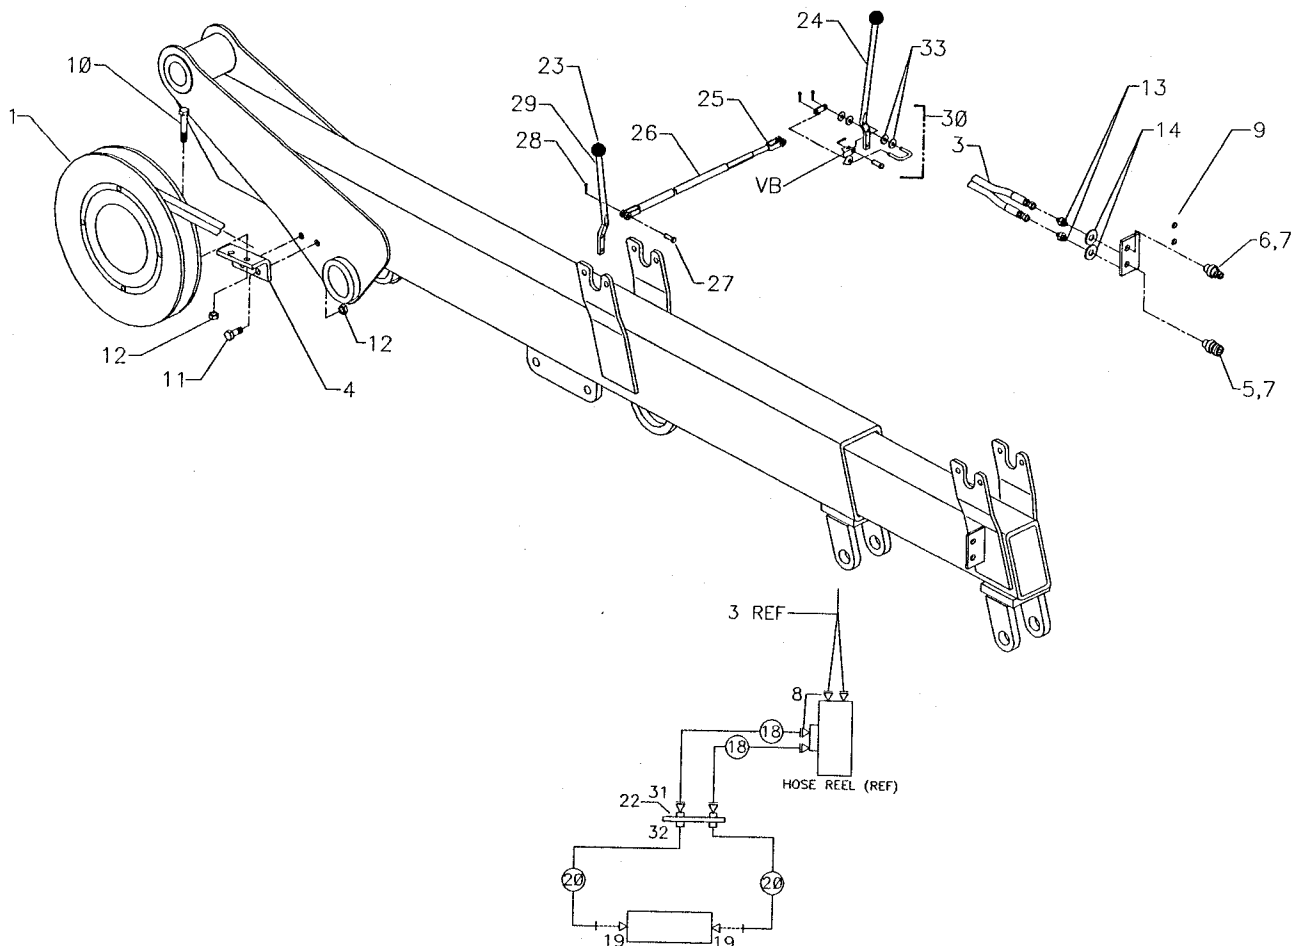


ITEM PART NO. DESCRIPTION QTY

2.	70732864	HOSE REEL-RH	1
3.	51393812	HOSE ASM 1/4X300 FF TWIN LINE	1
4.	60117715	MOUNTING BRACKET	1
5.	72533380	DISCONNECT COUPLER 1/4	1
6.	72533382	DISCONNECT NIPPLE 1/4	1
7.	72533381	DUST CAP	2
8.	72532353	ADAPTER #6MSTR #4MJIC	4
9.	60110232	BULKHEAD MTG PLATE	1
10.	72060097	CAP SCR 1/2-13X3 HHGR5	2
11.	72060093	CAP SCR 1/2-13X1-1/2 HHGR5	2
12.	72062080	NUT 1/2-13 LOCK	4
13.	72053499	ADAPTER 1/4MPT #4MJIC	2
14.	72063003	WASHER 3/8 WRT	2
18.	51705175	HOSE ASM 1/4X212 FF	2

ITEM PART NO. DESCRIPTION QTY

19.	72532358	ADAPTER #8MSTR #8MJIC	2
20.	51705976	HOSE ASM 3/8X100 FF	2
22.	72531708	BULKHEAD NUT 3/4	2
23.	71039096	KNOB	2
24.	70141982	CONTROL HANDLE-LONG	1
25.	52702018	CONTROL ROD-M	1
26.	52702016	CONTROL ROD-F	1
27.	72066338	CLEVIS PIN 5/16X1	2
28.	72066168	COTTER PIN .09X.75	2
29.	70141984	CONTROL HANDLE-LONG DVB	1
30.	94731839	LINK & PIN KIT	1
31.	72532665	ADAPTER #4MJIC #8FJIC	2
32.	72532672	BULKHEAD UNION #8JIC	2
33.	72063001	WASHER 1/4 WRT	4

Figure D-42. HOSE REEL KIT-SGL REMOTE (31712007)

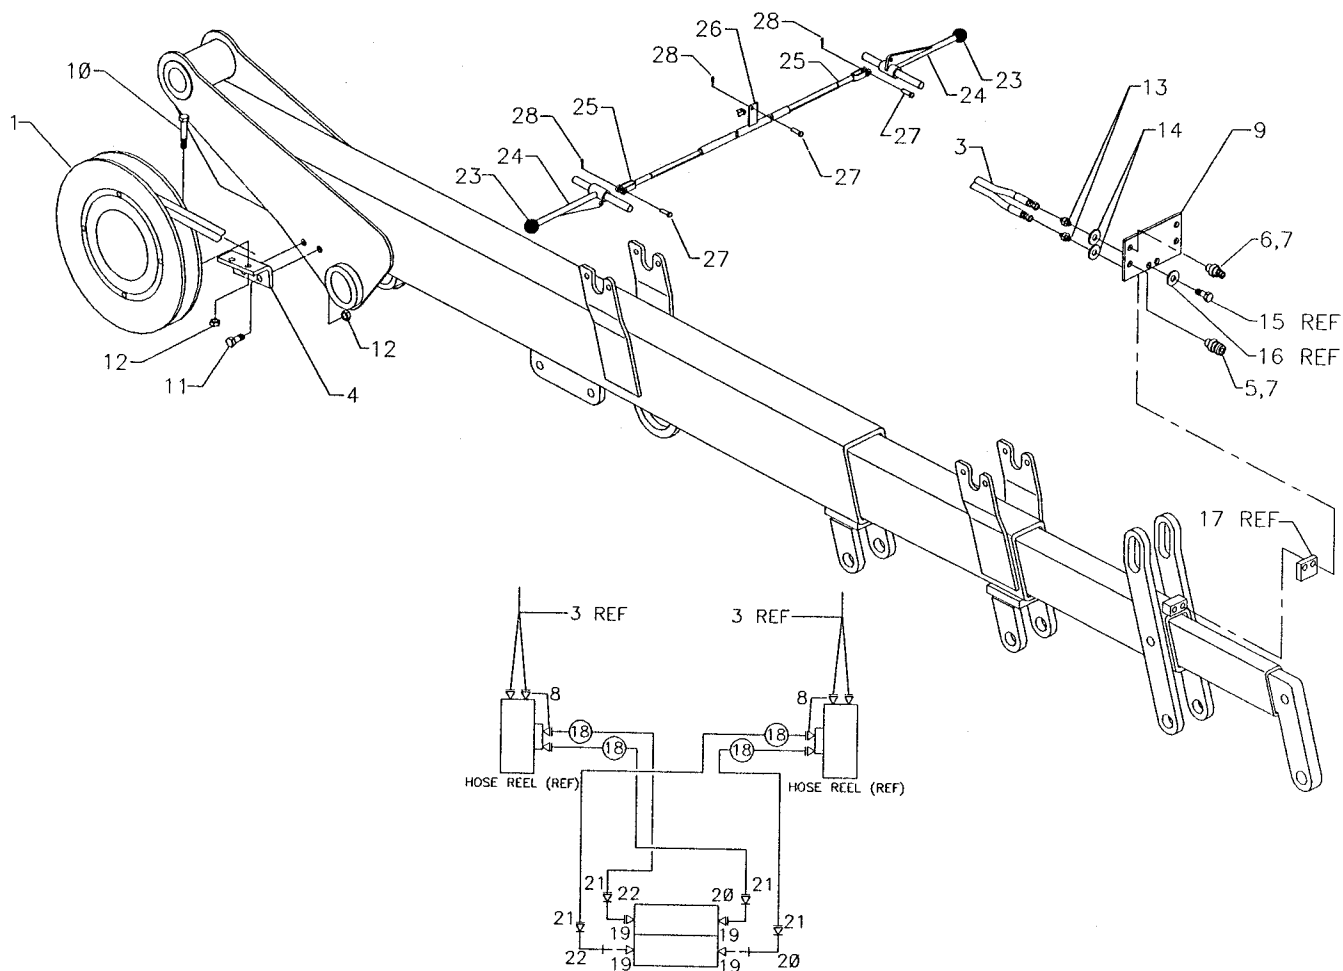

ITEM PART NO. DESCRIPTION QTY

1.	70732863	HOSE REEL-LH	1
2.	70732864	HOSE REEL-RH	1
3.	51393812	HOSE ASM 1/4X300 FF TWIN LINE	2
4.	60117715	MOUNTING BRACKET	2
5.	72533380	DISCONNECT COUPLER 1/4	2
6.	72533382	DISCONNECT NIPPLE 1/4	2
7.	72533381	DUST CAP	4
8.	72532353	ADAPTER #6MSTR #4MJIC	8
9.	60107590	BULKHEAD PLATE	1
10.	72060097	CAP SCR 1/2-13X3 HHGR5	4
11.	72060093	CAP SCR 1/2-13X1-1/2 HHGR5	4
12.	72062080	NUT 1/2-13 LOCK	8
13.	72053499	ADAPTER 1/4MPT #4MJIC	4
14.	72063003	WASHER 3/8 WRT	4
15.	72060094	CAP SCR 1/2-13X1-3/4 HHGR5 (PART OF EXT ASM)	2REF


ITEM PART NO.

DESCRIPTION

QTY


16.	72063053	WASHER 1/2 LOCK (PART OF EXT ASM)	2REF
17.	60107294	STROKE STOP (PART OF EXT ASM)	1REF
18.	51705175	HOSE ASM 1/4X212 FF	4
19.	72532722	ADAPTER #10MSTR #6FSTR	4
20.	72532700	ELBOW #6MSTR #6MJIC 90° XLG	2
21.	72532707	ADAPTER #4MJIC #6FJIC	4
22.	72053760	ELBOW #6MSTR #6MJIC 90°	2
23.	71039096	KNOB	4
24.	70029451	CONTROL HANDLE	4
25.	52704745	CONTROL ROD-M	4
26.	52704744	CONTROL ROD-F	2
27.	72066338	CLEVIS PIN 5/16X1	6
28.	72066168	COTTER PIN .09X.75	6

Figure D-43. HOSE REEL KIT-DBL (31711985)

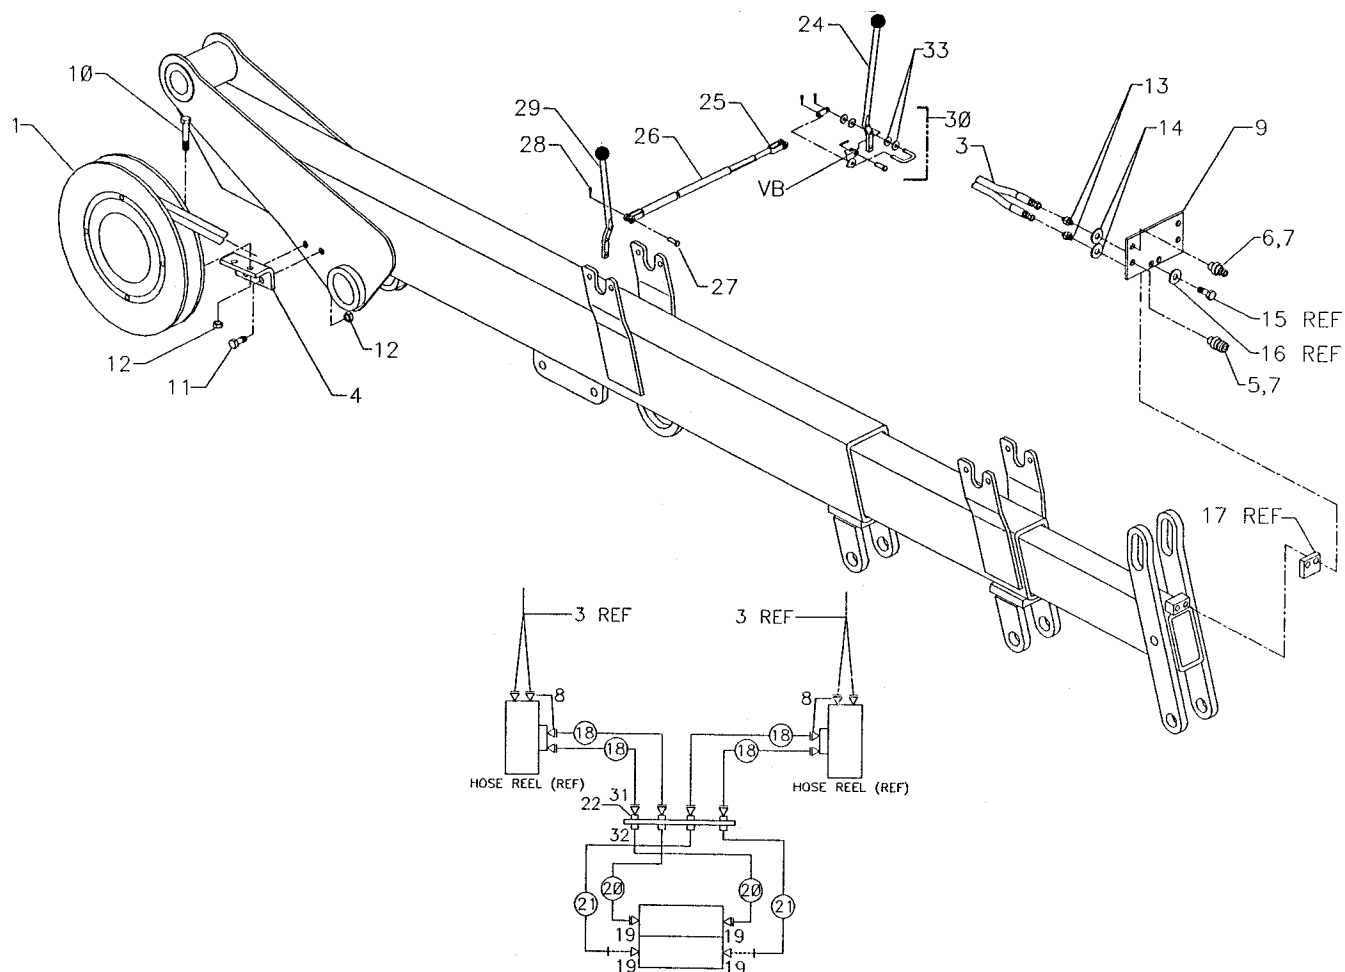

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1.	70732863	HOSE REEL-LH	1	17.	60107294	STROKE STOP (PART OF EXT ASM)	1 REF
2.	70732864	HOSE REEL-RH	1	18.	51705175	HOSE ASM 1/4X212 FF	4
3.	51393812	HOSE ASM 1/4X300 FF TWIN LINE	2	19.	72532358	ADAPTER #8MSTR #8MJIC	4
4.	60117715	MOUNTING BRACKET	2	20.	51705976	HOSE ASM 3/8X100 FF	2
5.	72533380	DISCONNECT COUPLER 1/4	2	21.	51705977	HOSE ASM 3/8X104 FF	2
6.	72533382	DISCONNECT NIPPLE 1/4	2	22.	72531708	BULKHEAD NUT 3/4	4
7.	72533381	DUST CAP	4	24.	70141982	CONTROL HANDLE-LONG	2
8.	72532353	ADAPTER #6MSTR #4MJIC	8	25.	52702018	CONTROL ROD-M	2
9.	60107590	BULKHEAD PLATE	1	26.	52702016	CONTROL ROD-F	2
10.	72060097	CAP SCR 1/2-13X3 HHGR5	4	27.	72066338	CLEVIS PIN 5/16X1	4
11.	72060093	CAP SCR 1/2-13X1-1/2 HHGR5	4	28.	72066168	COTTER PIN .09X.75	4
12.	72062080	NUT 1/2-13 LOCK	8	29.	70141984	CONTROL HANDLE-LONG DVB	2
13.	72053499	ADAPTER 1/4MPT #4MJIC	4	30.	94731839	LINK & PIN KIT	2
14.	72063003	WASHER 3/8 WRT	4	31.	72532665	ADAPTER #4MJIC #8FJIC	4
15.	72060094	CAP SCR 1/2-13X1-3/4 HHGR5 (PART OF EXT ASM)	2 REF	32.	72532672	BULKHEAD UNION #8JIC	4
16.	72063053	WASHER 1/2 LOCK (PART OF EXT ASM)	2 REF	33.	72063001	WASHER 1/4 WRT	8

Figure D-44. HOSE REEL KIT-DBL REMOTE (31712004)

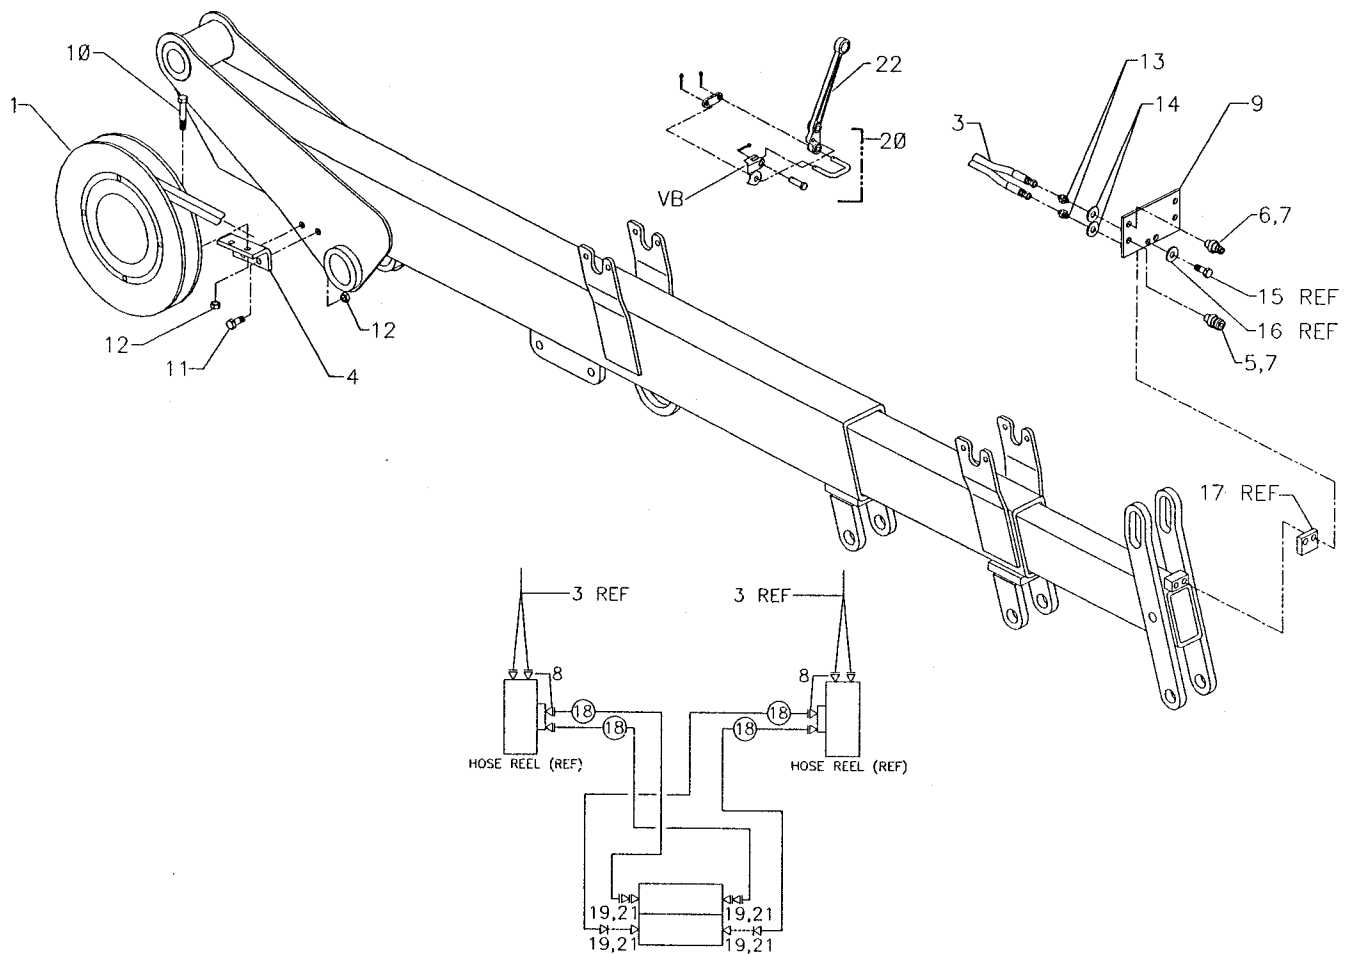

ITEM PART NO. DESCRIPTION QTY


1.	70732863	HOSE REEL-LH	1
2.	70732864	HOSE REEL-RH	1
3.	51393812	HOSE ASM 1/4X300 FF TWIN LINE	2
4.	60117715	MOUNTING BRACKET	2
5.	72533380	DISCONNECT COUPLER 1/4	2
6.	72533382	DISCONNECT NIPPLE 1/4	2
7.	72533381	DUST CAP	4
8.	72532353	ADAPTER #6MSTR #4MJIC	8
9.	60107590	BULKHEAD PLATE	1
10.	72060097	CAP SCR 1/2-13X3 HHGR5	4
11.	72060093	CAP SCR 1/2-13X1-1/2 HHGR5	4
12.	72062080	NUT 1/2-13 LOCK	8
13.	72053499	ADAPTER 1/4MPT #4MJIC	4

ITEM PART NO. DESCRIPTION

14.	72063003	WASHER 3/8 WRT	4
15.	72060094	CAP SCR 1/2-13X1-3/4 HHGR5 (PART OF EXT ASM)	2REF
16.	72063053	WASHER 1/2 LOCK (PART OF EXT ASM)	2REF
17.	60107294	STROKE STOP (PART OF EXT ASM)	1REF
18.	51705175	HOSE ASM 1/4X212 FF	4
19.	72532358	ADAPTER #8MSTR #8MJIC	4
20.	94731839	LINK & PIN KIT	2
21.	72532665	ADAPTER #4MJIC #8FJIC	4
22.	73014848	VALVE HANDLE	2

Figure D-45. HOSE REEL KIT-CHAIR MOUNT (31712009)

Section 5. REFERENCE

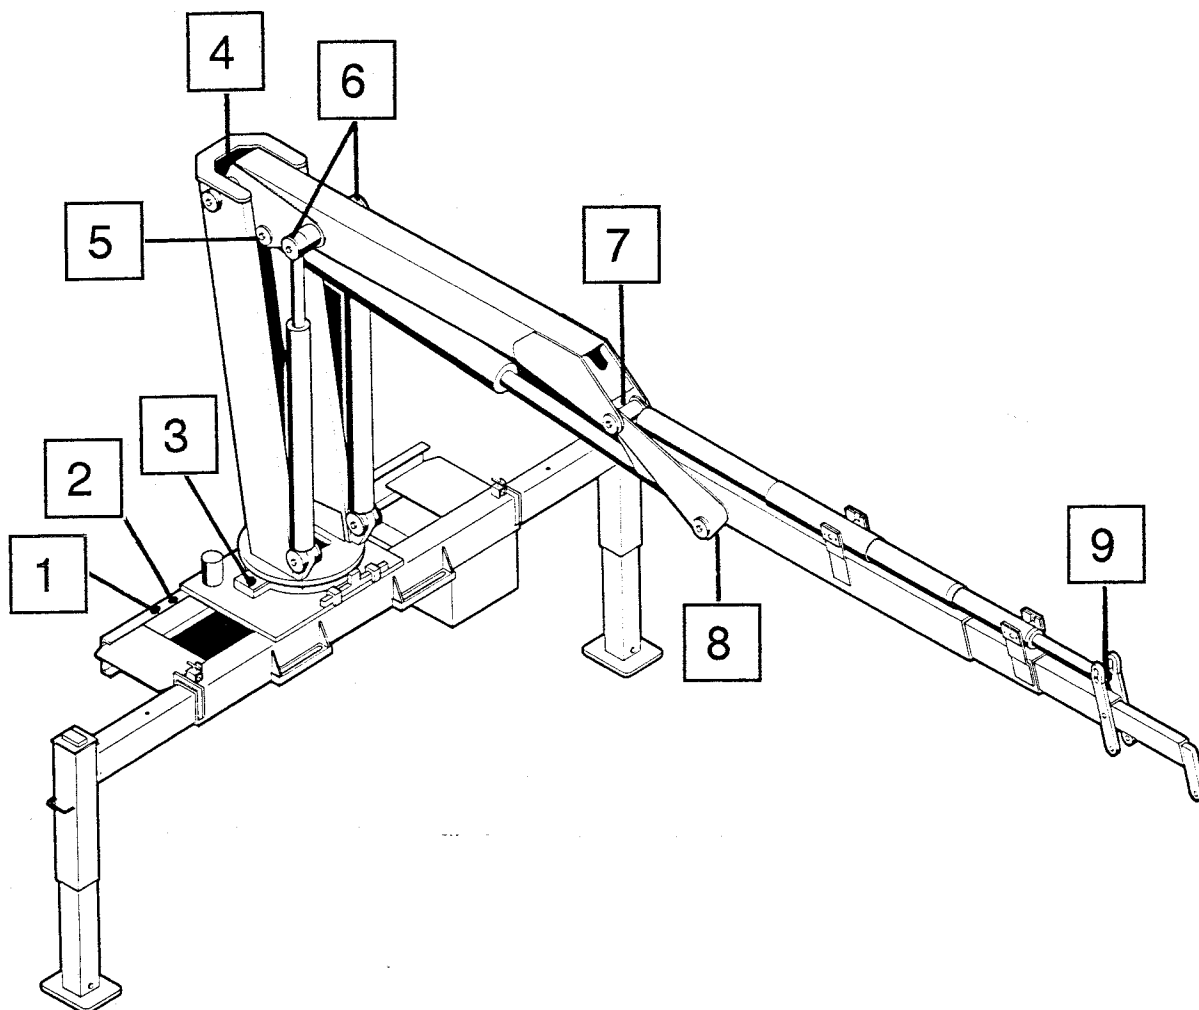

ITEM	LOCATION DESCRIPTION	LUBRICANT	FREQUENCY
1.	DRIVE GEAR GREASE EXTENSION	SHELL ALVANIA 2EP OR SHELL RETINAX "A"	WEEKLY
2.	TURNTABLE/BEARING GREASE EXTENSION		
	*ROTATE CRANE WHILE GREASING		
3.	PINION GEAR		
4.	MAST/INNER BOOM HINGE PIN		
5.	OUTER CYLINDER BASE		
6.	INNER CYLINDER ROD		
7.	INNER BOOM/OUTER BOOM HINGE PIN		
8.	OUTER CYLINDER ROD		
9.	EXTENSION CYLINDER ROD		

NOTE: All application points must be greased weekly under normal work loads and moderate weather conditions. Under severe operating conditions, lubrication should be performed more frequently. See Volume 1; Operation, Maintenance and Repair for additional lubrication requirements.


Figure E-1. GREASE ZERK LOCATIONS AND LUBRICANT REQUIREMENTS

TORQUE DATA CHART

FINE THREAD BOLTS

SIZE (DIA-TPI)	BOLT DIA (INCHES)	TIGHTENING TORQUE			
		 SAE J429 GRADE 5		 SAE J429 GRADE 8	
		PLAIN (LB FT)	PLATED (LB FT)	PLAIN (LB FT)	PLATED (LB FT)
5/16-24	0.3125	19	14	27	20
3/8-24	0.3750	35	26	49	35
7/16-20	0.4375	55	41	78	58
1/2-20	0.5000	90	64	120	90
9/16-18	0.5625	120	90	170	130
5/8-18	0.6250	170	130	240	180
3/4-16	0.7500	300	225	420	315
7/8-11	0.8750	445	325	670	500
1-12	1.0000	645	485	995	745
1 1/8-12	1.1250	890	670	1445	1085
1 1/4-12	1.2500	1240	930	2010	1510
1-3/8-12	1.3750	1675	1255	2710	2035
1 1/2-12	1.5000	2195	1645	3560	2670

COARSE THREAD BOLTS

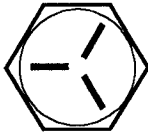SIZE (DIA-TPI)	BOLT DIA (INCHES)	TIGHTENING TORQUE			
		 SAE J429 GRADE 5		 SAE J429 GRADE 8	
		PLAIN (LB FT)	PLATED (LB FT)	PLAIN (LB FT)	PLATED (LB FT)
5/16-18	0.3125	17	13	25	18
3/8-16	0.3750	31	23	44	33
7/16-14	0.4375	49	37	70	52
1/2-13	0.5000	75	57	105	80
9/16-12	0.5625	110	82	155	115
5/8-11	0.6250	150	115	220	160
3/4-10	0.7500	265	200	375	280
7/8-9	0.8750	395	295	605	455
1-8	1.0000	590	445	910	680
1 1/8-7	1.1250	795	595	1290	965
1 1/4-7	1.2500	1120	840	1815	1360
1-3/8-6	1.3750	1470	1100	2380	1780
1 1/2-6	1.5000	1950	1460	3160	2370

When using the torque data in the charts above, the following rules should be observed.


1. Bolt manufacturer's particular specifications should be consulted when provided.
2. Flat washers of equal strength must be used.
3. All torque measurements are given in foot-pounds. To convert to inch-pounds, multiply by 12.
4. Torque values specified are for bolts with residual oils or no special lubricants applied. If special lubricants of high stress ability, such as Never-Seez compound graphite and oil, molybdenum disulphite, colloidal copper or white lead are applied, multiply the torque values in the charts by the factor .90. The use of Loctite does not affect the torque values listed above.
5. Torque values for socket-head capscrews are the same as for Grade 8 capscrews.

WARNING

Anytime a gear-bearing bolt is removed, it must be replaced with a new bolt of the identical grade and size. Once a bolt has been torqued to 75% of its proof load and then removed, the torque coefficient may no longer be the same as when the bolt was new thus giving indeterminate clamp loads after torquing. Failure to replace gear-bearing bolts may result in bolt failure due to metal fatigue causing serious injury or DEATH.

Figure E-2. TORQUE DATA CHART

Refer to the diagram below for proper tightening/torquing sequence of the turntable bearing to the crane base and crane mast. The total quantity of cap screws varies dependent on crane model.

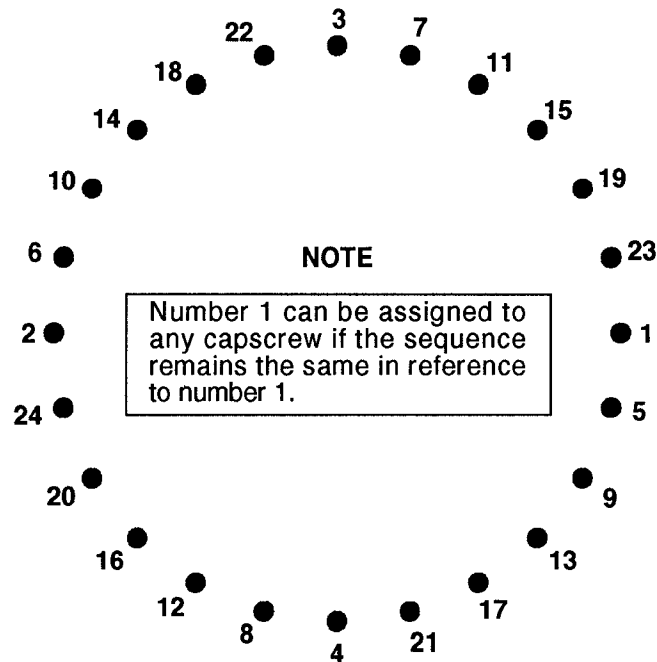

TIGHTENING PROCEDURE:

1. Refer to the Torque Data Chart to determine the proper torque value to apply to the size of cap screw used.
2. Follow the tightening sequence shown in the diagram. Note that the quantity of cap screws may differ from the diagram, but the sequence must follow the criss-cross pattern as shown in the diagram.
3. Torque all cap screws to approximately 40% of the specified torque value, by following the sequence. (EXAMPLE: $.40 \times 265 \text{ FT-LBS} = 106 \text{ FT-LBS}$)
4. Repeat Step 3, but torquing all cap screws to 75% of the specified torque value. Continue to follow the tightening sequence. (EXAMPLE: $.75 \times 265 \text{ FT-LBS} = 199 \text{ FT-LBS}$)
5. Using the proper sequence, torque all cap screws to the listed torque value as determined from the Torque Data Chart.

Figure E-3. TURNTABLE BEARING FASTENER TIGHTENING SEQUENCE

Before a bearing is removed from a crane for inspection, one of the following conditions should be evident:

1. Metal particles present in the bearing lubricant.
2. Increased drive power required to rotate the crane.
3. Noise emitting from the bearing during crane rotation.
4. Rough crane rotation.
5. Uneven or excessive wear between the pinion gear and turntable gear.

If none of the above conditions exists, the bearing is functioning properly and need not be replaced. But, if one or more of the above conditions exists, inspection may be required. Limits are measured in "TILT" which is dependent on the internal clearances of the bearing. TILT is the most practical determination of a bearing's internal clearance once mounted on a crane.

Periodic readings indicating a steady increase in TILT may be an indicator of bearing wear. Note that a bearing found to have no raceway cracks or other structural irregularities should be reassembled and returned to service.

TEST PROCEDURE

STEP 1.


With the crane horizontal and fully extended, measure between the top and bottom mounting surfaces of the turntable bearing (A_1), using a dial indicator for accuracy.

STEP 2.

Reverse the load by applying minimal downward pressure on the boom while the boom is in the boom support or on a solid surface. Again measure A_2 .

STEP 3.

Subtract A_1 from A_2 to determine tilt and compare the result with the accompanying chart.

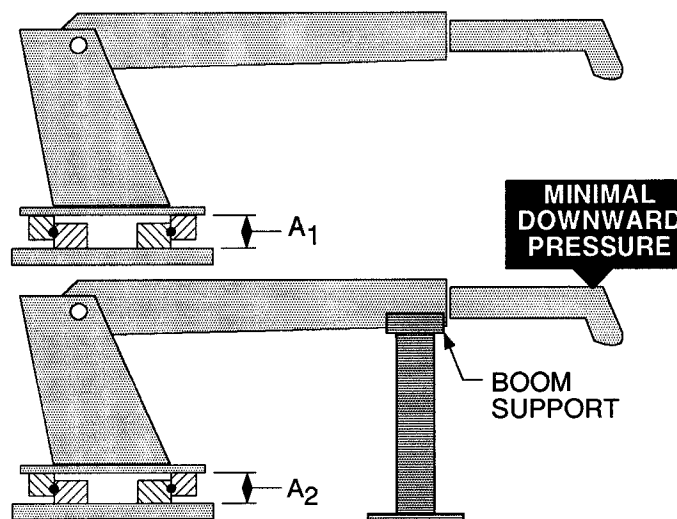

COMPARISON CHART - MODEL TO MEASURED TILT DIMENSION					
NOTE THE FIGURES LISTED IN THIS CHART ARE SERVICE GUIDELINES AND DO NOT, IN THEMSELVES, REQUIRE THAT THE BEARING BE INSPECTED. IF THERE IS REASON TO SUSPECT AN EXCESS OF BEARING WEAR AND THE MEASURED TILT DIMENSION EXCEEDS THE DIMENSION LISTED, REMOVE THE BEARING FOR INSPECTION.	IMT CRANE OR TIREHAND MODEL	814 1007 1014 2010 215 2015 2109 2815 3016 315A 320H 3515 3617 3625 421 425 5016 TH7 BODY ROT'N TH1449A BODY ROT'N TH15A CLAMP TH1836A CLAMP TH2551 CLAMP TH2557 CLAMP TH2557A CLAMP	4817 4825 516 525 5826 6014 6425 725 7020 7025 8025 8031 TH10 BODY ROT'N TH12 BODY ROT'N	32018 32030 HAWK-H1150 HAWK-H1150TL HAWK-H4961	9616 9825 9831 10020 10025 1216 1325 1331 13031 13034 13426 14018 14048 14126 15033 1725 18026 20017 HAWK-H1200 TH1836 BODY ROT'N TH1836A BODY ROT'N TH2551 BODY ROT'N TH2557 BODY ROT'N TH2557A BODY ROT'N
	BALL DIA. (REF)	.875" (22mm)	1.00" (25mm)	1.18" - 1.25" (30 - 32mm)	1.75" (44mm)
	TILT DIM. ($A_1 - A_2$)	.060" (1.524mm)	.070" (1.778mm)	.075" (1.905mm)	.090" (2.286mm)

Figure E-4. TURNTABLE BEARING INSPECTION FOR REPLACEMENT

SPARE PARTS LIST

1-Year Supply

This spare parts list does not necessarily indicate that the items can be expected to fail in the course of a year. It is intended to provide the user with a stock of parts sufficient to keep the unit operating with no down-time waiting for parts. Obviously, there may be part failures not covered by this list.

The item numbers shown on this list correspond to the item numbers on the page listed.

Page No.	Item No.	Part No.	Description	Qty
4-3.	21.	60020114	Bushing, Top pinion gear	1
4-3.	22.	60020115	Bushing, Top drive gear	1
4-3.	23.	60020116	Bushing, Bottom drive gear	1
4-3.	24.	60020154	Bushing, Bottom pinion gear	1
4-3.	25.	71056011	Gear, Drive	1
4-3.	26.	71056001	Gear-Bearing, turntable	1
4-3.	27.	71056010	Gear, Pinion	1
4-3.	28.	71056012	Gear, Intermediate	1
4-3.	36.	73051384	Motor, Hydraulic	1
4-4.	9.	9B101214	Seal Kit, Outtrigger cylinder	2
4-4.	5.	73054004	Valve, Locking holding	2
4-6.	---	9B050608	Seal Kit, Power-out outtrigger cylinder	2
4-7.	2.	7BF81520	Bushing, Inner cylinder/mast	2
4-7.	4.	7BF81220	Bushing, Inner boom/mast	12
4-8.	---	9C141820	Seal Kit, Inner cylinder	2
4-9.	5.	7BF81220	Bushing, Outer boom/inner boom	4
4-10.	---	9C182423	Seal Kit, Outer cylinder	
4-10.	4.	7BF81220	Bushing Outer cylinder rod	2
4-10.	17.	73054242	Valve; 25-GPM counter-balance	1
4-10.	18.	7BF81520	Bushing, outer cylinder rod	2
4-11.	5.	60030067	Pad, Wear	1
4-11.	4.	60030064	Pad, Wear	1
4-12.	---	9C121617	Seal Kit, 4819 extension cylinder	1
4-12.	16.	73054304	Valve; 10-GPM counter-balance	2
4-13.	20.	60030067	Pad, Wear	1
4-13.	21.	60030065	Pad, Wear	1
4-13.	22.	60030064	Pad, Wear	1
4-13.	23.	60030066	Pad, Wear	1
4-14.	11.	73054242	Valve; 25-GPM counter-balance	2
4-14.	13.	9X095850	Seal Kit, Telescoping extension cylinder	1
4-15.	20.	60030067	Pad, Wear	1
4-15.	21.	60030065	Pad, Wear	1
4-15.	22.	60030064	Pad, Wear	1
4-15.	23.	60030066	Pad, Wear	1

The information within this manual has been compiled and checked but errors do occur. To provide our customers with a method of communicating those errors we have provided the Manual Change Request form below. In addition to error reporting, you are encouraged to suggest changes or additions to the manual which would be of benefit to you. We cannot guarantee that these additions will be made but we do promise to consider them. When completing the form, please write or print clearly. Submit a copy of the completed form to the address listed below.

MANUAL CHANGE REQUEST

DATE	PRODUCT MANUAL	4825 Crane	MANUAL PART NO.	99900059-2/91
SUBMITTED BY				
COMPANY				
ADDRESS				
CITY, STATE, ZIP				
TELEPHONE				

☐

ERROR FOUND

LOCATION OF ERROR (page no.): _____

DESCRIPTION OF ERROR: _____

☐

REQUEST FOR ADDITION TO MANUAL

DESCRIPTION OF ADDITION: _____

REASON FOR ADDITION: _____

MAIL TO: IOWA MOLD TOOLING Co., Inc.
Box 189,
Garner IA 50438
ATTN: Technical Publications

MANUFACTURER'S LIMITED WARRANTY

WARRANTY COVERAGE - Products manufactured by Iowa Mold Tooling Co., Inc. (IMT) are warranted to be free from defects in material and workmanship, under proper use, application and maintenance in accordance with IMT's written recommendations, instructions and specifications as follows:

1. Ninety (90) days; labor on IMT workmanship from the date of delivery to the end user.
2. One (1) year; original IMT parts from the date of delivery to the end user.

IMT's obligation under this warranty is limited to, and the sole remedy for any such defect shall be the repair or replacement (at IMT's option) of unaltered parts returned to IMT, freight prepaid, provided such defect occurs within the above stated warranty period and is reported within fourteen (14) days of its occurrence.

IMPLIED WARRANTY EXCLUDED - This is the only authorized IMT warranty and is in lieu of all other express or implied warranties or representations, including any implied warranties of merchantability or fitness for any particular purpose or of any other obligations on the part of IMT.

ITEMS EXCLUDED - The manufacturer gives no warranty on any components or parts purchased by the manufacturer, and such components as are covered only by the warranties of their respective manufacturers.

WARRANTY CLAIMS - Warranty claims must be submitted and shall be processed in accordance with IMT's established warranty claim procedure.

WARRANTY SERVICE - Warranty service will be performed by any IMT distributor authorized to sell new IMT products of the type involved or by any IMT Service Center authorized to service the type of product involved or by IMT in the event of direct sales made by IMT. At the time of requesting warranty service, the purchaser must present evidence of the date of delivery of the product. The purchaser shall pay any premium for overtime labor requested by the purchaser, any charge for making service calls and for transporting the equipment to the place where warranty work is performed.

WARRANTY VOIDED - All obligations of IMT under this warranty shall be terminated: (1) if service other than normal maintenance or normal replacement of service items is performed by someone other than an authorized IMT dealer, (2) if product is modified or altered in ways not approved by IMT.

PURCHASER'S RESPONSIBILITY - This warranty covers only defective material and workmanship. It does not cover depreciation or damage caused by normal wear, accident, improper protection in storage, or improper use. The purchaser has the obligation of performing the care and maintenance duties discussed in IMT's written recommendations, instructions and specifications. Any damage which results because of purchaser's failure to perform such duties shall not be covered by this warranty. The cost of normal maintenance and normal replacement of service items such as filters, belts, etc. shall be paid by the purchaser.

CONSEQUENTIAL DAMAGES - The only remedies the purchaser has in connection with the breach or performance of any warranty on IMT products are those set forth above. In no event will the dealer, IMT or any company affiliated with IMT, be liable for business interruptions, loss of sales and/or profits, rental or substitute equipment, costs of delay or for any other special, indirect, incidental or consequential losses, costs or damages.

REPRESENTATIONS EXCLUDED - IMT products are subject to no expressed, implied or statutory warranty other than herein set forth, and no agent, representative or distributor of the manufacturer has any authority to alter the terms of this warranty in any way whatsoever or to make any representations or promises, express or implied, as to the quality or performance of IMT products other than those set forth above.

CHANGE IN DESIGN - IMT reserves the right to make changes in design or improvements upon its products without imposing any obligation upon itself to install the same upon its products theretofore manufactured.

Effective January, 1984

This parts manual is provided to the user to assist in servicing the equipment. It is the property of Iowa Mold Tooling Co., Inc and, as such, may not be reproduced either whole or in part, whether by chemical, electrostatic, mechanical or photographic means without the expressed written permission of an officer of Iowa Mold Tooling Co., Inc. One manual is provided with each piece of new equipment and additional manuals may be obtained at a nominal price.

IOWA MOLD TOOLING Co., Inc.

BOX 189, GARNER, IA 50438-0189

TEL: 515-923-3711

PRODUCT SUPPORT FAX: 515-923-3674