



AIR N ARC® I300

ALL-IN-ONE Power Systems®


**WELDER • GENERATOR • AIR COMPRESSOR
BATTERY BOOSTER • HYDRAULIC PUMP**

OPERATION MANUAL & PARTS LIST

NOTE

This publication contains the latest information available at the time of preparation. Every effort has been made to ensure accuracy. However, Vanair Manufacturing, Inc. takes no responsibility for errors or consequential damages caused by reliance on the information contained herein.

Vanair Manufacturing, Inc. reserves the right to make design change modifications or improvements without prior notification.

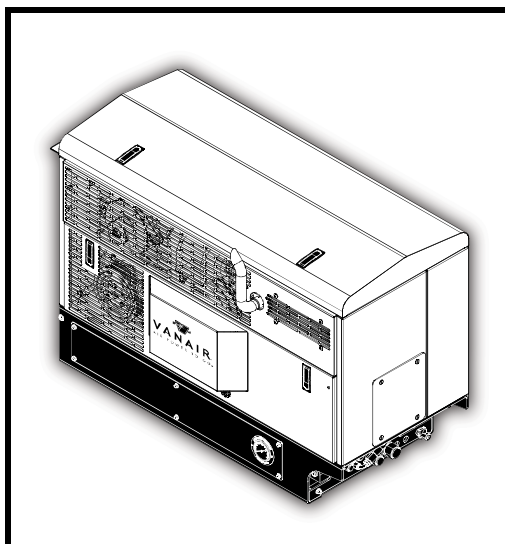

Read this manual before installing, operating or servicing this equipment. Failure to comply with the operation and maintenance instructions in this manual **WILL VOID THE EQUIPMENT WARRANTY.**

NOTE

Use only Vanair Vanguard™ Premium Synthetic Oil and Genuine Vanair Parts. Inspect and replace damaged components before operation. Substituting non-Vanguard™ Oil or non-genuine Vanair filter components **WILL VOID THE COMPRESSOR WARRANTY!**

Vanair Manufacturing, Inc.

10896 West 300 North
Michigan City, IN 46360
Phone: (219) 879-5100
(800) 526-8817

Service Fax: (219) 879-5335
Parts Fax: (219) 879-5340
Sales Fax: (219) 879-5800

www.vanair.com

©2013 Vanair Manufacturing, Inc.
All rights reserved

NOTE

Making unauthorized modifications to the system components **WILL VOID THE WARRANTY!**

Always inform Vanair Manufacturing, Inc., before beginning any changes to the Air N Arc system.

**KEEP THE MANUAL
WITH THE VEHICLE**



P/N: 090045-OP_r1

**Effective Date:
11-2013**

AIR N ARC® I300

ALL-IN-ONE Power Systems®



WARRANTY

Subject to the terms and conditions below, Vanair® Manufacturing Inc. warrants to the original end user that new Air N Arc® equipment sold after the effective date of this limited warranty is free of defects in material and workmanship at the time it was shipped from Vanair.

This statement of warranty is expressly in lieu of and disclaims all other express warranties, implied warranties of merchantability and fitness for a particular purpose and all other implied warranties which extend beyond the description on the face hereof. In no event shall Vanair be responsible for special, indirect, incidental, consequential or punitive damages of any kind, including without limitation, lost profits or other monetary loss, whether or not any such matters or causes are within Vanair's control or due to negligence or other fault of Vanair, its agents, affiliates, employees or representatives.

Within the warranty periods listed below, Vanair will repair or replace any warranted parts or components that fail due to defects in material or workmanship. Warranty will commence upon receipt of the Warranty Registration Card. If the Warranty Registration Card is not received within six (6) months, then warranty commencement date shall be thirty (30) days from the date of shipment from Vanair. Records of warranty adherence are the responsibility of end user.

When following the prescribed maintenance schedule, the rotary screw compressor unit is warranted by Vanair for five (5) years, the hydraulic pump and battery for (1) year and all other major components for three (3) years. (NOTE: Engines are warranted separately by the engine manufacturer.)

Consumable products such as filters and electrodes are not covered. This warranty does not cover damage caused by accident, misuse or negligence.

Any disassembly of major components must be approved by Vanair to avoid voiding of warranty. The Warranty-Service Department must be notified prior to any and all work being done on the equipment. Any and all such claims for warranty consideration must be coordinated through the Warranty-Service Department at the address below. **Do not** return parts without prior authorization.

Warranty claims must be pre-approved, and are limited to the supply of replacement parts falling within the warranty period. Credit for labor required to refit replacement parts is NOT included. All warranted parts are to be shipped PREPAID to Vanair. Replacement parts will be shipped back to the customer by Vanair via ground shipment. Cost to expedite delivery of replacement parts will be incurred by customer. Factory installed units will also include warranty on the installation for one year.

This warranty shall be void and Vanair shall have no responsibility to repair, replace or repay the purchase price of defective or damaged parts resulting from the use of or repair of replacement parts or fluids not of Vanair's manufacture or from buyer's failure to store, install, maintain and operate the equipment according to the recommendations contained in the manual.

All claims under the warranty shall be made by contacting Vanair Warranty-Service Department.



Register Your Warranty Online at www.vanair.com under the Support Tab!

Or Call: (800) 526-8817 • Fax: (219) 879-5800

Mail to: 10896 W 300 North • Michigan City, IN 46360

Effective June 2011

TABLE OF CONTENTS

WARRANTY BEHIND COVER

TABLE OF CONTENTS.....I

WARRANTY CLAIMS PROCEDURE VII

CLAIMS PROCESS FOR WARRANTED PARTS VII

PROCEDURE VII

SECTION 1: SAFETY 1

1.1 GENERAL INFORMATION 1

1.2 DANGERS, WARNINGS, CAUTIONS, AND NOTES 1

1.3 INTERNATIONAL SAFETY SYMBOL 2

1.4 ARC WELDING HAZARDS 2

1.4.1 ELECTRICAL SHOCK CAN KILL 2

1.4.2 FUMES AND GASSES CAN BE HAZARDOUS 3

1.4.3 BUILD UP OF GAS CAN INJURE OR KILL 3

1.4.4 ENCLOSED SPACES CAN CAUSE A BUILD-UP OF NOXIOUS FUMES AND OVERHEATING 3

1.4.5 ARC RAYS CAN BURN EYES AND SKIN 3

1.4.6 WELDING CAN CAUSE FIRE AND EXPLOSION 4

1.4.7 FLYING METAL CAN INJURE EYES 4

1.4.8 HOT PARTS CAN CAUSE SEVERE BURNS 4

1.4.9 NOISE CAN DAMAGE HEARING 4

1.4.10 MAGNETIC FIELDS CAN AFFECT PACEMAKERS 4

1.4.11 CYLINDERS CAN EXPLODE IF DAMAGED 5

1.5 ENGINE HAZARDS 5

1.5.1 BATTERY EXPLOSION CAN BLIND 5

1.5.2 FUEL CAN CAUSE FIRE OR EXPLOSION 5

1.5.3 MOVING PARTS CAN CAUSE INJURY 6

1.5.4 HOT PARTS CAN CAUSE SEVERE BURNS 6

1.5.5 ENGINE EXHAUST GASSES CAN KILL 6

1.5.6 ENCLOSED SPACES CAN CAUSE A BUILD-UP OF NOXIOUS FUMES AND OVERHEATING 6

1.5.7 BATTERY ACID CAN BURN SKIN AND EYES 6

Continued on next page...

SECTION 1: SAFETY (CONTINUED)

1.5.8	ENGINE HEAT CAN CAUSE FIRE.....	6
1.5.9	EXHAUST SPARKS CAN CAUSE FIRE.....	6
1.6	COMPRESSED AIR HAZARDS.....	6
1.6.1	BREATHING COMPRESSED AIR CAN CAUSE SERIOUS INJURY OR DEATH.....	6
1.6.2	ENCLOSED SPACES CAN CAUSE A BUILD-UP OF NOXIOUS FUMES AND OVERHEATING.....	7
1.6.3	COMPRESSED AIR CAN CAUSE INJURY.....	7
1.6.4	TRAPPED AIR PRESSURE AND WHIPPING HOSES CAN CAUSE INJURY.....	7
1.6.5	HOT METAL FROM AIR ARC CUTTING AND GOUGING CAN CAUSE FIRE OR EXPLOSION.....	7
1.6.6	HOT PARTS CAN CAUSE SEVERE BURNS.....	7
1.6.7	READ INSTRUCTIONS.....	7
1.7	HYDRAULIC PUMP HAZARDS.....	7
1.7.1	CONTENTS UNDER PRESSURE.....	7
1.7.2	HEED PRESSURE LIMITS AND RECOMMENDATIONS.....	7
1.7.3	HOSE AND TUBING INSPECTION.....	8
1.7.4	HOSE AND TUBING REPLACEMENT.....	8
1.7.5	HOT PARTS CAN CAUSE SEVERE BURNS.....	8
1.7.6	HYDRAULIC CYLINDERS MAY HOLD A FUNCTION IN POSITION EVEN WHEN THE PUMP IS OFF.....	8
1.7.7	HYDRAULIC PIPING REPLACEMENT MUST CONFORM TO SAEJ1065 SPECIFICATIONS.....	8
1.7.8	DO NOT HEAT HYDRAULIC PIPE.....	8
1.7.9	RELIEVE HYDRAULIC SYSTEM PRESSURE BEFORE REMOVING ANY COMPONENTS FROM THE SYSTEM.....	9
1.7.10	LIFTING COMPONENTS.....	9
1.7.11	HYDRAULIC TEST GAUGES.....	9
1.7.12	SYSTEM MODIFICATION PROHIBITED.....	9
1.7.13	FALLING UNIT CAN CAUSE INJURY.....	9
1.7.14	REPLACE DAMAGED SAFETY DECALS.....	9
1.7.15	POST-SERVICING OPERATION.....	9
1.7.16	WEAR PROPER PROTECTIVE EQUIPMENT.....	10
1.7.17	KEEP CLEAR OF MOVING PARTS.....	10
1.7.18	CONFINE LOOSE CLOTHING AND HAIR; REMOVE WATCHES, RINGS OR JEWELRY DURING OPERATION.....	10
1.8	ADDITIONAL SYMBOLS FOR INSTALLATION, OPERATION AND MAINTENANCE.....	10
1.8.1	FALLING UNIT CAN CAUSE INJURY.....	10

Continued on next page...

SECTION 1: SAFETY (CONTINUED)

1.8.2	OVERHEATING CAN DAMAGE MOTORS	10
1.8.3	FLYING SPARKS CAN CAUSE INJURY	10
1.8.4	OVERUSE CAN CAUSE OVERHEATING	10
1.8.5	ENCLOSED SPACES CAN CAUSE A BUILD-UP OF NOXIOUS FUMES AND OVERHEATING	10
1.8.6	TILTING OF TRAILER CAN CAUSE INJURY	11
1.8.7	READ INSTRUCTIONS	11
1.8.8	H.F. RADIATION CAN CAUSE INTERFERENCE	11
1.8.9	ARC WELDING CAN CAUSE INTERFERENCE	11
1.9.	CALIFORNIA PROPOSITION 65 WARNINGS	11
1.10	PRINCIPAL SAFETY STANDARDS	12
1.11	EMF INFORMATION	12
1.12	MACHINE CANOPY ACCESS SAFETY SWITCHES	13
1.13	DISPOSING OF MACHINE FLUIDS	13

SECTION 2: SPECIFICATIONS..... 15

TABLE 2A:	ENGINE, HYDRAULIC SYSTEM, WELDER AND GENERATOR SPECIFICATIONS	15
TABLE 2B:	SPECIFICATIONS — AIR COMPRESSOR	16
TABLE 2C:	SPECIFICATIONS — UNIT WEIGHT AND DIMENSIONS	16
TABLE 2D:	GENUINE VANGUARD™ OIL CHARACTERISTICS	16

SECTION 3: INSTALLATION..... 17

3.1	AIR N ARC I-300 SERIES ALL-IN-ONE MACHINE PACKAGE RECEIPT/INSPECTION	17
3.2	GENERAL OVERVIEW OF INSTALLATION	17
3.2.1	MACHINE CLEARANCE ALLOWANCE	18
3.3	MOUNTING THE MACHINE	18
3.3.1	MACHINE STABILIZATION	18
3.4	CONNECTING THE FUEL SYSTEM	22
3.5	CONNECTING AND APPLYING THE HYDRAULIC SYSTEM	22
3.6	INSTALLING THE REMOTE CONTROL PANEL	23
3.7	INSTALLING (OPTIONAL) REMOTE AIR TANK	23
3.8	FUEL LINE SIPHON	23

Continued on next page...

SECTION 4: OPERATION 25

4.1	GENERAL INFORMATION	25
4.2	MACHINE START-UP AND SHUTDOWN PROCEDURE.....	26
4.2.1	START-UP FROM MACHINE.....	26
4.2.2	START UP FROM REMOTE CRANE.....	26
4.2.3	MACHINE SHUTDOWN.....	28
4.3	ENGINE THROTTLE CONTROL FUNCTIONS.....	28
4.4	OPERATING THE WELDER.....	29
4.4.1	WELDER OPERATING PROCEDURE.....	29
4.4.1.1	CC (CONSTANT CURRENT) MODE.....	29
4.4.1.2	CV (CONSTANT VOLTAGE) MODE - USING A VOLTAGE SENSING SUITCASE FEEDEROR SPOOL GUN.....	30
4.5	OPERATING THE GENERATOR.....	31
4.6	OPERATING THE COMPRESSOR.....	32
4.7	OPERATING THE BATTERY BOOSTER/CHARGER	32
4.7.1	CONNECTION - DISCONNECTION SEQUENCE AND OPERATION.....	33
4.8	USING THE START OVERRIDE SWITCH TO JUMP-START THE VEHICLE	33
4.9	OPERATING THE HYDRAULIC PUMP.....	34
4.10	EXTREME CONDITION OPERATION	34
4.10.1	COLD WEATHER OPERATION	34
4.10.2	HIGH TEMPERATURE OPERATION	35
4.10.3	HIGH DUST CONTENT OPERATION	36
4.10.4	HIGH ALTITUDE OPERATION	36

SECTION 5: MAINTENANCE 37

5.1	GENERAL INFORMATION	37
5.2	ROUTINE MAINTENANCE SCHEDULE.....	37
	TABLE 5A: MAINTENANCE SCHEDULE	39
5.3	REPLACEMENT PARTS	44
5.4	PARTS REPLACEMENT AND ADJUSTMENT PROCEDURES	44
5.4.1	ADJUSTING THE ENGINE SPEED.....	45
5.4.2	ADJUSTING THE PRESSURE SETTING	45
5.4.3	RE-TENSIONING AND REPLACING THE SERPENTINE DRIVE BELTS	46
5.4.3.1	RE-TENSIONING THE AIR COMPRESSOR SERPENTINE DRIVE BELT.....	46
5.4.3.2	REPLACING THE AIR COMPRESSOR SERPENTINE DRIVE BELT.....	46

Continued on next page...

SECTION 5: MAINTENANCE (CONTINUED)

5.4.3.3	RE-TENSIONING THE GENERATOR / HYDRAULIC PUMP SERPENTINE DRIVE BELT	48
5.4.3.4	REPLACING THE GENERATOR / HYDRAULIC PUMP SERPENTINE DRIVE BELT	49
5.4.3.5	RE-TENSIONING THE ENGINE HYDRAULIC PUMP DRIVE BELTS.....	51
5.4.4	SERVICING THE SYSTEM FUSES AND CIRCUIT BREAKERS	51
5.5	STORAGE AND INTERMITTENT USE	54
5.5.1	INTERMITTENT USE.....	54
5.5.2	LONG TERM STORAGE.....	54

SECTION 6: TROUBLESHOOTING55

6.1	GENERAL INFORMATION	55
6.2	TROUBLESHOOTING GUIDE	56

SECTION 7: ILLUSTRATED PARTS LIST 65

7.1	PARTS ORDERING PROCEDURE	65
	TABLE 7A: RECOMMENDED SPARE PARTS LIST	66
7.2	AIR N ARC I-300 SYSTEMS ASSEMBLIES	68
7.3	AIR STORAGE ASSEMBLY	70
7.4	COMPRESSOR AND PARTS ASSEMBLY (1 OF 2)	72
7.4	COMPRESSOR AND PARTS ASSEMBLY (2 OF 2)	74
7.5	COOLING SYSTEM	76
7.6	FRAME AND CANOPY ASSEMBLY (1 OF 2)	78
7.6	FRAME AND CANOPY ASSEMBLY (2 OF 2)	80
7.7	INSTRUMENT PANEL	82
7.8	GENERATORS AND PARTS.....	84
7.9	HYDRAULIC PUMP ASSEMBLY (1 OF 3)	86
7.9	HYDRAULIC PUMP ASSEMBLY OPEN CENTER (2 OF 3)	88
7.9	HYDRAULIC PUMP ASSEMBLY CLOSED CENTER (3 OF 3)	90
7.10	ENGINE AND DRIVE PARTS (1 OF 2).....	92
7.10	ENGINE AND DRIVE PARTS (2 OF 2).....	96
7.11	ELECTRICAL SYSTEM	100
7.12	MANIFOLD ASSEMBLY	102
7.13	HYDRAULIC TANK ASSEMBLY	104

Continued on next page...

SECTION 7: ILLUSTRATED PARTS LIST (CONTINUED)

7.14 DECAL AND PLATE LOCATIONS (1 OF 4)..... 106

7.14 DECAL AND PLATE LOCATIONS (2 OF 4)..... 107

7.14 DECAL AND PLATE LOCATIONS (3 OF 4)..... 108

7.14 DECAL AND PLATE LOCATIONS (4 OF 4)..... 109

7.15 WIRING DIAGRAM - AIR N ARC I-300 SERIES..... 110

7.16 WIRING DIAGRAM - SWITCHES AND LIGHTS..... 111

7.17 SCHEMATIC DIAGRAM - HYDRO CRANE, O.C., NO TOOL..... 112

7.18 SCHEMATIC DIAGRAM - HYDRO CRANE, C.C., NO TOOL..... 113

7.19 SCHEMATIC DIAGRAM - COMPRESSOR FLOW 114

7.20 HOSE INSTALLATION GUIDE 115

WARRANTY CLAIMS PROCEDURE

CLAIMS PROCESS FOR WARRANTED VANAIR PARTS

This process must be used by owners of Vanair® equipment in situations where a warranted item needs repair or replacement under the terms of the purchase warranty. Do not return items to Vanair without prior authorization from the Vanair Warranty Administrator.

PROCEDURE:

When a customer needs assistance in troubleshooting a system and/or returning parts, follow the steps below.

1. Locate the machine's serial number:

The machine package serial number plate is located inside the machine compartment on the floor near to the generator mounting location (see **Figure W-1**).

The engine and the compressor also have individual serial numbers respectively (see **Figure W-1**). For engine warranty issues, consult the Engine Operator's Manual for the engine's limited warranty details. For particular compressor unit issues, the compressor serial number may be needed. In any case, engine and/or compressor issues can be confirmed using the machine serial number as found in **Figure W-1**.

2. Have a list of the symptoms/condition/malfunctions along with any applicable temperature and pressure readings, and also the number of operational hours available:

Note that the above information will also need to be included on the Return Material

Authorization Form (per **Step #6**); this form is necessary for warranty processing if the warranty claim is deemed valid by the service case review.


3. **Contact the Vanair® Service Department by phone (1-219-879-5100) to speak with a Service Technician.**
4. **Vanair Service will troubleshoot the problem based on the information provided by the customer, and attempt to return the unit to service as quickly as possible.**
5. **If the unit cannot be returned to service, and Vanair determines this matter is a warranty issue, the Service Technician will assign an RMA (Return Material Authorization) number that will provide for the return of the item to Vanair for analysis and a final determination as to the item's warranty status.**

NOTE

The RMA number must be placed on the outside of the package being returned.

6. **Warranty Claims are solicited via a Return Material Authorization (RMA) Form. This form can be obtained via download from the web site, or requested directly from the Vanair Service Department:**

Once a current form has been obtained, follow the instructions given on the form to fill in the information needed. This form is used for the purpose of soliciting a warranty case. All of the field information **except** for the bottom section block fields, which includes

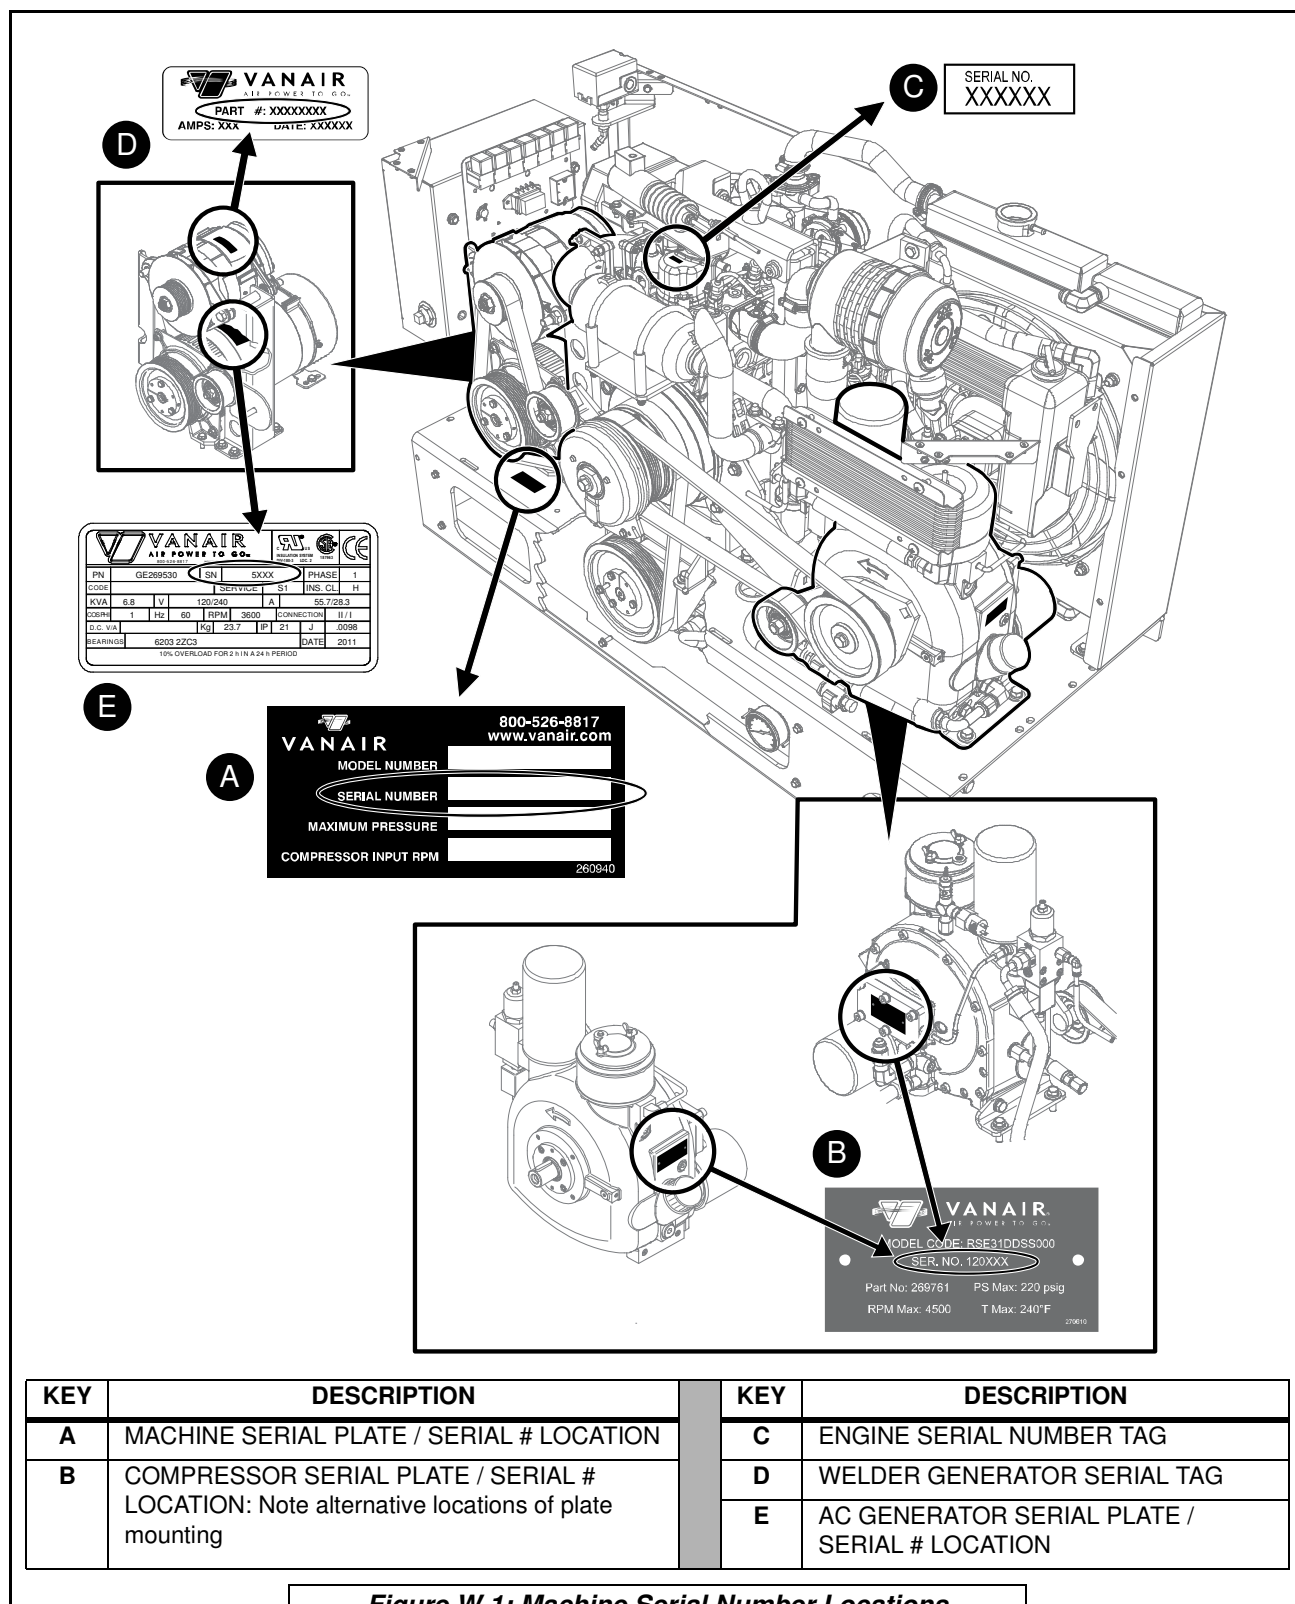

Disposition of Goods, Notifications and Additional Notes, will be required.

Customers have 30 days after the RMA number is issued to return the item. If the part is not returned within this period, the RMA is void and any claims will be denied.

NOTE

All labor claims or invoices must be approved by the Vanair Warranty Administrator prior to starting repair work along with the cost of the repair. All paper work associated with the returned item and warranty repair cost must reference the RMA number issued against the part, and be forwarded to Vanair within 30 days of the completion of work.

Before sending a warranty part to a customer, Vanair® will need a P.O. or credit card number to cover the cost of the part and shipping. After the part is analyzed and

deemed to be covered under warranty, Vanair will issue credit to the customer. All parts eligible for warranty must have the RMA number on the invoice at the time of purchase.

No items can be returned "freight collect". Freight costs will be addressed at the time the claim is closed. The customer pays any additional costs for warranty parts delivered through expedited services (i.e., Next Day, Second Day).

VANAIR WILL NEVER ACCEPT ANY INVOICES FOR PARTS RETURNED: ANY PARTS RETURNED VIA INVOICE WILL BE RETURNED FREIGHT COLLECT: NO PARTS ARE TO BE RETURNED FREIGHT COLLECT!



Vanair Mfg., Inc. strives to continuously improve its customer service. Please forward any questions, comments, or suggestions to Vanair Service (219-879-5100, ext. 400) or e-mail us (service@vanair.com).

BLANK PAGE

SECTION 1: SAFETY

1.1 GENERAL INFORMATION

The products provided by Vanair® Manufacturing, Inc., are designed and manufactured for safe operation and maintenance. But it is ultimately the responsibility of the users and maintainers for safe use of this equipment. Part of this responsibility is to read and be familiar with the contents of this manual before operation or performing maintenance actions.

 IMPORTANT

<p>It is mandatory that all operators read this manual before operating or servicing the Air N Arc I-300 Series All-In-One Power System. Failure to do so could result in death, bodily injury or damage to equipment.</p>

1.2 DANGERS, WARNINGS, CAUTIONS, AND NOTES

Specific safety and operation information given throughout the manual may be presented within a separate bordered frame and header for easy and clear identification. Those issues that regard safety measures are also tagged with the international safety symbol (see **Section 1.3**), and should always be taken into consideration before performing an operation. Specific definitions of these bordered instructions are as follows:



DANGER

Identifies actions or conditions which will cause death, severe injury, equipment damage or destructive malfunctions.



WARNING

Identifies actions or conditions which may cause death, severe injury, equipment damage or destructive malfunctions.



CAUTION

Identifies actions or conditions which will or can cause injuries, equipment damage or malfunctions.

IMPORTANT

Additional information (or existing information) which must be brought to the attention of operators/maintainers affecting safety, operation, maintenance, or warranty requirements.

NOTE

Additional information (or existing information) which should be brought to the attention of operators/maintainers affecting safety, operation, maintenance, or warranty requirements.

1.3 INTERNATIONAL SAFETY

SYMBOL -

The symbols shown and defined in **Section 1: Safety** are used throughout this manual to call attention to and identify possible hazards.

The international warning symbol shown above is used on all decals, labels and signs that concern information pertaining to bodily harm. When you see the international warning symbol, **pay extremely careful attention**, and follow the given instructions or indications to avoid any possible hazard.

1.4 ARC WELDING HAZARDS

1.4.1 ELECTRICAL SHOCK CAN KILL



Touching live electrical parts can cause fatal shocks or severe burns. The electrode and work circuit is electrically live whenever the output is on. The input power circuit and machine internal circuits are also live when power is on. In semi-automatic or automatic wire welding, the wire, wire reel, drive roll housing, and all metal parts touching the welding wire are electrically live. Incorrectly installed or improperly grounded equipment is a hazard.

DO NOT weld with the electrode holder connected to the negative (-) port, and the work piece connected to the vehicle: Bodily harm and equipment damage may occur.

DO NOT touch live electrical parts.

Wear dry, hole-free insulating gloves and body protection.

Insulate yourself from work and ground using dry insulating mats or covers big enough to prevent any physical contact with the work or ground.

DO NOT use AC output in damp areas, if movement is confined, or if there is a danger of falling.

Additional safety precautions are required when working in electrically hazardous conditions such as in damp locations or while wearing wet clothing; on metal structures such as floors, gratings, or scaffolds; when in cramped positions such as sitting, kneeling, or lying; or when there is a high risk of unavoidable or accidental contact with the work piece or ground.

DO NOT work alone!

Disconnect input power or stop engine before installing or servicing this equipment. Lockout/tag out input power according to OSHA29 CFR1910.147 (see **Section 1.10, Principal Safety Standards**).

Properly install and ground this equipment according to its Owner's Manual and national, state, and local codes.

Always verify the supply ground: check and ensure that input power cord ground wire is properly connected to ground terminal in disconnect box or that cord plug is connected to a properly grounded receptacle outlet.

When making input connections, attach proper grounding conductor first and double-check connections.

Frequently inspect input power cord for damage or bare wiring; replace cord immediately if damaged—bare wiring can kill.

Turn off all equipment when not in use.

DO NOT use worn, damaged, undersized, or poorly spliced cables.

DO NOT drape cables over your body.

If earth grounding of the work piece is required, ground it directly with a separate cable.

DO NOT touch electrode if you are in contact with the work, ground, or another electrode from a different machine.

Use only well-maintained equipment. Repair or replace damaged parts at once. Maintain unit according to manual.

DO NOT touch electrode holders connected to two welding machines at the same time

since double open-circuit voltage will be present.

Wear a safety harness if working above floor level.

Keep all panels and covers securely in place.

Clamp work cable with good metal-to-metal contact to work piece or work table as near the weld as practical.

Insulate work clamp when not connected to workpiece to prevent contact with any metal object.

DO NOT connect more than one electrode or work cable to any single weld output terminal.

1.4.2 **⚠ FUMES AND GASSES CAN BE HAZARDOUS**



Welding produces fumes and gasses. Breathing these fumes and gasses can be hazardous to your health.

Keep your head out of the fumes. **DO NOT** breathe the fumes.

If inside, ventilate the area and/or use local forced ventilation at the arc to remove welding fumes and gasses.

If ventilation is poor, wear an approved air-supplied respirator.

Read and understand the Material Safety Data Sheets (MSDS's) and the manufacturer's instructions for metals, consumables, coatings, cleaners, and degreasers.

Work in a confined space only if it is well ventilated, or while wearing an air-supplied respirator. Always have a trained watch person nearby.


Welding fumes and gasses can displace air and lower the oxygen level causing injury or death. Be sure the breathing air is safe.

DO NOT weld in locations near degreasing, cleaning, or spraying operations.

The heat and rays of the arc can react with vapors to form highly toxic and irritating gases.

DO NOT weld on coated metals, such as galvanized, lead, or cadmium-plated steel, unless the coating is removed from the weld area, the area is well-ventilated, and while wearing an air-supplied respirator. The coatings and any metals containing these elements can give off toxic fumes if welded.


1.4.3 **⚠ BUILD UP OF GAS CAN INJURE OR KILL**

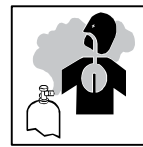

Shut off shielding gas supply when not in use.


Always ventilate confined spaces or use approved air-supplied respirator.

1.4.4 **⚠ ENCLOSED SPACES CAN CAUSE A BUILD-UP OF NOXIOUS FUMES AND OVERHEATING**

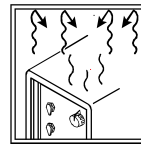

DO NOT use in enclosed spaces where deadly exhaust gasses can build up and machine can overheat, causing fire.

1.4.5 **⚠ ARC RAYS CAN BURN EYES AND SKIN**

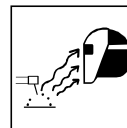

Arc rays from the welding process produce intense visible and invisible (ultraviolet and infrared) rays that can burn eyes and skin. Sparks fly off from the weld.

Wear an approved welding helmet fitted with a proper shade of filter lenses to protect your face and eyes from arc rays and sparks when welding or watching.

(See ANSI Z49.1 and Z87.1 listed in Safety Standards). Wear approved safety glasses with side shields under your helmet.

Use protective screens or barriers to protect others from flash, glare, and sparks; warn others not to watch the arc.

Wear protective clothing made from durable, flame-resistant material (leather, heavy cotton, or wool) and foot protection.

1.4.6 **WELDING CAN CAUSE FIRE AND EXPLOSION**



Welding on closed containers, such as tanks, drums, or pipes, can cause them to blow up. Sparks can fly off from the welding arc. The flying sparks, hot workpiece, and hot equipment can cause fires and burns. Accidental contact of electrode to metal objects can cause sparks, explosion, overheating, or fire. Check and be sure the area is safe before doing any welding.

Remove all flammables within 35 ft (10.7 m) of the welding arc. If this is not possible, tightly cover them with approved covers.

DO NOT weld where flying sparks can strike flammable material.

Protect yourself and others from flying sparks and hot metal.

Be alert that welding sparks and hot materials from welding can easily go through small cracks and openings to adjacent areas.

Watch for fire, and keep a fire extinguisher nearby.

Be aware that welding on a ceiling, floor, bulkhead, or partition can cause fire on the hidden side.

DO NOT weld on closed containers such as tanks, drums, or pipes, unless they are properly prepared according to AWSF4.1 (See **Section 1.10, Principal Safety Standards**).

Connect ground cable as close to the welding area as practical to prevent welding current from traveling long, possibly unknown paths and causing electric shock, sparks, and fire hazards.

DO NOT use welder to thaw frozen pipes.


Remove stick electrode from holder or cut off welding wire at contact tip when not in use.

Wear oil-free protective garments such as leather gloves, heavy shirt, cuffless trousers, boots, and a cap.

Remove any combustibles, such as a butane lighter or matches, from your person before doing any welding.

Follow requirements in OSHA1910.252 (a) (2) (iv) and NFPA 51B for hot work and have a fire watcher and extinguisher nearby.

1.4.7 **FLYING METAL CAN INJURE EYES**



Sparks and flying metal can be caused by welding, chipping, wire brushing, and grinding. As welds cool, they can throw off slag.

Wear approved safety glasses with side shields even under your welding helmet.


1.4.8 **HOT PARTS CAN CAUSE SEVERE BURNS**



DO NOT touch hot parts bare handed.

Allow cooling period before working on equipment.

1.4.9 **NOISE CAN DAMAGE HEARING**

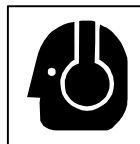

To handle hot parts, use proper tools and/or wear heavy, insulated welding gloves and clothing to prevent burns.

Noise from some processes or equipment can damage hearing. Wear approved ear protection if noise level is high.

1.4.10 **MAGNETIC FIELDS CAN AFFECT PACEMAKERS**



Pacemaker wearers keep away. Wearers should consult their doctor before going near

arc welding, gouging, or spot welding operations.

Shielding gas cylinders contain gas under high pressure. If damaged, a cylinder can explode. Since gas cylinders are normally part of the welding process, be sure to treat them carefully.

1.4.11 **▲ CYLINDERS CAN EXPLODE IF DAMAGED**



Protect compressed gas cylinders from excessive heat, mechanical shocks, physical damage, slag, open flames, sparks, and arcs.

Install cylinders in an upright position by securing to a stationary support or cylinder rack to prevent falling or tipping.

Keep cylinders away from any welding or other electrical circuits.

Never drape a welding torch over a gas cylinder.

Never allow a welding electrode to touch any cylinder.

Never weld on a pressurized cylinder—explosion will result.

Use only correct shielding gas cylinders, regulators, hoses, and fittings designed for the specific application; maintain them and associated parts in good condition.

Turn face away from valve outlet when opening cylinder valve.

Keep protective cap in place over valve except when cylinder is in use or connected for use.

Use the right equipment, correct procedures, and sufficient number of persons to lift and move cylinders.

Read and follow instructions on compressed gas cylinders, associated equipment, and Compressed Gas Association (CGA) publication P-1 listed in Safety Standards.

1.5 ENGINE HAZARDS




IMPORTANT



Operator must be familiar with all safety precautions listed in the Engine Operator's Manual, in addition to the safety issues listed in this section.

1.5.1 **▲ BATTERY EXPLOSION CAN BLIND**

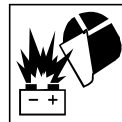

Always wear a face shield, rubber gloves, and protective clothing when working on a battery.

Stop engine before disconnecting or connecting battery cables or servicing battery.

DO NOT allow tools to cause sparks when working on a battery.

DO NOT use weld mode to charge batteries or jump start vehicles.

Observe correct polarity (+ and -) on batteries.

Disconnect negative (-) cable first and connect it last.

1.5.2 **▲ FUEL CAN CAUSE FIRE OR EXPLOSION**



Stop engine and let it cool down before checking or adding fuel.

Always keep nozzle in contact with tank when fueling.

DO NOT mix gasoline or alcohol with diesel fuel.

DO NOT add fuel while smoking or if unit is near any sparks or open flames.

DO NOT overfill tank—allow room for fuel to expand.

DO NOT spill fuel. If fuel is spilled, clean up before starting engine.

Dispose of rags in a fireproof container.

1.5.3 **▲ MOVING PARTS CAN CAUSE INJURY**



Keep away from fans, belts, and rotors. Keep all doors, panels, covers, and guards closed and securely in place.

Stop engine before installing or connecting unit.

Have only qualified people remove doors, panels, covers, or guards for maintenance and troubleshooting as necessary.

Disconnect negative (–) battery cable from battery to prevent accidental starting during servicing.

Keep hands, hair, loose clothing, and tools away from moving parts.

Reinstall doors, panels, covers, or guards when servicing is finished and before starting engine.

Before working on generator, remove spark plugs or injectors to keep engine from kicking back or starting.

Block flywheel so that it will not turn while working on generator components.


1.5.4 **▲ HOT PARTS CAN CAUSE SEVERE BURNS**



DO NOT touch hot parts bare handed.

Allow cooling period before working on equipment.


1.5.5 **▲ ENGINE EXHAUST GASSES CAN KILL**

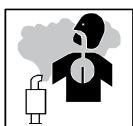

If used in a closed area, vent engine exhaust outside and away from any building air intakes.


Check the fuel system at a well-ventilated, open space.

1.5.6 **▲ ENCLOSED SPACES CAN CAUSE A BUILD-UP OF NOXIOUS FUMES AND OVERHEATING**

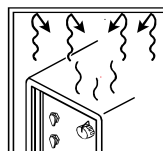

DO NOT use in enclosed spaces where deadly exhaust gasses can build up and machine can overheat, causing fire.

1.5.7 **▲ BATTERY ACID CAN BURN SKIN AND EYES**

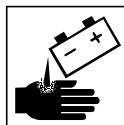

DO NOT tip battery.

Replace damaged battery.

Flush eyes and skin immediately with water.

1.5.8 **▲ ENGINE HEAT CAN CAUSE FIRE**



DO NOT locate unit on, over, or near combustible surfaces or flammables.

Keep exhaust and exhaust pipes way from flammables.

1.5.9 **▲ EXHAUST SPARKS CAN CAUSE FIRE**



Use approved engine exhaust spark arrester in required areas — see applicable codes.


1.6 COMPRESSED AIR HAZARDS

1.6.1 **▲ BREATHING COMPRESSED AIR CAN CAUSE SERIOUS INJURY OR DEATH**




DO NOT use compressed air for breathing. Use only for cutting, gouging, and tools.

1.6.2 **⚠ ENCLOSURED SPACES CAN CAUSE A BUILD-UP OF NOXIOUS FUMES AND OVERHEATING**

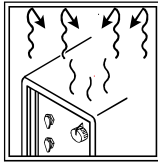

DO NOT use in enclosed spaces where deadly exhaust gasses can build up and machine can overheat, causing fire.


1.6.3 **⚠ COMPRESSED AIR CAN CAUSE INJURY**

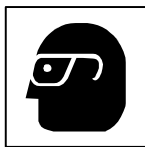

Wear approved safety goggles.

DO NOT direct air stream toward self or others.

1.6.4 **⚠ TRAPPED AIR PRESSURE AND WHIPPING HOSES CAN CAUSE INJURY**

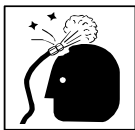

Release air pressure from tools and system before servicing, adding or changing attachments, or opening compressor oil drain or oil fill cap.

1.6.5 **⚠ HOT METAL FROM AIR ARC CUTTING AND GOUGING CAN CAUSE FIRE OR EXPLOSION**



DO NOT cut or gouge near flammables.

Watch for fire; keep extinguisher nearby.

1.6.6 **⚠ HOT PARTS CAN CAUSE SEVERE BURNS**



DO NOT touch hot parts bare handed.

Allow cooling period before working on equipment.

1.6.7 **⚠ READ INSTRUCTIONS**




Read Owner's Manual before using or servicing unit.

Stop engine and release air pressure before servicing.

Use only genuine Air N Arc replacement parts.

1.7 HYDRAULIC PUMP HAZARDS


1.7.1 **⚠ CONTENTS UNDER PRESSURE**

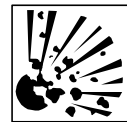

DO NOT operate the hydraulic system if a leak is present. Serious injury may result.

Hydraulic systems operate under very high-pressure. Hydraulic fluid escaping from a pressurized system can penetrate unprotected body tissue. **DO NOT** inspect for hydraulic leaks with bare hands or other exposed body parts. As a minimum, wear leather gloves prior to inspecting for leaks and use cardboard or wood. If leaks are present, relieve pressure and allow system to cool prior to servicing. If injured by escaping hydraulic oil, contact a physician immediately. Serious complications may arise if not treated immediately. If you have questions regarding inspecting for hydraulic leaks, please contact Vanair® prior to servicing.

1.7.2 **⚠ HEED PRESSURE LIMITS AND RECOMMENDATIONS**

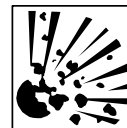

Increasing hydraulic pressure beyond the recommendations may result in serious damage to the pump and system or serious personal injury and may void the Vanair Warranty. If you have questions concerning hydraulic pressures or testing procedures, please contact Vanair before attempting the test procedures or making adjustments.

1.7.3 HOSE AND TUBING INSPECTION



Hydraulic hoses and tubing must be inspected on a daily basis for leaks, cuts, abrasions, damage and improper clearance along any mounting frame for hidden damage before the unit is put into service. Replace damaged hoses or hoses you suspect are damaged before the system is returned to service! Hoses must be replaced every two years. Failure to properly inspect and maintain the system may result in serious injury.

1.7.4 HOSE AND TUBING REPLACEMENT

Use correct hoses, fittings, and adapters with the correct SAE rating when replacing hoses to prevent possible serious injury. Always replace hoses, fittings, and adapters with replacements that have a proper, suitable, working pressure rating. Replacement hoses must be of the correct length and must comply with the hose manufacturer's and Vanair's installation guidelines and recommendations.

Hydraulic hoses have the SAE ratings marked on the hose to assist you in selecting the correct hose. The same manufacturer must supply any replacement hydraulic hoses and fitting assemblies. As an example: Brand "X" hose and brand "Y" fitting will not normally be compatible. No "Twist" is allowed in the hydraulic hoses. "Twist" may result in premature hose failure. This can cause serious injury. Please contact Vanair® for assistance when required.

1.7.5 HOT PARTS CAN CAUSE SEVERE BURNS



Hydraulic systems are hot. **DO NOT TOUCH!** Serious personal injury may result from hot oil. When you have completed working on the hydraulic system, thoroughly clean any spilled oil from the equipment. **DO NOT** spill any hydraulic fluids on the ground. Clean

any hydraulic fluids from your skin as soon as you have completed maintenance and repairs. Dispose of used oil and system filters as required by law.

1.7.6 HYDRAULIC CYLINDERS MAY HOLD A FUNCTION IN POSITION EVEN WHEN THE PUMP IS OFF

Hydraulic cylinders can be holding a function in a certain position when the pump is OFF. An example of this is a function being held in the lift or partial lift position by the cylinders. If a hydraulic line is removed or the hydraulic circuits or controls are being worked on, gravity may allow the function being held in position to drop. All workers and personnel must remain clear of these areas when working on or operating the hydraulic system. Block and secure all devices and functions which apply before beginning work or operation. Failure to comply with this can result in serious injury or death.

1.7.7 HYDRAULIC PIPING REPLACEMENT MUST CONFORM TO SAEJ1065 SPECIFICATIONS


Any hydraulic pipe that is replaced must conform to SAE J1065 specifications. If incorrect hydraulic pipe is installed, the hydraulic system may fail, causing serious injury. Damaged or leaking fittings, pipes or hoses must be replaced before the system is returned to service.

1.7.8 DO NOT HEAT HYDRAULIC PIPE



DO NOT heat hydraulic pipe. The carbon content of this steel tube is such that if heated for bending, and either water or air quenched, the pipe may lose its ductility and thereby be subject to failure under high-pressure conditions. Serious injury can result. Damaged or leaking pipes must be replaced before the system is returned to service. Please contact Vanair® if you require assistance or have questions.

1.7.9 **⚠ RELIEVE HYDRAULIC SYSTEM PRESSURE BEFORE REMOVING ANY COMPONENTS FROM THE SYSTEM**

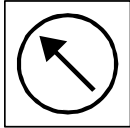

All hydraulic pressure must be relieved from the hydraulic system prior to removing any components from the system. To relieve the hydraulic pressure from the hydraulic system, turn off the motor and operate the control panel with the key in the ON position. Failure to comply can result in serious injury. If you have any questions concerning relieving the hydraulic pressure from the system, please contact the Vanair® Service Department.

1.7.10 **⚠ LIFTING COMPONENTS**



Hydraulic components can be heavy. Use caution while lifting these components. Serious personal injury can be avoided with proper handling of the components.

Use lifting bail to lift unit and properly installed accessories only.

Lift and support unit only with proper equipment and correct procedures.

If using lift forks to move unit, be sure forks are long enough to extend beyond opposite side of unit.

1.7.11 **⚠ HYDRAULIC TEST GAUGES**

Please contact Vanair if you require assistance, when performing hydraulic test procedures, use the proper hydraulic gauges. Installing an incorrect test gauge could result in serious injury if the gauge fails. Use properly rated hydraulic hoses to allow the test gauge to be read away from moving parts and functions.

1.7.12 **⚠ SYSTEM MODIFICATION PROHIBITED**



A Vanair® pump or pump control must not be modified in any way without authorization from Vanair. Modifications may not comply with safety standards, including ANSI safety standards, and may result in serious personal injury. Please contact Vanair if you require assistance.

1.7.13 **⚠ FALLING UNIT CAN CAUSE INJURY**



DO NOT enter under hydraulic supported equipment unless they are fully supported or blocked. Failure to follow this procedure can result in serious injury or death.

1.7.14 **⚠ REPLACE DAMAGED SAFETY DECALS**

Any Vanair pump safety decals must be replaced anytime they are damaged, missing, or cannot be read clearly. Failure to have proper decals in place can result in serious injury or death. If machine package requires safety decals, please contact Vanair for replacement safety decals, at no charge.) Refer to **Section 7.14** for proper decal locations.

1.7.15 **⚠ POST-SERVICING OPERATION**

Be sure everyone is clear of the area around the hydraulic system before operating after servicing. Remain attentive at all times when operating to check your work until you are completely sure it is safe to return to service. Failure to heed this warning may result in serious personal injury or death.

1.7.16 WEAR PROPER PROTECTIVE EQUIPMENT



Wear the proper protective clothing when operating, servicing or maintaining the hydraulic system or the Vanair pump. Wear the correct protective gear, safety glasses, gloves, and safety shoes. Serious injury can result without proper protective gear.

1.7.17 KEEP CLEAR OF MOVING PARTS



Make sure to keep hands and feet and other parts of your body clear of revolving or moving parts. Failure to comply can cause serious injury.

1.7.18 CONFINE LOOSE CLOTHING AND HAIR; REMOVE WATCHES, RINGS OR JEWELRY DURING OPERATION

DO NOT wear watches, rings, or jewelry while working with electrical and mechanical equipment. These items can be hazardous and can cause serious and painful injuries if they come into contact with electrical wires, moving parts, or hydraulic equipment.

1.8 ADDITIONAL SYMBOLS FOR INSTALLATION, OPERATION AND MAINTENANCE

1.8.1 FALLING UNIT CAN CAUSE INJURY




Use lifting bail to lift unit and properly installed accessories only.

Lift and support unit only with proper equipment and correct procedures.

If using lift forks to move unit, be sure forks are long enough to extend beyond opposite side of unit.


1.8.2 OVERHEATING CAN DAMAGE MOTORS



Turn off or unplug equipment before starting or stopping engine.

DO NOT let low voltage and frequency caused by low engine speed damage electric motors.

1.8.3 FLYING SPARKS CAN CAUSE INJURY

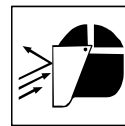


Wear a face shield to protect eyes and face.

Shape tungsten electrode only on grinder with proper guards in a safe location wearing proper face, hand, and body protection.

Sparks can cause fires—keep flammables away.

1.8.4 OVERUSE CAN CAUSE OVERHEATING

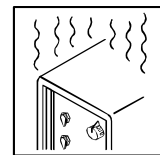


Allow cooling period; follow rated duty cycle.

Reduce current or reduce duty cycle before starting to weld again.

DO NOT block or filter airflow to unit.

1.8.5 ENCLOSED SPACES CAN CAUSE A BUILD-UP OF NOXIOUS FUMES AND OVERHEATING

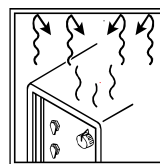

DO NOT use in enclosed spaces where deadly exhaust gasses can build up and machine can overheat, causing fire.

1.8.6 ⚠ TILTING OF TRAILER CAN CAUSE INJURY

Use tongue jack or blocks to support weight.

Properly install unit onto trailer according to instructions supplied with trailer.

1.8.7 ⚠ READ INSTRUCTIONS

Use only genuine Air N Arc replacement parts.

Perform engine and air compressor (if applicable) maintenance and service according to this manual and the engine/air compressor (if applicable) manuals.

1.8.8 ⚠ H. F. RADIATION CAN CAUSE INTERFERENCE

High-frequency (H.F.) can interfere with radio navigation, safety services, computers, and communications equipment.


Have only qualified persons familiar with electronic equipment perform this installation.

The user is responsible for having a qualified electrician promptly correct any interference problem resulting from the installation.

If notified by the FCC about interference, stop using the equipment at once.

Have the installation regularly checked and maintained.

Keep high-frequency source doors and panels tightly shut, keep spark gaps at correct setting, and use grounding and shielding to minimize the possibility of interference.

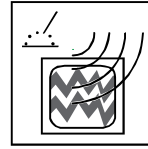1.8.9 ⚠ ARC WELDING CAN CAUSE INTERFERENCE

Electromagnetic energy can interfere with sensitive electronic equipment such as microprocessors, computers, and computer-driven equipment such as

robots.

Ensure all equipment in the welding area is electromagnetically compatible.

To reduce possible interference, keep weld cables as short as possible, close together, and down low, such as on the floor.

Locate welding operation 100 meters from any sensitive electronic equipment.

Ensure this welding machine is installed and grounded according to this manual.

If interference still occurs, the user must take extra measures such as moving the welding machine, using shielded cables, using line filters, or shielding the work area.

1.9 ⚠ CALIFORNIA PROPOSITION 65 WARNINGS

Welding or cutting equipment produces fumes or gasses which contain chemicals known to the State of California to cause birth defects and, in some cases, cancer. (California Health & Safety Code Section 25249.5 et seq.)

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

For Gasoline Engines: Engine exhaust contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

For Diesel Engines: Diesel engine exhaust and some of its constituents are known to

the State of California to cause cancer, birth defects, and other reproductive harm.

1.10 PRINCIPAL SAFETY STANDARDS

Safety in Welding, Cutting, and Allied Processes, ANSI Standard Z49.1, from Global Engineering Documents (phone: 1-877-413-5184, website: www.global.ihs.com).

Recommended Safe Practices for the Preparation for Welding and Cutting of Containers and Piping, American Welding Society Standard AWSF4.1, from Global Engineering Documents (phone: 1-877-413-5184, web site: www.global.ihs.com).

National Electrical Code, NFPA Standard 70, from National Fire Protection Association, P.O. Box 9101, 1 Battery March Park, Quincy, MA 02269-9101 (phone: 617-770-3000, web site: www.nfpa.org and www.sparky.org).

Safe Handling of Compressed Gases in Cylinders, CGA Pamphlet P-1, from Compressed Gas Association, 1735 Jefferson Davis Highway, Suite 1004, Arlington, VA 22202-4102 (phone: 703-412-0900, web site: www.cganet.com).

Code for Safety in Welding and Cutting, CSA Standard W117.2, from Canadian Standards Association, Standards Sales, 178 Rexdale Boulevard, Rexdale, Ontario, Canada M9W 1R3 (phone: 800-463-6727 or in Toronto 416-747-4044, web site: www.csainternational.org).

Practice For Occupational And Educational Eye And Face Protection, ANSI Standard Z87.1, from American National Standards Institute, 11 West 42nd Street, New York, NY 10036-8002 (phone: 212-642-4900, web site: www.ansi.org).

Standard for Fire Prevention During Welding, Cutting, and Other Hot Work, NFPA Standard 51B, from National Fire Protection

Association, P.O. Box 9101, 1 Battery March Park, Quincy, MA 02269-9101 (phone: 617-770-3000, web site: www.nfpa.org).

OSHA, Occupational Safety and Health Standards for General Industry, Title 29, Code of Federal Regulations (CFR), Part 1910, Subpart Q, and Part 1926, Subpart J, from U.S. Government Printing Office, Superintendent of Documents, P.O. Box 371954, Pittsburgh, PA 15250 (there are 10 Regional Offices; phone for Region 5, Chicago, is 312-353-2220, web site: www.osha.gov).

1.11 EMF INFORMATION

Considerations About Welding And The Effects Of Low Frequency Electric And Magnetic Fields Welding current, as it flows through welding cables, will cause electromagnetic fields.

There has been and still is some concern about such fields. However, after examining more than 500 studies spanning seventeen years of research, a special blue ribbon committee of the National Research Council concluded that: "The body of evidence, in the committee's judgment, has not demonstrated that exposure to power-frequency electric and magnetic fields is a human-health hazard." However, studies are still going forth and evidence continues to be examined. Until the final conclusions of the research are reached, you may wish to minimize your exposure to electromagnetic fields when welding or cutting.

To reduce magnetic fields in the workplace, use the following procedures:

1. Keep cables close together by twisting or taping them.
2. Arrange cables to one side and away from the operator.
3. **DO NOT** coil or drape cables around your body.
4. Keep welding power source and cables as far away from operator as possible.
5. Connect work clamp to workpiece as close to the weld as possible.

About Pacemakers:

Pacemaker wearers consult your doctor before welding or going near welding operations. If cleared by your doctor, then following the above procedures is recommended.

1.12 ⚠ MACHINE CANOPY ACCESS SAFETY SWITCHES

⚠ CAUTION

The machine is not designed to run with the hood open as standard operating procedure. The safety switch bypass is designed to allow for observing machine components in operating condition.

Consult **Figure 1-1**. The Air N Arc I-300 Series machine package is equipped with two safety switches, which will either shut down, or not allow the machine to start, if access doors are bridged. The **hood safety switch** will not allow the machine to start if the hood is open; the hood must be closed in order to start the machine. However if the engine is running, the switch is bypassed, and the hood may be raised without detriment to the operating state of the machine.

NOTE

If the front access panel is opened prior to operation, the machine will crank, but will not start.

If the front access panel is opened while the machine is running, the machine will shut down.

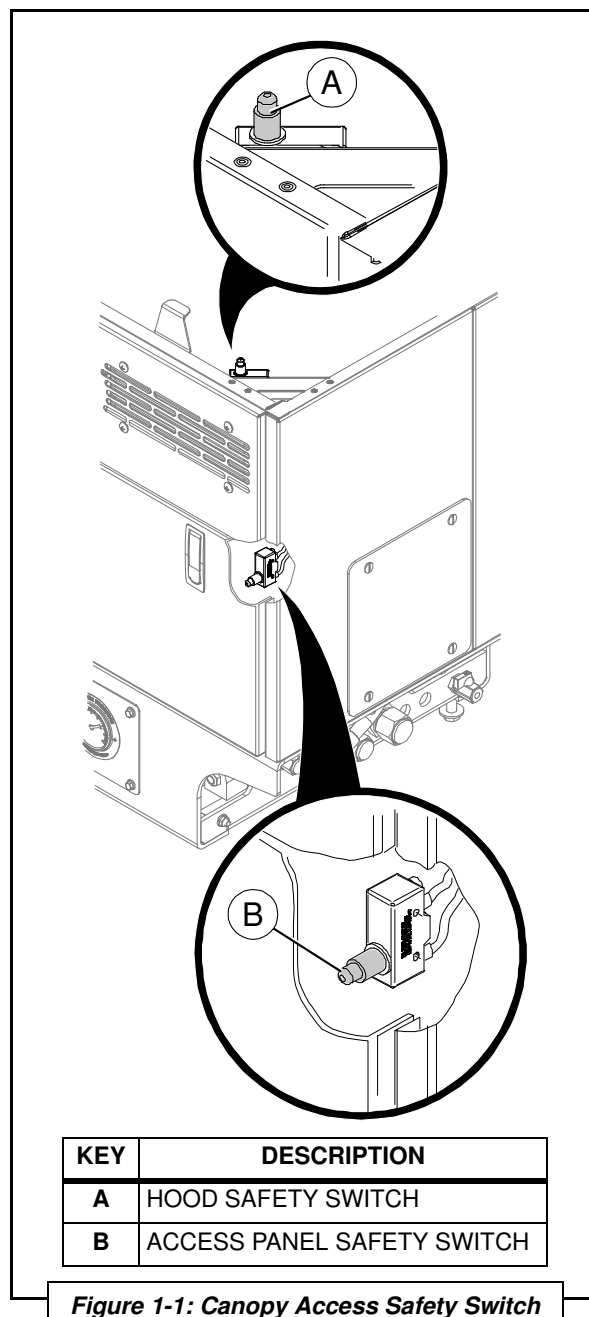



Figure 1-1: Canopy Access Safety Switch

1.13 DISPOSING OF MACHINE FLUIDS



Always dispose of machine fluids under the guidance of all applicable local, regional and/or federal law.

Vanair® encourages recycling when allowed. For additional information, consult the container label of the fluid in question.

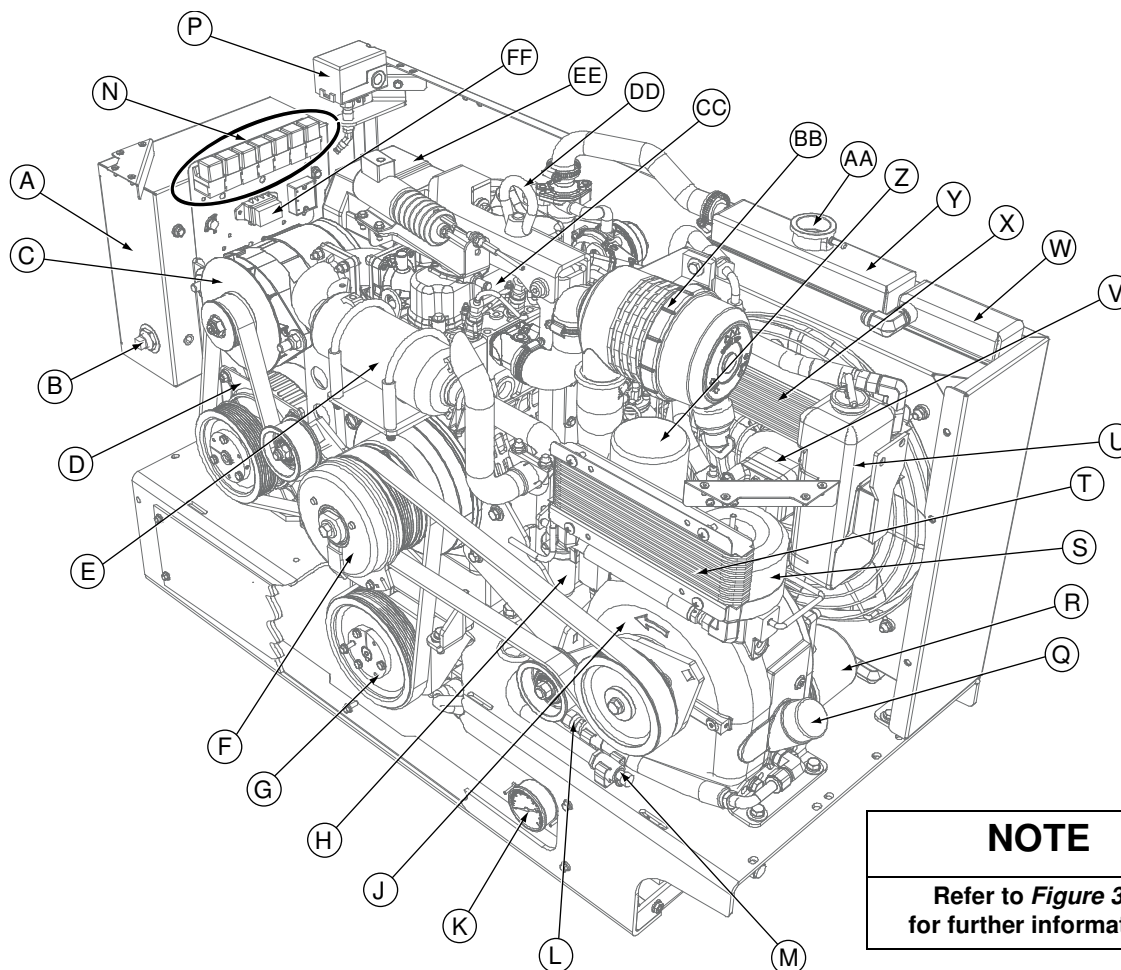

KEY	DESCRIPTION	KEY	DESCRIPTION
A	INSTRUMENT PANEL (May be remotely mounted)	R	COMPRESSOR OIL FILTER
B	AIR OUTLET SERVICE PORTS (x 3; one shown)	S	COMPRESSOR AIR FILTER
C	WELDER GENERATOR	T	ENGINE OIL COOLER
D	AC GENERATOR	U	COOLANT RECOVERY TANK
E	MUFFLER	V	FAN MOTOR
F	CLUTCH	W	COOLER ASSEMBLY: COMPRESSOR RADIATOR
G	HYDRAULIC PISTON PUMP	X	FAN HYDRAULIC SYSTEM COOLER
H	FUEL FILTER	Y	COOLER ASSEMBLY: ENGINE RADIATOR
J	COMPRESSOR UNIT	Z	COMPRESSOR AIR/OIL COALESCER SEPARATOR
K	LOAD SENSE PRESSURE GAUGE (SERVICE)	AA	RADIATOR FILL CAP
L	COMPRESSOR OIL DRAIN TUBE & END CAP	BB	ENGINE AIR FILTER
M	ENGINE OIL DRAIN & END CAP	CC	ENGINE
N	RELAYS (not all relays are shown)	DD	LIFTING BAIL
P	PRESSURE SWITCH	EE	BATTERY
Q	COMPRESSOR FLUID FILL PORT	FF	FUSES (not all fuses are shown)

NOTE: The above figure does not show all major components: For details and part numbers, refer to **Section 7**.

NOTE: For additional engine components, refer to the Engine Operator's Manual.

Figure 2-1: Most Major Machine Component Locations

SECTION 2: SPECIFICATIONS

TABLE 2A: ENGINE, HYDRAULIC SYSTEM, WELDER, AND GENERATOR SPECIFICATIONS

SYSTEM INFORMATION	SPECIFICATION
Engine:	Diesel 25HP ^I
Engine Oil Capacity:	5.5 Quarts 15W40 (Refer to Engine Operator's Manual for Extreme Conditions)
Engine Idle RPM (No Load):	2880
Engine RPM (No Load):	3660
Hydraulic Fan RPM:	2350
Fuel Consumption:	1.25 GPH at Full Engine Speed/Load 9.6 Hour Runtime
Fuel Type:	Diesel Fuel ^{II}
Operating Temperature Limits:	0°F to 110°F (-18°C to 43°C); Cold Weather Kit extends temperature range from 0°F to -40°F (-18°C to -40°C)
Hydraulic Pressure Comp Setting @ Tool Port, Work Valve Closed:	3000
Standby Pressure @ Tool Port, Work Valve Open - Required Only for Closed Center Machines:	350
Hyd Flow @ Idle @ 2000 PSI (100-120°F Hyd Temp for All):	4.1
Hyd Flow @ Full Speed @ 2000 PSI:	6.5
Hyd Flow @ Full Speed @ 0 PSI Hyd:	9.9
Hyd Flow w/ Cmpr Low and High Speed, 0 PSI Hyd:	5.5
Hyd Flow w/ Cmpr Low and High Speed, 2000 PSI Hyd:	2.1
Rated Welder Output:	300A High Frequency DC/CC, DC/CV; 100% Duty Cycle @ 270 Amps
Welding Leads:	25 or 50 Ft Optional
Welder CC Max Volts:	60 min
Welder CC Max Amps:	285 min
Welder CC VDC @ Max Amp:	15
Welder CV Min Volts:	15
Welder CV Max Volts:	40
DC 12 Volt Charge Volts (Idle):	14
DC 12 Volt Boost Volts:	16

^I For specification and requirements regarding the Kubota® 25 HP Diesel Engine, refer to the Engine Operator's Manual.

^{II} Diesel Fuel Specification Type and Sulfur Content% (ppm) used must be compliant with all applicable emission regulations for the area in which the engine is operated.

Engine manufacturer recommends a fuel sulfur content of less than 0.10% (1000 ppm). For fuels with a high sulfur content 0.50% (5000 ppm) to 1.0% (10000 ppm) a more frequent engine oil and oil filter change schedule is needed (approximately half). **DO NOT USE** fuels with a sulfur content greater than 1.0% (10000 ppm). For additional information on fuel for this engine, consult **Section 4.10 (Extreme Condition Operation)**, and the Engine Operator's Manual.

Not recommended for bio-diesel blends over 5%.

Continued on next page

TABLE 2A: ENGINE, HYDRAULIC SYSTEM, WELDER, AND GENERATOR SPECIFICATIONS

SYSTEM INFORMATION	SPECIFICATION
DC 24 Volt Charge Volts:	30
AC Generator:	61 Hz (No Load)
AC Generator 120V RH:	118
AC Generator 120V LH:	118
AC Generator 240V:	238

TABLE 2B: SPECIFICATIONS — AIR COMPRESSOR

COMPRESSOR INFORMATION	SPECIFICATION
Compressor Type:	Single Stage, Oil Injected Rotary Screw
Air Compressor Capacity:	40 CFM @ 175 psi
Inlet Control:	Zero (0) No Load / 100% Load
Air Filter:	Pleated Paper, Dry Type
Oil Filter:	Spin-on Type
Oil Capacity/Type:	New: 3.5 Quarts / Service: 2.5 Quarts [Vanguard™ Premium Synthetic Oil]
Air Tank Capacity:	Four (4) Gallons
Tank Pressure Rating:	200 psi
Safety Relief Valve Setting:	200 psi
Operating Range (ambient):	0° to 110°F (-18°C to 43°C); Cold Weather Kit needed for operating below 0°F (-18°C)
Electrical System:	12 VDC
Cooling System:	Air to Oil Heat Exchanger
Instrument Gauges:	Pressure and Hour Meter
Adjustable Air Pressure Control Settings:	Cut-in Pressure: 100 PSI +/- 5 Cut-out Pressure @ 40 CFM: 135 PSI +/- 15
Air Service Outlets:	Two (2) on Control Panel, One (1) on Machine (tank)

TABLE 2C: SPECIFICATIONS — UNIT WEIGHT AND DIMENSIONS^I

Dimensions	Length	Width	Height	Weight ^{II} (wet)	Weight ^{II} (dry)
Overall Package:	47.5"	21"	33"	980 lbs.	870 lbs.

^I Refer to **Section 3.2.1** for additional space requirements, and **Figure 3-1** for full dimension drawing.

^{II} Weight listed includes battery and fuel tank, but not instrument panel: Add 25 lbs. to weights above for instrument panel.

TABLE 2D: GENUINE VANGUARD™ OIL CHARACTERISTICS

Viscosity:	178 SUS at 100 °F (38 °C)
Flashpoint:	495 °F (257 °C)
Pour point:	-49 °F (-45 °C)
Contains:	Rust and Oxidation Inhibitors
Contains:	Detergents

SECTION 3: INSTALLATION

3.1 AIR N ARC I-300 SERIES ALL-IN-ONE POWER SYSTEM MACHINE PACKAGE RECEIPT/INSPECTION

Upon receipt of the machine package, inspect the exterior of the shipping crate for signs of shipping/transit damage. Any damage should be reported immediately to the shipping company.

NOTE

Before fully unpacking the unit, inspect the component parts, supports and loose-packed parts to ensure that there have been no internal movements of assemblies or components, which may have been damaged during shipment.

Should any damage be discovered during package inspection, contact the shipping company immediately.

NOTE

Contact Vanair® at
(219) 879-5100 / (800) 526-8817
Service Fax: (219) 879-5335
www.vanair.com
to report missing items, incorrect part numbers, or other discrepancies.

3.2 GENERAL OVERVIEW OF INSTALLATION

DISCLAIMER

DO NOT install in any enclosed space without first contacting Vanair.



WARNING

The lifting bail on the I-300 package is rated to the machine weight only. DO NOT overtax the lifting bail.



WARNING

Grounding must consist of a minimum two (2) gauge wire between the instrument panel, the machine, and the truck chassis.



WARNING

ELECTRICAL HAZARD! Be sure the battery is disconnected before starting the installation.

NOTE

Although much of the information given in this installation section is comprehensive, these guidelines should be considered as referential material only, due to the diverse possibilities of the end user's vehicle make, model and year, and the unit model specifications.

NOTE

Install electrical components (circuit breakers, pressure switches, toggle switches, etc.) in locations where exposure to water or moisture will be most minimized.

NOTE

In order to prevent accidental damage to vehicle components (fuel tanks, lines, brake lines, wiring harnesses), note their location before drilling any holes.

When determining the factors involved with the installation of the Air N Arc I-300 Series machine on a vehicle, use this manual in tandem with the vehicle's own manual to aide in determining how the machine and its functions need to integrate with the vehicle's layout and systems.

Refer to **Figures 3-1, 3-2 and 3-3 (if applicable)** for the proper installation and dimensions diagrams, and also the wiring diagrams (see **Sections 7.16 through 7.20**) to assist with machine package installation.

MACHINE LOAD BEARING SURFACE

For particular load-bearing locations, if necessary, additional support may be needed to assure stability of the machine once it is mounted.

IMPORTANT

Mounting surface must be able to bear the weight of the machine.

3.2.1 MACHINE CLEARANCE ALLOWANCE

Refer to **Figure 3-1**. Allowances must be made for proper distance surrounding the machine to allow for adequate air circulation in order to cool the package during operation.

IMPORTANT

Cooling allowance dimensions must include six inches [6"] *minimum* at front and back.

Most importantly a fresh, cool and unhindered air supply must be allowed at the air intake side of machine. In addition, clearance space surrounding the machine is needed for purposes of maintenance and control.

When referring to the machine dimensions given in **Figures 3-1 through 3-3 (if applicable)**, take into account the additional cooling and maintenance space requirements before locating the machine mounting position.

IMPORTANT

The minimum vent air opening area for the Air N Arc I-300 series machine is:

230 in² cold air in

260 in² hot air out

3.3 MOUNTING THE MACHINE

Refer to **Figure 3-1**. Once all of the factors listed in **Section 3.2** have been considered, and the machine placement location has been resolved, the machine must be fully unpacked from its crate mounting.

**WARNING**

Follow all applicable safety recommendations as outlined in **Section 1: Safety** of this manual.

**CAUTION**

Note that improperly-mounted equipment may have the potential to cause harm, and possibly cause damage or undue stress on the equipment.

3.3.1 MACHINE STABILIZATION

Machine should be mounted to vehicle using a minimum of four (4) isolators. Isolators absorb vibration and allow for a complete sealing of the machine to the mounting surface. Isolators are available from Vanair®; order bolt down isolator no. PR271935 (quantity of four). **Do not** permanently bolt machine down until after all instructions given in **Sections 3.3 through 3.7** have been addressed.



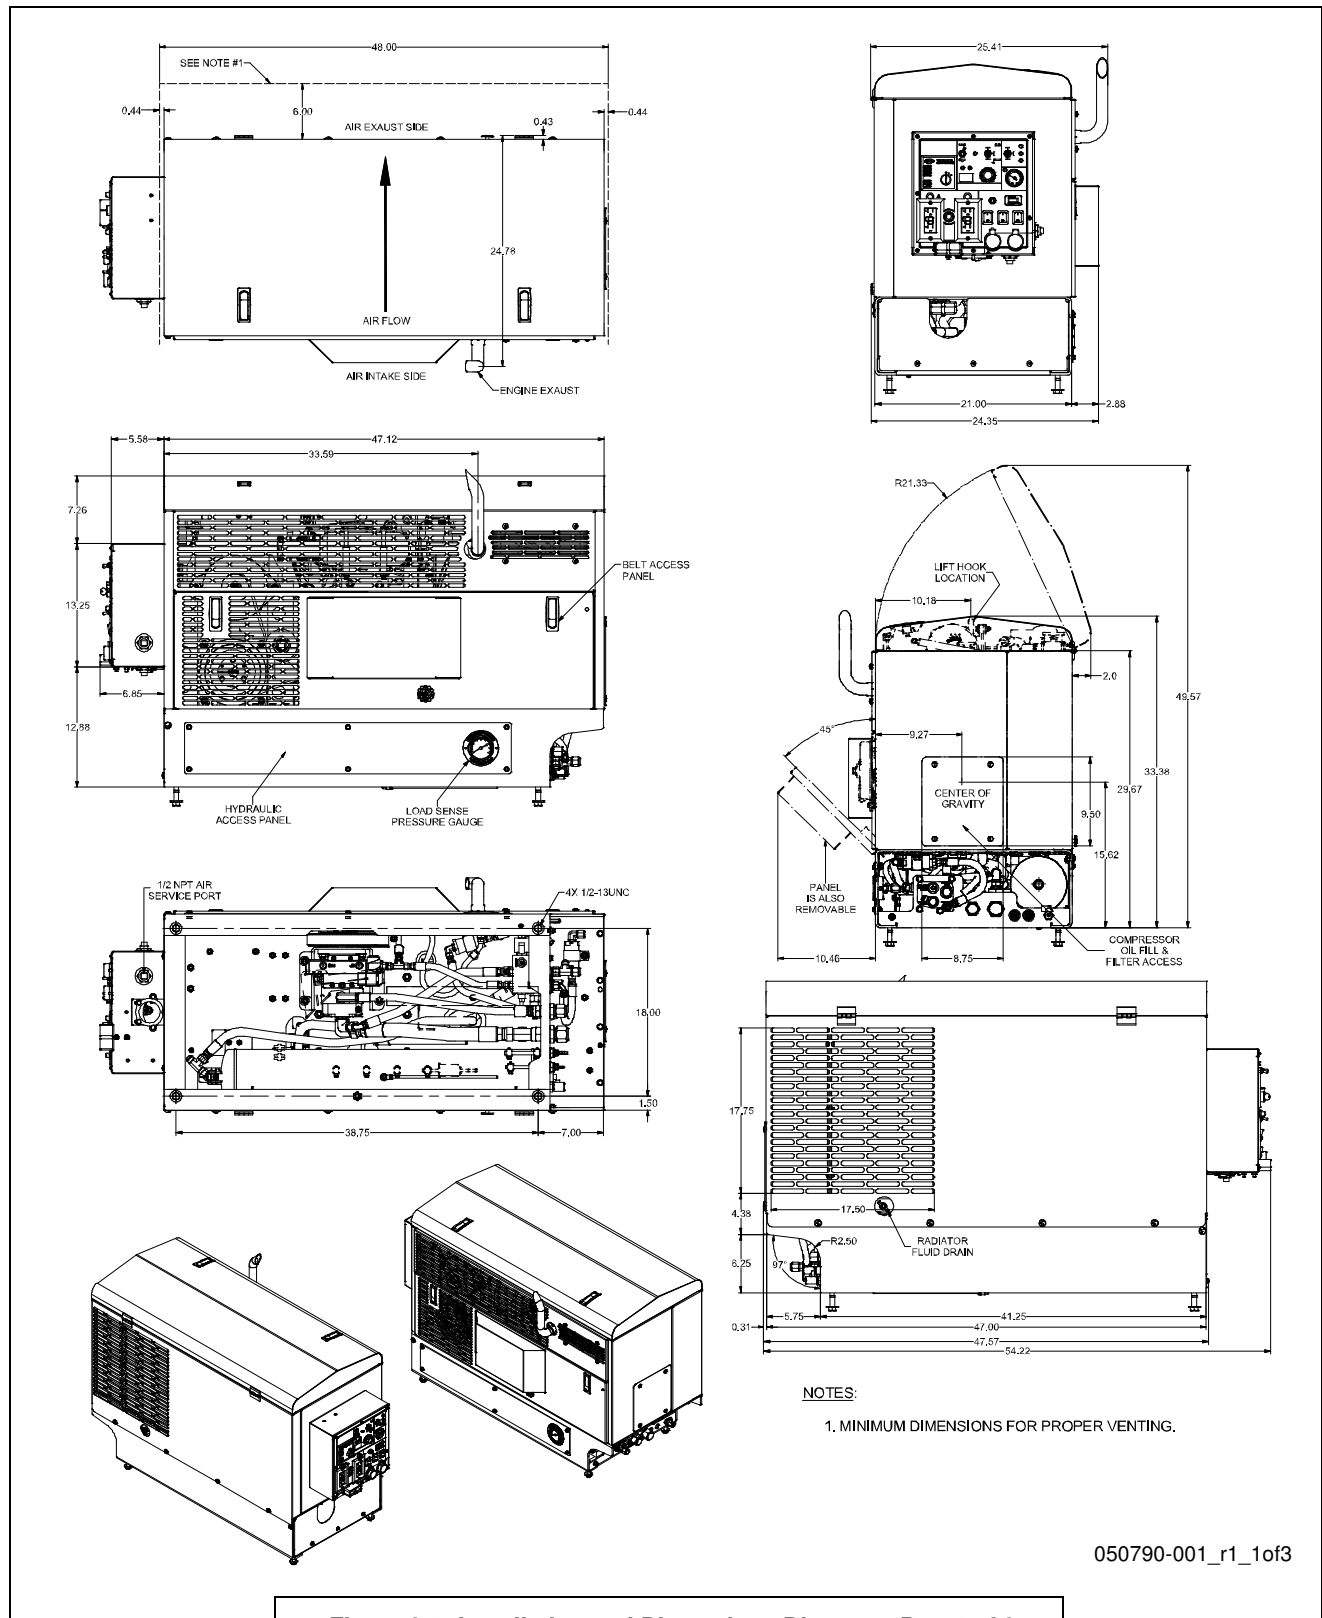


Figure 3-1: Installation and Dimensions Diagram - Part 1 of 2

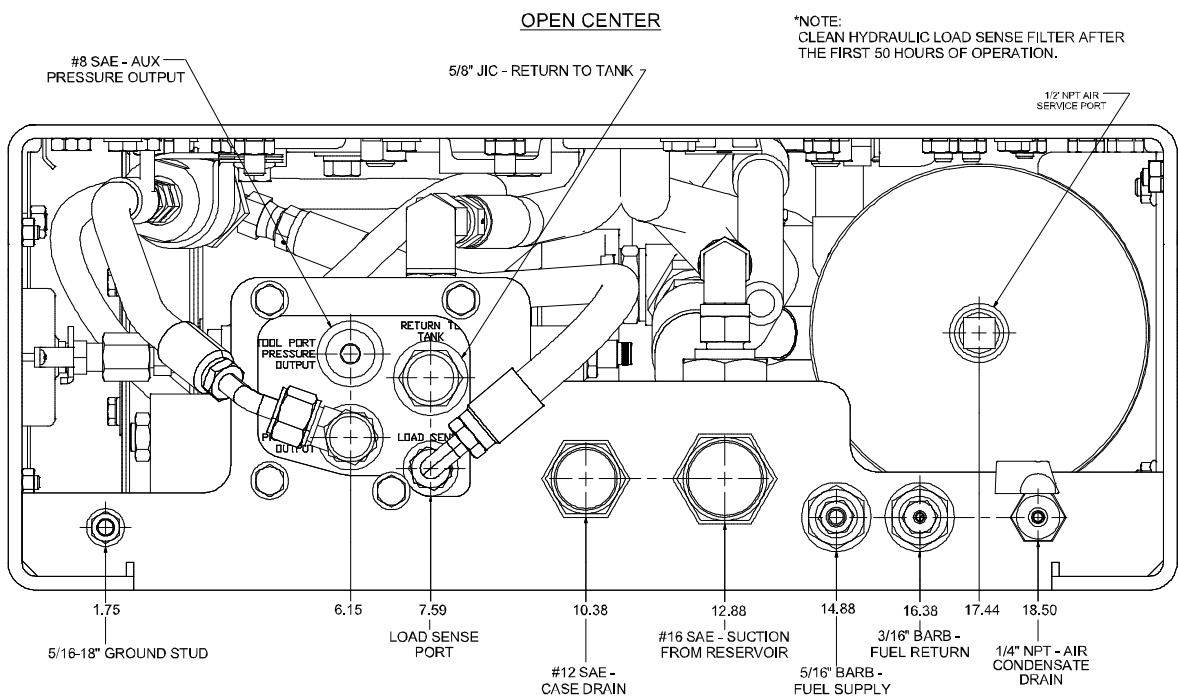


050790-001_r0_2of3

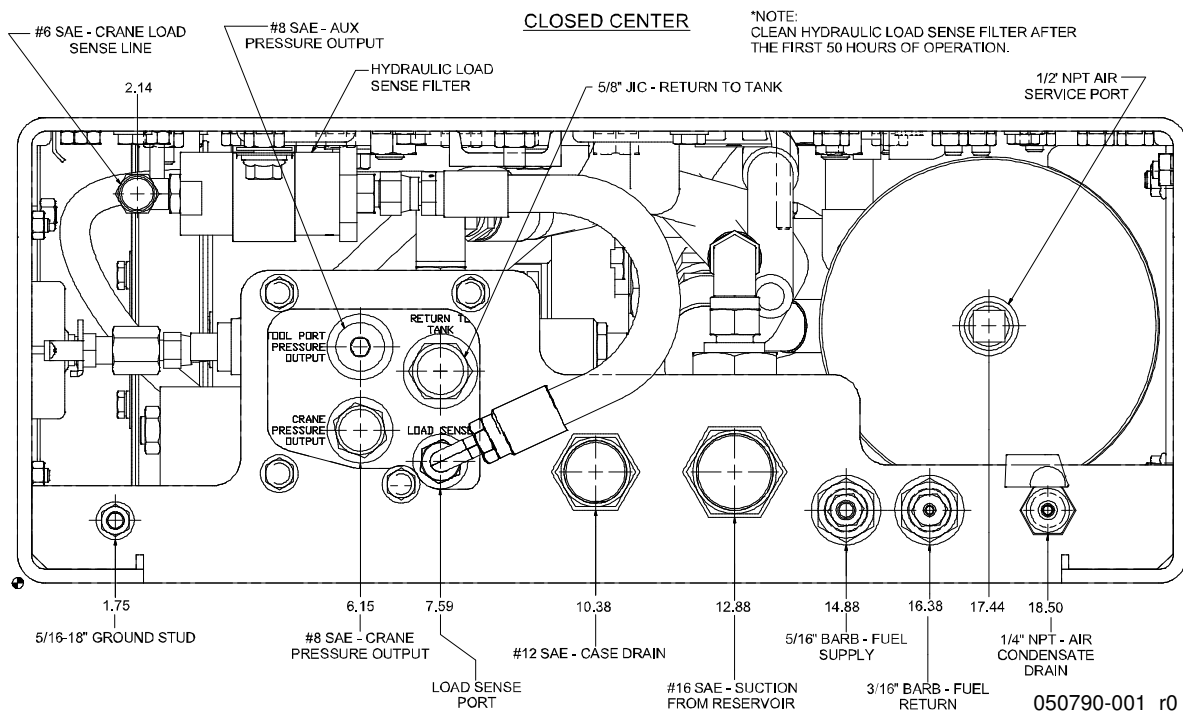

050790-001_r0_2of3

Figure 3-2: Installation and Dimensions Diagram - Part 2 of 2

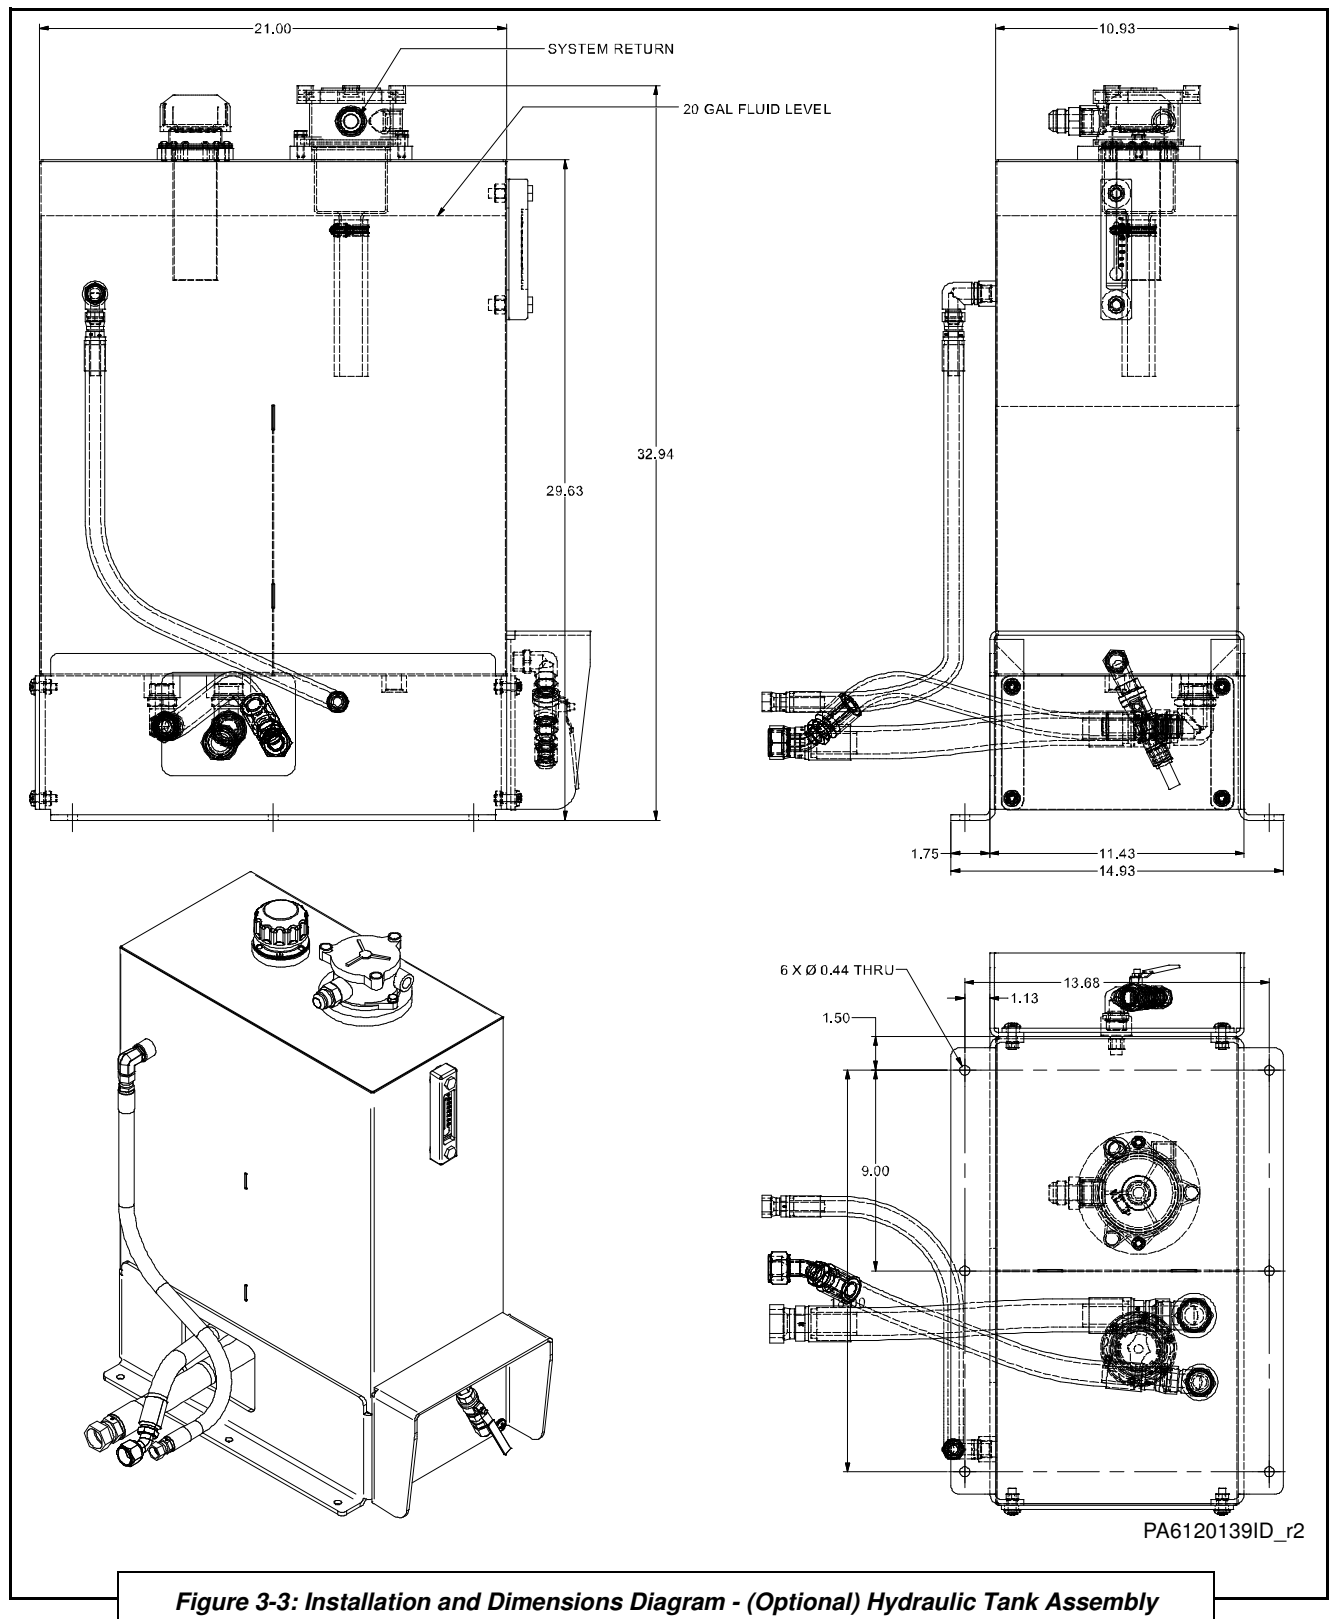


3.4 CONNECTING THE FUEL SYSTEM

To connect to the fuel pump, refer to **Figure 3-4**, and follow these steps:

IMPORTANT

The Vanair®-supplied fuel pump includes an internal check valve. **DO NOT** add an external check valve when assembling the fuel pump line connection.

1. Mount the electric fuel pump at the desired location on the service body, keeping it as close to the truck fuel tank as possible. Mount the electric fuel pump a maximum distance of 24 inches from the bottom of the tank.
2. Install the pick-up and return fuel lines.
 - Ensure that the lines do not make contact with sharp edges, moving parts or exhaust heat (consult **Section 7.20, Hose Installation Guide**, for assistance in running hose lines).
 - Units must have a 70 micron fuel filter in line before the pump.

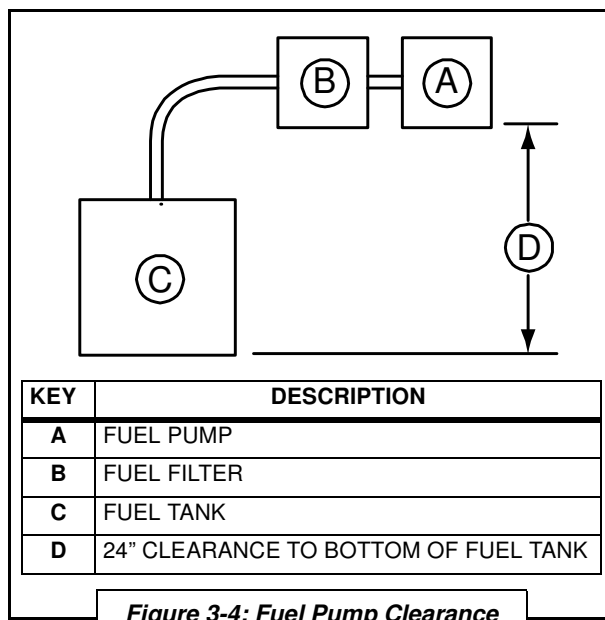

Due to the length involved for the fuel line assembled from the engine to the vehicle-accessed fuel tank, the fuel line may accumulate air. There is a bleed nut located on the engine for the purpose of siphoning off this air. Refer to **Section 3.8, Fuel Line Siphon**, for more information on bleeding the fuel system of air.

3.5 CONNECTING AND APPLYING THE HYDRAULIC SYSTEM

Refer to **Figure 3-2** for hydraulic pump system connections.

IMPORTANT

Vanair® highly recommends consulting a hydraulic supply expert for specifying the correct hydraulic supply components for vehicle-side integration (including oil reservoir size, hydraulic pressure relief, hose size, etc.) for your application.

Please take into consideration the following:

- The hydraulic flow and pressure requirements of the system.
- The duty cycle and ambient operating temperatures.
- Other hydraulic equipment which may share that same hydraulic supply system (Vanair recommends a dedicated pump and hydraulic circuit).



WARNING

Improperly, or non-connected lines will damage the equipment.

The hydraulic hoses must be run into the package to the hydraulic pump. Verify that hoses are hooked up properly to ensure proper flow. Also, verify that the hoses are laid out properly so that no chafing or kinking of the hoses is possible. Refer to **Section 7.20, Hose Installation Guide**, for assistance with proper

hose layout and connecting functions.

NOTE

The temperature of the hydraulic oil should not exceed 140 °F due to the rating of the Vanair-supplied hydraulic motor.



WARNING

Follow all applicable safety recommendations as outlined in *Section 1: Safety* of this manual.

NOTE

When determining the location of the air tank, keep in mind that the tank's drain valve will need to be accessed on a frequent (daily) basis.

NOTE

When adding auxiliary air tank(s), Vanair recommends installing a pressure gauge that is visible to the operator.

To prepare and install the remote air tank follow these guidelines:

- For compressor discharge piping, use a 3/4" minimum, S-TW Series hose (that meets SAE 100R14A), extruded PTFE tube with stainless steel single wire braid.
- The working pressure and temperature ratings should be: 200 psi air @ 300 °F (similar to PA87939).

3.6 INSTALLING THE REMOTE CONTROL PANEL

For remote instrument panel mounting, install the remote control panel at the desired location on the service body and route the control trunk line to the location where the unit will mount. Ensure that all sharp edges that the trunk-line contacts are shielded or grommet-protected, and that there are no excessively sharp bends in the trunk-line. Ensure the trunk line does not come in contact with exhaust parts.

3.7 INSTALLING (OPTIONAL) REMOTE AIR TANK


The air tank, and subsequent piping, must have a minimum rating of **200 psi**; if tank is larger than six inches (6") OD, it must be ASME rated. To determine the location of a remote-mounted air tank, consider the following:

- Air system piping relation to the I-300 Series machine.
- Hindrance to any access, or operation of, other standard or mounted vehicle system(s), including any under deck, or accessible wiring, piping, etc.
- Service output location.

3.8 FUEL LINE SIPHON

Refer to **Figure 3-5** for fuel line air bleed nut location on the engine, and the following instructions:

1. Open the bleed nut to siphon off any air in the line. Turn on the pump, allow air to escape, and tighten the nut after all air is out of the system (fuel begins to leak out after all air is evacuated).
2. With the vehicle located on a level surface (vehicle should be on a level surface in order to get an accurate fluid level reading) check all fluid levels. If fluid refills are needed refer to **Section 5, Figure 5-1**, for compressor oil check, and **Section 5, Table 5A** for oil maintenance.
3. Start the unit and fully test all functions (refer to **Section 4, Operation**). Warm the unit to full operating temperature. After the unit has cooled, check all fluid levels and add as needed.

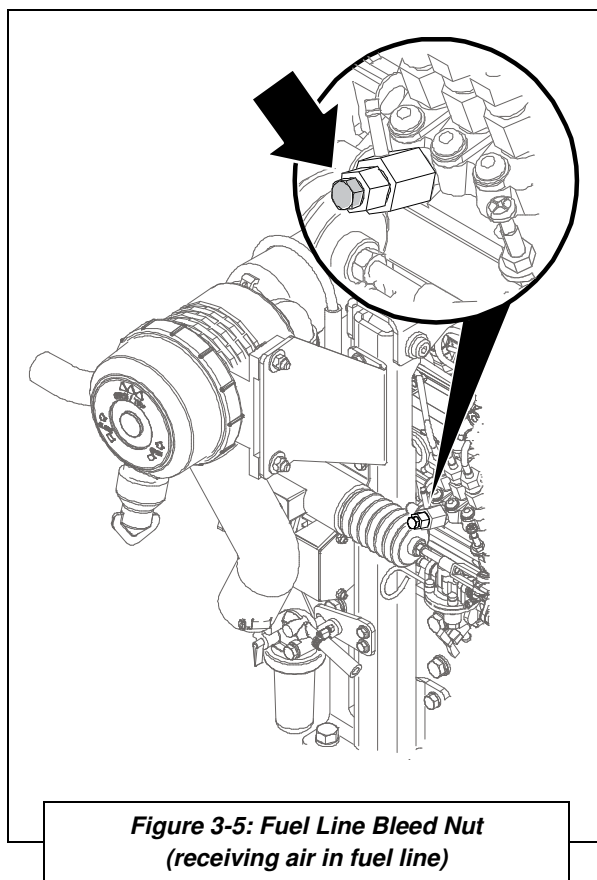

SECTION 4: OPERATION

4.1 GENERAL INFORMATION

The Air N Arc I-300 All-In-One Power System has a comprehensive array of controls and indicators for each function of the power system. Understanding the correct operational functions of the I-300 Series system will allow the operator to recognize various operational conditions, such as when the machine is functioning optimally, when maintenance is needed, or if there are indications of a malfunction. The information in the Operation Section will help the operator to recognize, distinguish and interpret these symptoms.



WARNING

Before starting, performing maintenance, or replacing parts, relieve the entire system pressure by opening the air tank drain/vent valve, which will vent all pressure to the atmosphere.

Refer to *Figure 4-1*. Open the compressor fill cap **SLOWLY** (contents under pressure) to make sure all pressure has been relieved.



CAUTION

Compressors and engines generate heat and create hot surfaces. Use caution when operating and servicing equipment. Some surfaces and components may be hot.


IMPORTANT

Do not operate machine without hydraulic connections and proper amounts of fluid. Danger to pump will occur.




DANGER

DO NOT weld with the electrode holder connected to the negative (-) port and the work piece connected to the vehicle. Bodily harm and equipment damage may occur.

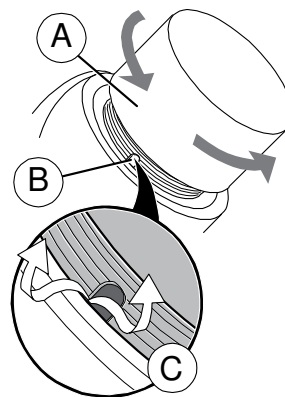

ACCEPTABLE OIL FILL LEVEL RANGE

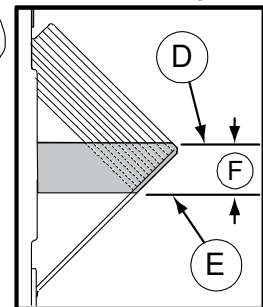

KEY	DESCRIPTION
A	RED COMPRESSOR FILL CAP
B	FILL CAP BLEED VENT GROOVE
C	Open/crack cap slightly to allow bleed vent to relieve pressure
D	HIGH LEVEL MARK (at fill port edge)
E	LOW LEVEL MARK (fill port lowest thread line edge)
F	OPTIMUM OIL LEVEL RANGE

Figure 4-1: Pressure Relief Before Accessing Unit Oil Reservoir

4.2 MACHINE START-UP AND SHUTDOWN PROCEDURE

IMPORTANT


If start-up and shut-down procedures are not followed, damage to the system and its components may occur.

Consult **Figure 4-2: Instrument Panel Functions** for operating procedures detailed in this section.

NOTE

Refer to **Section 4.8** for instructions on using the Air N Arc I-300 to start the vehicle should the vehicle battery prove to be too depleted or dead.

IMPORTANT

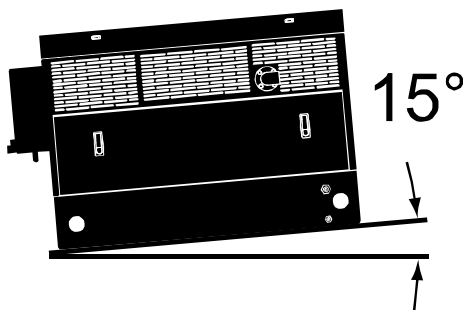

All machine package maximum operation angles of tilt are fifteen degrees (15°).

4.2.1 START-UP FROM MACHINE

Consult **Figure 4-2**, and the following steps:



WARNING

Machine hood and front access panel must be closed before starting. Interlock switches will not allow starting with panels open. After starting, engine hood may be opened, but opening belt access panel will shut down the engine.

1. If equipped, turn master power **ON** in truck cab (switch).
2. On the machine panel ensure that the **Welder, Generator, Hydraulic Pump** and **Compressor** switches are in their **OFF** positions prior to starting.
3. Turn the engine control switch to the **ON** position; wait 3-5 seconds for the fuel pump to prime the system. Depending upon ambient temperature, wait until glow plug light goes out (ten [10] seconds).
4. Continue turning control switch to the **START** position until the engine starts (when the switch is let go, it will revert back to **ON** position).
5. Let engine run at idle for 3-5 minutes to allow for warm up sequence.

4.2.2 START UP FROM REMOTE CRANE

NOTE

Some crane remotes will automatically ramp engine to full speed when compressor is selected. Engine speed can be adjusted using the **ENGINE** selector. Compressor can be turned off at any time by selecting **OFF**.

Refer to **Figure 4-2** and **Figure 4-3**.

1. If equipped, when starting the machine, confirm that the master power switch, located in the vehicle cab, is in the **ON** position.
2. On the machine panel ensure that the **Welder, Generator, Hydraulic Pump** and **Compressor** switches are in their **OFF** positions.
3. Turn the machine's key switch to **ON** position.
4. Turn crane remote **ON**.
5. Select the **ENGINE START** switch and hold until engine starts.

If engine does not crank and has fault tripped on "LOW OIL PRESSURE", then


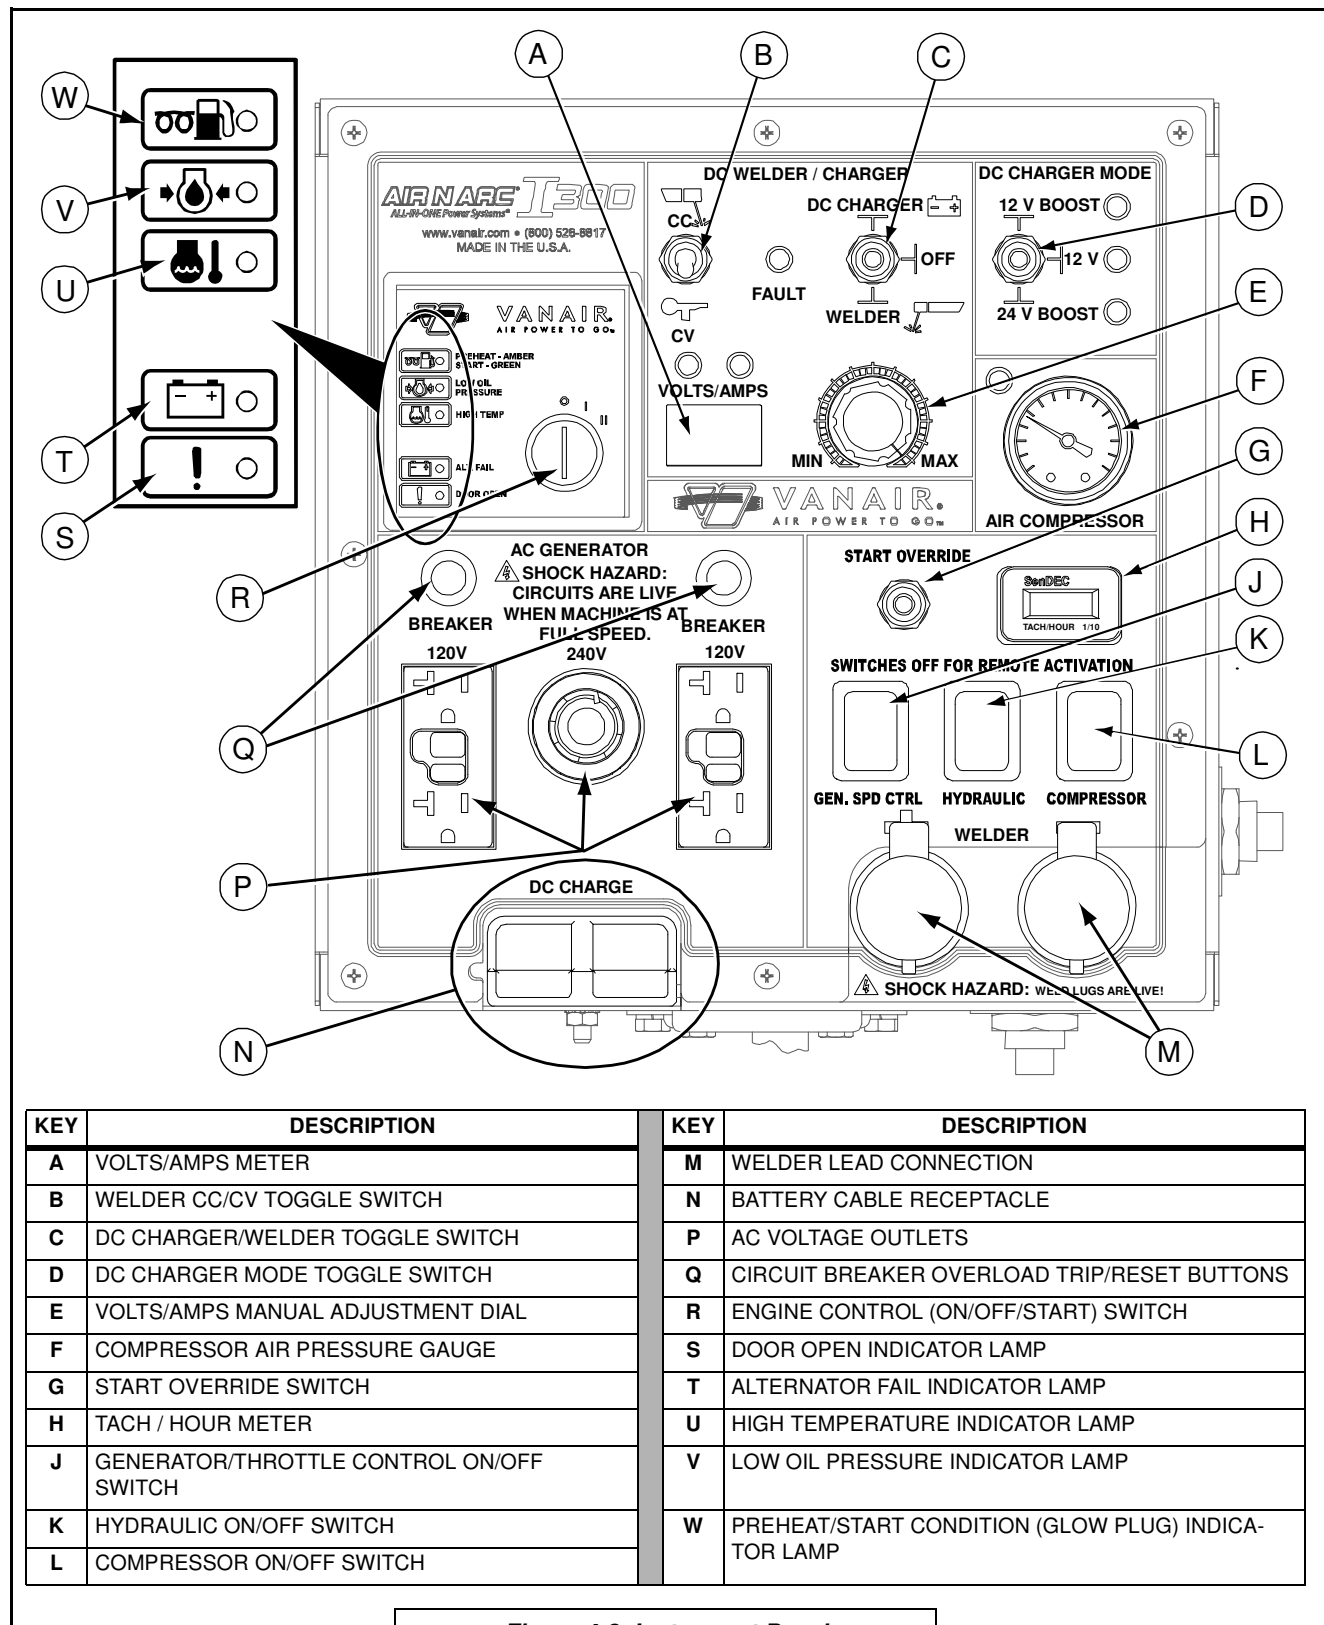


Figure 4-2: Instrument Panel

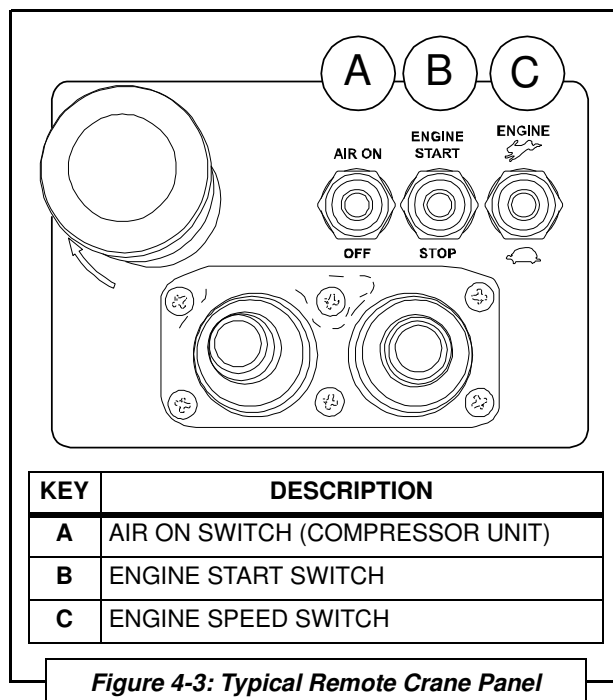

momentarily select “STOP”. Then try again to start the engine.

4.2.3 MACHINE SHUTDOWN

Consult **Figure 4-2** and **Figure 4-3**. To shut the engine off at any time, turn the engine control switch to the **OFF** position. However, this method is best reserved for emergency shutdown situations only. Vanair® recommends that the following procedure be used for routine shutdowns in order to keep the system in optimal condition, and minimize undue stress that may occur at the next start up session if some of the machine conditions were left in working mode(s) or had auxiliary power draws left intact (such as a tool receptacle left plugged into the generator, etc.).

To prepare the machine for shutdown:

1. Shut off any tools or other items that are drawing power from the generator, hydraulic pump, or compressed air from the air tank.
2. Close all service valves.

3. Unplug any power cords that are plugged into the generator panel.
4. Turn the **Welder, Generator, Hydraulic Pump** and **Compressor** switches on the control panel to their **OFF** positions.
5. Allow machine to run at idle for 3-5 minutes to allow for a cool down sequence.
6. Turn the **Crane Remote switch**, or **master power switch**, or **Engine Control Switch** to the **OFF** position.

IMPORTANT

After shutting down the machine, ensure all appropriate switches are placed in their OFF positions so the machine can be restarted properly in the future.

NOTE

Refer to both Section 4.10, and the Engine Operator's Manual for additional information pertaining to engine start-up.

4.3 ENGINE THROTTLE CONTROL FUNCTIONS

The engine speed is controlled by two factors:


1. The position of the welder switch on the unit control panel, and the use of the welder.
2. The position of the generator switch on the control panel.

IMPORTANT

Any combination of the I-300 Power System output functions (welder, generator, hydraulic pump or compressor) used *simultaneously* will have an adverse affect on engine running at full throttle.

4.4 OPERATING THE WELDER

Consult **Figure 4-4**. The **variable power dial** adjusts the welder amperage (0 to 300 amps), or voltage (15 to 40 volts) for the desired weld heat. Turning the power dial clockwise increases the amperage or voltage, and turning the power dial counterclockwise decreases the amperage or voltage. The power dial may be adjusted while welding.

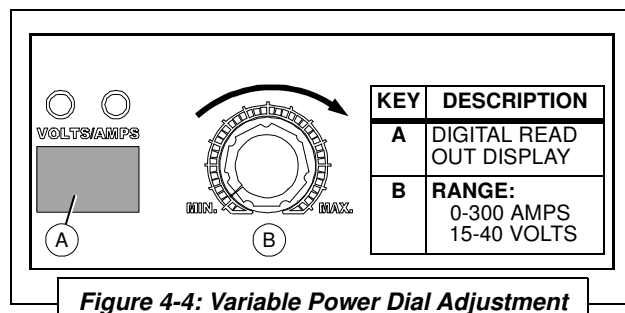

4.4.1 WELDER OPERATING PROCEDURE



WARNING

Before attempting any welding procedure, the operator must be aware of general safety practices, and particularly those pertaining to welding, as found in *Section 1.4* of this manual.

4.4.1.1 CC (CONSTANT CURRENT) MODE

CC (Constant Current) Mode is commonly referred to as - Stick Welding, Arc Welding, or Shielded Metal Arc Welding (SMAW).

1. With the engine shut off, insert the twist lock connections of the work clamp and the electrode holder cables into the welder connection ports on the control panel. For Direct Current Electrode Positive (DCEP), connect the electrode

holder to the positive (+) port, and the work clamp to the negative (-) port.



DANGER

DO NOT weld with the electrode holder connected to the negative (-) port and the work piece connected to the vehicle. Bodily harm and equipment damage may occur.

2. Select the appropriate electrode for the material and process being performed. See **Table 4A: ELECTRODE SPECIFICATIONS** for selecting an electrode.
3. Place the ground clamp on the work piece and insert the appropriate welding rod into the electrode clamp.
4. Start the engine (**See Section 4.2, Machine Start-up and Shutdown Procedure**).
5. On the control panel, place the CC/CV switch in CC mode. Place the DC Charger/Welder switch in welder mode.
6. Adjust the power dial to the appropriate amperage setting for the material and the electrode being used. (See **Table 4A: ELECTRODE SPECIFICATIONS** for electrode amperage ratings). At anytime during welding, the power dial may be adjusted to the desired amperage level.

NOTE

The amps/volts display will read the set value for five (5) seconds when the dial is adjusted, and the actual output value five (5) seconds after the dial has been adjusted.

7. When you strike the electrode against the material being welded, the engine will go to high idle and deliver the selected amperage through the electrode. Welding can now begin.
8. After a weld has been completed, and there is no contact between the

TABLE 4A: ELECTRODE SPECIFICATIONS

METAL THICKNESS	ELECTRODE SIZE	WELDING AMPERES
1/16-1/8	3/32	50-90
1/8-1/4	1/8	90-140
1/4-3/8	5/32	120-180
3/8-1/2	3/16	150-230

TABLE 4B: WELDING ROD TYPE, POLARITY AND FLUX CODES

DIGIT	TYPE OF COATING	WELDING CURRENT
10	High cellulose sodium	DC+
11	High cellulose potassium	AC or DC+ or DC-
12	High titania sodium	AC or DC-
13	High titania potassium	AC or DC+
14	Iron powder titania	AC or DC- or DC+
15	Low hydrogen sodium	DC+
16	Low hydrogen potassium	AC or DC+
27	Iron powder iron oxide	AC or DC+ or DC-
18	Iron powder low hydrogen	AC or DC+
20	High iron oxide	AC or DC+ or DC-
22	High iron oxide	AC or DC-
24	Iron powder titania	AC or DC- or DC+
28	Low hydrogen potassium iron powder	AC or DC+

electrode and the metal for 30 seconds, the engine will return to idle.

What the numbers mean that are used to identify a stick welding electrode:

Using E6010 for an example...

The “E” indicates Electrode because some welding rods are not electrodes. The “60” in 6010 indicates the tensile strength of 60,000 psi.

The last two (2) digits indicate position and polarity along with what type flux. See **Table 4B: WELDING ROD TYPE, POLARITY AND FLUX CODES**.

NOTE

If a longer welding lead is desired, optional 25 and 50 ft. lead segments may be purchased from Vanair® Manufacturing, Inc. for a maximum lead length of 100 ft.

4.4.1.2 CV (CONSTANT VOLTAGE) MODE - USING A VOLTAGE SENSING SUITCASE FEEDER OR SPOOL GUN

CV (Constant Voltage) Mode – commonly referred to as - Wire Welding, MIG welding, or Gas Metal Arc Welding (GMAW).

NOTE

When using a spool gun, an adapter with contactor must be used. Please consult the spool gun manufacturer for appropriate adapter.

1. With the engine shut off, insert the twist lock connection of the ground clamp into the negative (-) welder connection port on the control panel. Insert the power lead segment from the suitcase feeder into the positive (+) welder connection port on the control panel.
2. Place the ground clamp from the suitcase feeder and the ground clamp from the Air N Arc I-300 on the work piece.
3. Start the engine (**See Section 4.2, Machine Start-up and Shutdown Procedure**).
4. On the control panel, place the DC Charger/Welder switch in welder mode. Place the CC/CV switch in CV mode.
5. Adjust the power dial on the Air N Arc I-300 to the appropriate voltage setting for the material being welded. Adjust the power dial on the suitcase feeder for the material being welded. At anytime during welding, the power dial may be adjusted to the desired voltage level.

4.5 OPERATING THE GENERATOR

**WARNING**

DO NOT rely on the thermal overload circuit breakers on the generator to protect personnel, power tools, or the generator. The thermal overload circuit breakers on the generator require time to overheat when the generator is operating in an overload condition — they **DO NOT** provide instant protection against short circuiting or overload conditions. Always use GFCI protected extension cords and power strips when using the generator.

IMPORTANT

The Power System is designed to support a multi-function project. However, if the generator is operating at a high percentage of its rated capacity, and the welder and air compressor are also being used, the resulting drop in engine speed may produce a low voltage condition that will damage the generator and power tools being used.

IMPORTANT

Only plug power cords into the generator receptacles **AFTER** the engine is running at full speed.

Be careful not to overload the rated capacity of the generator - 6,800 watts (28 amps @ 240V) continuous.

To operate the generator:


1. Start the engine.
2. With the engine warmed up and operating at low idle, turn the generator switch on the control panel to the **ON** position.

Combined output on all generator receptacles is limited to the total rated generator capacity. For example; if 1,500 watts (12.5 amps) is being drawn on the 120V duplex receptacle, only 3,700 watts (15.5 amps) is available at the 240V receptacle. Check the desired power tool, motor or extension cord manufacturer's specifications for general information on the power requirements of common power tools, motors and extension cords in order to confirm power draw limitations.

If the thermal overload circuit breakers on the generator are tripped due to an overload condition, press the white reset buttons on the generator panel to reset the breakers (**Figure 4-5**).

**WARNING**

If one of the generator circuit breakers is tripped, the cause of the overload must be determined before the circuit breaker is reset and work is resumed.

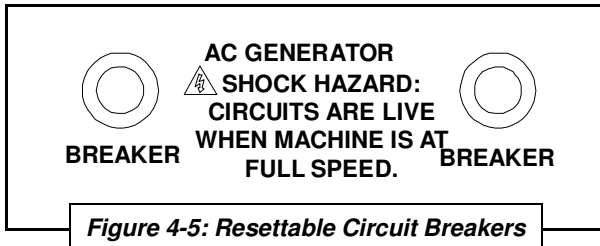

4.6 OPERATING THE COMPRESSOR

NOTE

The Air N Arc I-300 Power System unit features a high pressure, 175 psi air system. Check the maximum air pressure rating on the air tools being used. The operator is responsible for regulating the air pressure when necessary (See *Section 5.4.2, Adjusting the Pressure Setting*).

NOTE

The pressurized air system requires routine maintenance. See *Table 5A, Maintenance Schedule*, in *Section 5* to learn about important maintenance procedures.

NOTE

The moisture drain valve on the air tank may be accessed at any time, including while the machine is in operation.

To operate the air compressor:

1. Start the engine as per **Section 4.2.1**.
2. With the engine warmed up and operating at low idle, turn the compressor switch on the control panel to the ON position.

At this stage (when the compressor switch is selected, but the generator/throttle control is OFF) output is 30 CFM. However If the compressor switch is selected *and* the generator/throttle control switch is ON, then output is 40 CFM.

When purchasing air tools or planning a project, the rated capacity of the compressor

(40 CFM @ 175 psi) will need to be taken into consideration. In regard to air tool compressed air requirements, check the desired power tool manufacturer's specifications.

4.7 OPERATING THE BATTERY BOOSTER/CHARGER

The Vanair® state-of-the-art battery charging module and the optional battery charging cables add further versatility to the I-300 Series Power System. The battery charging system operates off the DC generator, and not the main AC power generator.



WARNING

DO NOT charge or boost while in Weld Mode. Personal injury or damage may occur.



WARNING

NEVER disconnect boosting connections or cables while charging / boosting. This will cause a voltage spike on the machine. Failure to follow this warning can result in injury, and/or damage or failure of any or all electronic components, thus voiding the warranty of the machine.



CAUTION

Exposed high pressure air lines on the unit become hot during operation—keep everyone clear.

IMPORTANT

System will not give output without being connected to a battery.

IMPORTANT


Never leave the machine unattended while charging a battery. Always carefully monitor the charging system while it is in use; the high amperage level that the unit produces can damage the battery being charged, or the other components, if the unit is left connected for an extended period of time.

IMPORTANT

Any combination of the I-300 Power System output functions (compressor, generator, welder, hydraulic pump) used *simultaneously* will have an adverse affect on engine running at full throttle.

During charging, if the machine begins to cycle between high and low idle, then the battery is fully charged.

4.7.1 CONNECTION - DISCONNECTION SEQUENCE AND OPERATION

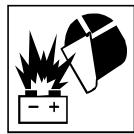**WARNING**

Always wear a face shield when connecting or disconnecting battery charging cables, and always follow the connection and disconnection sequence. Electrical sparks can cause a battery to explode, resulting in serious injury.

IMPORTANT

To prevent damaging voltage spikes, the vehicle battery cables must be disconnected from the battery to be charged in any vehicle equipped with a computer, or any equipment with sensitive electronic components. Failure to follow this warning can result in damage or failure of any or all electronic components of the vehicle.

1. With the engine off, insure that the welder, DC charger switch, and any other engine control switch are in the **OFF** position.
2. Attach the clamps of the battery charge cable to the battery to be charged. RED to the positive terminal, BLACK to the negative terminal (**Figure 4-6**).

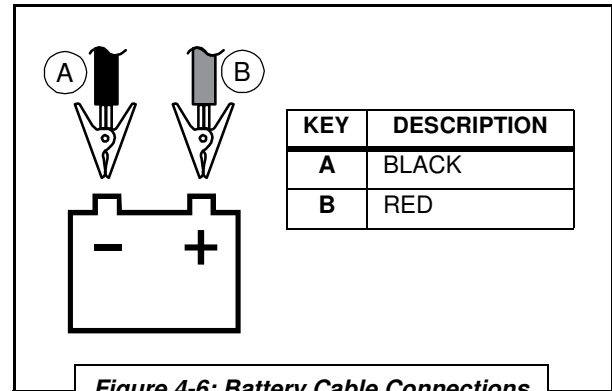


Figure 4-6: Battery Cable Connections

3. Plug the battery charge cables into the battery cable connection.
4. Start the engine and wait for all indicator lights to turn off. Place the DC Welder/Charger selector toggle switch in the DC Charger position, and then the DC Charger Mode switch to the correct position. The battery is being charged. 12V charge will stay at low speed.
5. When selector is in **boost mode** and machine begins to cycle between high and low idle then the battery is fully charged.
6. To disconnect the charging system, place the DC Welder/Charger selector toggle switch to the **OFF** position.
7. Allow engine to idle down, then shut down the engine.
8. Now it is safe to disconnect the clamps from the battery being charged, and the battery cable connection on the front of the machine.

4.8 USING THE START OVERRIDE SWITCH TO JUMP-START THE VEHICLE

If the vehicle battery voltage is too low to start the vehicle, the override switch will allow for the vehicle to be started with the Air N Arc unit.

1. If equipped, confirm that the master power switch (in vehicle cab) is **ON**.
2. Turn key on the I-300 unit and attempt to start.
3. If the I-300 did not start then turn the key switch back to off.
4. Choose "Charge" on the charge/off/weld switch.
5. Hold the momentary start override switch, and at the same time, turn the key to crank.
6. Once the machine has started, hold the momentary switch until voltage can be read on the display.
7. The truck battery is now being charged and the I-300 unit is available for use.

If the truck battery charging cables were not run during installation then battery boost cables can be used to connect to the truck battery to the charge output.

4.9 OPERATING THE HYDRAULIC PUMP

1. With the engine off, insure that the welder, DC charger switch, and any other engine control switch are in the **OFF** position.
2. The hydraulic pump can be turned on via the switch on the instrument panel or automatically by using the crane remote.

LOW FLOW = LOW SPEED

HIGH FLOW = HIGH SPEED

IMPORTANT

Consult factory for hydraulic tool circuit information.

4.10 EXTREME CONDITION OPERATION

When operating in extreme cold or hot conditions, ranging from 0°F to 110°F (-18°C to 43°C); 0°F to -40°F [-18°C to -40°C] with

cold weather kit, in the presence of high humidity, or at a high altitude, additional attention should be given to any indication that could lead to a serious problem. If the ambient temperature varies largely, the environment is dusty, or the engine is operated at a high altitude, the engine performance is directly or indirectly influenced.

Machine review and maintenance check schedules should be more frequent than the normal suggestions given in **Section 5, Table 5A: Maintenance Schedule**.

Become familiar with the alternative operation approaches given in this section before operating the power system package in any type of extreme ambient condition. For additional operation information consult the Engine Operator's Manual, or visit the engine manufacturer's web site.

4.10.1 COLD WEATHER OPERATION

NOTE

Refer to the Engine Operator's Manual for standard oil recommendations.

The I-300 Series All-In-One Power System's 25HP engine runs on diesel fuel, which can be more difficult to start in cold weather. When the temperature is very low, extra care must be taken regarding fuel and oil changes in their viscosity, freezing of water contained in the piping, or of water adhering on the filter. Diesel fuel may gel at very cold temperatures.

WATER

Water in the fuel can freeze at temperatures below 32°F (0°C), blocking fuel lines. Keep the fuel tank full to prevent condensation from forming inside the tank and lessen the chances of water getting in the fuel line.

At an extremely cold temperature, the viscosity of hydraulic fluid and lubrication oil may increase and the torque of starter may exceed its permissible value, hindering proper starting.

GELLING

Diesel fuel turns into a gel-like consistency at temperatures around 0°F (-18°C): The diesel forms wax crystals when the temperatures drop below 15°F (-9°C). Then, as it gets colder, these wax crystals turn to gel. This thicker substance cannot pass the fuel filter, so the engine may run intermittently, or may not start at all.

At an extremely cold temperature, the viscosity of hydraulic fluid and lubrication oil may increase, and the torque of starter may exceed its permissible value, hindering proper starting. Additional care should be taken under consideration when operating the package in extreme cold weather environments or ambient temperatures.

COLD WEATHER SAFEGUARDS

- Park the vehicle or equipment indoors when not in use.
- Use a block heater or glow plugs.

NOTE

As indicated in the *Section 4.2.1 (start-up)*, a full interval lapse of ten (10) seconds allows the glow plugs to assist with key ignition start up in cold ambient temperatures.

- After initial start-up, run engine at idle speed for several minutes prior to use.
- Maintain the vehicle's battery; this will make it easier to start a diesel engine in cold weather.
- In below zero temperatures a fuel line de-icer product may need to be used.
- Check the fuel filter regularly to insure that it contains no water.
- Vanguard™ Premium Synthetic Oil is suitable for use from -40°F to 110°F (-40°C to 43°C).
- Drain the moisture from the tank when it is warm from extended operation.

- For additional engine precautions, consult the Engine Operator's Manual.

NOTE

DO NOT use compressor for short periods of time. Compressor must run at operating temperature or moisture will build up in tank.

NOTE

Vanair® offers a cold weather kit option, installed at the factory, which enables operation at temperatures from 0°F down to -40°F (-18°C to -40°C). Consult Vanair for details.

4.10.2 HIGH TEMPERATURE OPERATION

High compartment temperatures can be caused by high ambient temperatures, small engine room, soundproof cases and other reasons. Among these the most important factor is the temperature of the intake and cooling air. Reduce load duty cycle to less than 60% when operating in ambient temperatures above 104°F (40°C).

Extra care should be taken to keep the engine and air compressor clean and to not restrict the air flow around the unit. Consult the Engine Operator's Manual for fuel, lubrication oil and cooling requirements under extreme temperatures.

When operating the machine in high temperature areas, precautions should be taken to prevent overheating. At the minimum, all coolers, including air passage ways around the coolers, should be free of debris and dirt. The fan, driven by its own hydraulic motor, is designed to run continuously to assure a constant flow of cooling air.

The operator should be aware that high temperatures can influence engine performance, which can directly effect some machine function capacity outputs.

4.10.3 HIGH DUST CONTENT OPERATION

When the machine is to be used in continuously dusty environments, special care must be taken with the engine's air cleaner and radiator, the compressor air filter and cooler assembly, and the hydraulic fan. The intake air must be cleaned with the air cleaner. Lowering of the radiator cooling capacity due to clogging dust must be prevented. If intake air resistance becomes higher, this will result in reduced output. In order to maintain air-tight seals at the joining sections of the intake system component parts, and thus to prevent foreign matter from entering, it is necessary to ensure the security of the air intake system to prevent the component parts from being damaged. This can be accomplished by performing more frequent monitoring of the air filters, air

evacuator valve (on compressor air filter), and radiator coolers and their immediate surroundings when operating in areas that contain a high dust content.

If the package is not being used for an extended period of time, an additional precaution, such as covering the machine with a tarp, will help to keep the inside of the machine free of dust particle accumulation.

4.10.4 HIGH ALTITUDE OPERATION

Engine horsepower will decrease by 3.5% for every 1,000 feet over 6,000 feet increase in altitude. At high altitude overall unit performance will deteriorate, and care will need to be taken not to overload the engine.

SECTION 5: MAINTENANCE

5.1 GENERAL INFORMATION

A strict maintenance program is the key to long life for the Air N Arc I-300 Series All-In-One Power System package. Following is a program that, when adhered to, should keep the package in top operating condition. Refer to **Table 5A** in this section for a detailed maintenance routine schedule for specific compressor system components.



WARNING

Before performing maintenance:

Shut down machine, relieve all system pressure and lock out all power, as per the Safety Section of this manual. If machine is hot, allow package to cool before removing any panel.

NOTE THAT THE SYSTEM CAN BE STARTED REMOTELY:

Always clearly tag the start-up instrumentation against accidental system start-ups during maintenance.



WARNING

DO NOT remove caps, plugs and/or other components when compressor is running or pressurized. Stop compressor and depressurize system prior to maintenance of system. Relieve the entire system pressure by opening the air tank drain/vent valve, which will vent all pressure to the atmosphere.

Wear personal protective equipment such as gloves, work boots, and eye and hearing protection as required for the task at hand.

Refer to *Figure 5-1*. Open compressor fill cap **SLOWLY** (contents under pressure) to make sure all pressure has been relieved.




WARNING

Follow all applicable safety recommendations as outlined in *Section 1: Safety* of this manual.

5.2 ROUTINE MAINTENANCE SCHEDULE

Vanair® Manufacturing, Inc. considers the maintenance schedule given in **Table 5A: Maintenance Schedule** to be part of the warranty agreement with the customer. This

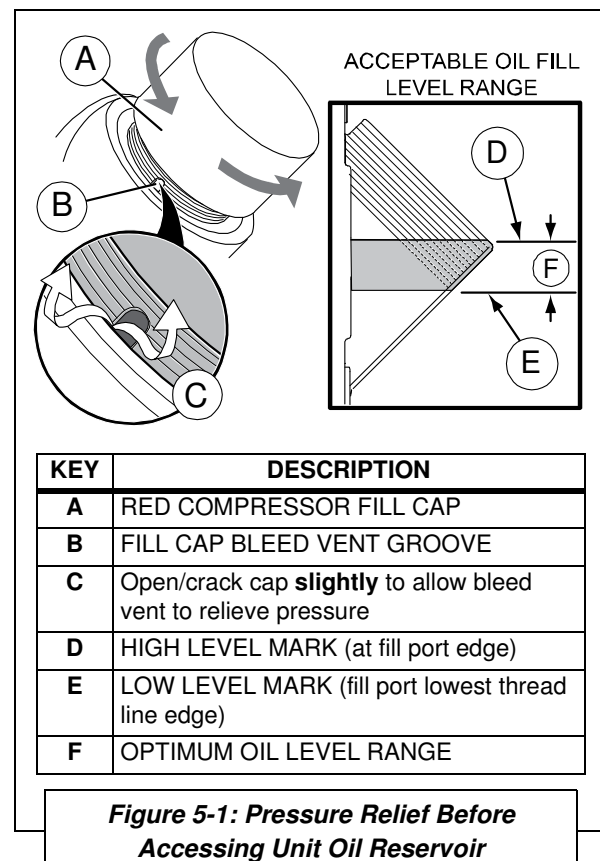

maintenance regimen must be followed in order to protect the warranty of the machine package.

Vanair® Manufacturing, Inc. especially requires that a consistent service regimen be established for engine and compressor oil changes, and engine and compressor air filter servicing. The following schedule is designed so that many of the other maintenance tasks are completed when the engine and compressor air filters are serviced, and the engine oil is changed.

NOTE

Follow the prescribed periodic maintenance (PM) schedule as recommended. Perform the required PM schedule at recommended intervals. Failure to follow this prescribed periodic maintenance at the recommended intervals will impair the package safety, performance characteristics, shorten the package's life, and will negatively affect the warranty coverage of the package.

Note that more frequent intervals may be needed in adverse operating conditions (refer to *Section 4.10, Extreme Condition Operation*).

IMPORTANT

Consult the Engine Operation Manual for further detailed maintenance and interval descriptions in addition to the information given in Table 5A.



WARNING

Concerning the engine: In addition to the safety measures given in this manual, the operator must also be acquainted with the safety measures given in the Engine Operation Manual.

Please take a moment to become acquainted with the following service schedule. For assistance in obtaining routine maintenance or replacement parts, consult **Section 7.1, Parts Ordering Procedure**, and **Table 7A: Recommended Spare Parts List**.



TABLE 5A: MAINTENANCE SCHEDULE									
<div> WARNING</div> <div>Before performing maintenance: Shut down machine, relieve all system pressure and lock out all power, as per the Safety Section of this manual.</div> <div>NOTE THAT THE SYSTEM CAN BE STARTED REMOTELY: Always clearly tag the start-up instrumentation against accidental system start-ups during maintenance.</div>		INTERVALS					NOTE	<div></div> <div>System maintenance personnel must be familiar with all Safety regulations set forth in the Safety Section of this manual before performing maintenance on this machine.</div>	REFERENCE
		BREAK -IN PERIOD	MAINTENANCE SCHEDULE						
			Hourly or Calendar Period - whichever comes first						
KEY	TASK DESCRIPTION	First 20 Hours of Operation	After 8 Hours or Daily	Every 100 Hours or One Year	Every 200 Hours	After 300 Hours	After 500 Hours	ACTION TO TAKE	
1	Check the coolant recovery tank level	•	•					Add clean, fresh water if low. Recovery tank is marked with a FULL and LOW level indicator; proper level is between these lines. Do not overfill recovery tank. For complete coolant change, also refer to the Engine Operator's Manual.	WARNING: Do not remove the radiator cap while coolant is hot. When cool to the touch, rotate cap to the first stop to allow excess pressure to escape. Then remove cap completely. If overheating should occur, escaping pressurized steam may be present from the radiator or recovery tank. Severe burns can result in contact with this steam.
2	Check the air compressor drive belt tension	•	•					Tighten belt if necessary.	Consult Section 5.4.3 for belt tightening and belt replacement procedures.
3	Check engine fuel lines			Every 50 hours of operation				Inspect all fuel lines and connections.	Engine Operation Manual
4	Change engine oil	•		•				Consult the oil change procedure	Engine Operation Manual
5	Change engine oil filter	•		•				Consult the oil filter change procedure	Engine Operation Manual
6	Check engine oil level		•					Consult engine oil level check procedure.	Engine Operation Manual
Continued on next page									


TABLE 5A: MAINTENANCE SCHEDULE									
⚠ WARNING		INTERVALS					NOTE		 System maintenance personnel must be familiar with all Safety regulations set forth in the Safety Section of this manual before performing maintenance on this machine.
KEY	TASK DESCRIPTION	BREAK -IN PERIOD	MAINTENANCE SCHEDULE				ACTION TO TAKE	REFERENCE	
			Hourly or Calendar Period - whichever comes first						
			After 8 Hours or Daily	Every 100 Hours or One Year	Every 200 Hours	After 300 Hours			
		First 20 Hours of Operation							
7	Check air tank for water accumulation		•					Drain any water from the air tank. Note that the 1/8" NPT fitting at the end of the drain valve (Section 7.12 , key #16) can be piped to a holding tank. DAILY drain water from air tank entirely.	Note that tank can be drained at any time, including while machine is in operation.
8	Check air compressor oil level		•					Check resting oil level; fill to proper level if low (Refer to Figure 5-1). ⚠ DANGER: NEVER check the compressor oil level with the compressor running. Hot oil is under pressure and will spray, causing severe burns. When checking compressor oil level, blow down the pressure to zero and allow system oil level to settle before removing the fill cap.	⚠ WARNING: Compressor oil can ignite if it comes in contact with very hot surfaces, such as a muffler or exhaust manifold on the engine.
9	Inspect unit for oil leaks or damage		•					Visually note any leaks or evidence of leaks around the compressor unit and hose connections. Tighten any loose connection point where needed. Repair or replace any damaged part.	
Continued on next page									


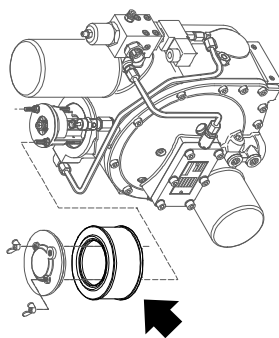


TABLE 5A: MAINTENANCE SCHEDULE									
WARNING		INTERVALS		NOTE		REFERENCE			
<div>Before performing maintenance: Shut down machine, relieve all system pressure and lock out all power, as per the Safety Section of this manual.</div> <div>NOTE THAT THE SYSTEM CAN BE STARTED REMOTELY: Always clearly tag the start-up instrumentation against accidental system start-ups during maintenance.</div>	BREAK -IN PERIOD	MAINTENANCE SCHEDULE Hourly or Calendar Period - whichever comes first				If working in dusty or dirty conditions, reduce the recommended time intervals between servicing by half for engine and compressor oil change, and engine and compressor filter servicing.	<div></div> <div>System maintenance personnel must be familiar with all Safety regulations set forth in the Safety Section of this manual before performing maintenance on this machine.</div>		
		First 20 Hours of Operation	After 8 Hours or Daily	Every 100 Hours or One Year	Every 200 Hours				
KEY	TASK DESCRIPTION					ACTION TO TAKE	REFERENCE		
10	Inspect cooler fins (both engine and compressor oil coolers) for contamination)	•				Clean or clear as necessary. Use only low pressure air to clean cooler fins; do not use high pressure air nor a pressure washer.	IMPORTANT: Do not clean radiator with firm tools such as spatulas or screwdrivers. Such instruments may damage the fins or tubes, and/or cause coolant leaks or decrease cooling performance.		
11	Inspect ventilation openings	•				Ensure openings are not blocked or clogged with debris.	Engine Operation Manual		
12	Clean and inspect engine air filter	•				Consult the engine air filter procedure.	<div></div>		
13	Clean and inspect compressor air filter <i>The compressor oil is the key to a long useful life of the air compressor system. Dirt and other foreign matter can be introduced into the compressor system through the air intake. A clean air filter will ensure that the compressor is protected.</i>	•				Replace if air filter membrane is worn, contains tears or pinholes, or if filter is damaged.			
								Continued on next page	

TABLE 5A: MAINTENANCE SCHEDULE										
WARNING		INTERVALS		NOTE		REFERENCE				
<div><div>!</div><div>Before performing maintenance: Shut down machine, relieve all system pressure and lock out all power, as per the Safety Section of this manual.</div></div> <div>NOTE THAT THE SYSTEM CAN BE STARTED REMOTELY: Always clearly tag the start-up instrumentation against accidental system start-ups during maintenance.</div>	TASK DESCRIPTION	BREAK -IN PERIOD	MAINTENANCE SCHEDULE				If working in dusty or dirty conditions, reduce the recommended time intervals between servicing by half for engine and compressor oil change, and engine and compressor filter servicing.	<div><div></div><div>System maintenance personnel must be familiar with all Safety regulations set forth in the Safety Section of this manual before performing maintenance on this machine.</div></div>		
			First 20 Hours of Operation	After 8 Hours or Daily	Every 100 Hours or One Year	Every 200 Hours			After 300 Hours	After 500 Hours
14	Change air compressor oil, oil filter and coalescer element									
15	Replace engine air filter								<div><div></div><div>Engine Operation Manual</div></div>	
16	Inspect the air compressor and generator / hydraulic pump drive belts for wear, damage or excessive cracking								<div><div></div><div>Consult Section 5.4.3 for belt tightening and belt replacement procedures.</div></div>	
17	Check battery cables and connections									
18	Inspect unit mounting bolts									
Continued on next page										

TABLE 5A: MAINTENANCE SCHEDULE									
<div>WARNING</div> <div>Before performing maintenance: Shut down machine, relieve all system pressure and lock out all power, as per the Safety Section of this manual.</div> <div>NOTE THAT THE SYSTEM CAN BE STARTED REMOTELY:</div> <div>Always clearly tag the start-up instrumentation against accidental system start-ups during maintenance.</div>		INTERVALS					NOTE	<div> System maintenance personnel must be familiar with all Safety regulations set forth in the Safety Section of this manual before performing maintenance on this machine.</div>	
		BREAK -IN PERIOD	MAINTENANCE SCHEDULE Hourly or Calendar Period - whichever comes first						
			First 20 Hours of Operation	After 8 Hours or Daily	Every 100 Hours or One Year	Every 200 Hours			After 300 Hours
KEY	TASK DESCRIPTION							ACTION TO TAKE	REFERENCE
19	Blow out the DC welding generator and AC generator					•		Use compressed air to clear out generators	NOTE: carry out every 100 hours if operating in dirty environmental conditions.
20	Replace engine fuel filter					•		Consult the fuel filter replacement procedure.	Engine Operation Manual
21	Check compressor cut-in and cut-out pressures						•	Ensure that the cut-in and cut-out pressure settings are correct.	Consult Section 5.4.2 for pressure settings and adjustments, if needed.
22	Check the engine speed						•	Ensure that the engine speed is running at correct interval. Adjust if necessary.	Consult Section 5.4.2 for engine speed adjustment information.
23	Inspect the welding leads and battery charging cables						•	If so equipped, ensure that welding leads are satisfactory for operation (no cracks or advanced wear). Repair or replace as necessary.	
24	Inspect welding electrode clamp and ground clamp						•	Ensure that welding electrode and ground clamps are in satisfactory for operation (no cracks or advanced wear). Repair or replace as necessary.	
25	Replace the air compressor and generator drive belts							Replace and re-tension the drive belts.	Consult Section 5.4.3 for belt tightening and belt replacement procedures.
26	Inspect the generators and the automatic belt tensioner							Ensure that the automatic belt tensioner is free of rough, noisy or worn bearings.	Consult Section 5.4.3 for belt tightening and belt replacement procedures.

5.3 REPLACEMENT PARTS

Replacement parts should be purchased through your local Vanair® representative or where the I-300 Series Power System was purchased. If, for any reason, parts are not available in this manner, they can be purchased through Vanair directly.

NOTE

For assistance when ordering new replacement parts, consult *Section 7.1, Parts Ordering Procedure*, and *Table 7A: Recommended Spare Parts List*.

Vanair Manufacturing, Inc.

10896 West 300 North
Michigan City, IN 46360

Phone: (219) 879-5100
(800) 526-8817

Service Fax: (219) 879-5335
Parts Fax: (219) 879-5340
Sales Fax: (219) 879-5800

www.vanair.com

NOTE

If additional spare parts are being stored for future use, make certain that they are stored in proper containers that allow for protection against contamination, and kept in a clean area of moderate temperature reading. For information on storing the machine package for periods of non-use, consult *Section 5.5.2, Long Term Storage*.

5.4 PARTS REPLACEMENT AND ADJUSTMENT PROCEDURES



WARNING

Follow all applicable safety recommendations as outlined in *Section 1: Safety* of this manual.



WARNING

Before performing maintenance:

Shut down machine, relieve all system pressure and lock out all power, as per the Safety Section of this manual. If machine is hot, allow package to cool before removing any panel.

NOTE THAT THE SYSTEM CAN BE STARTED REMOTELY:

Always clearly tag the start-up instrumentation against accidental system start-ups during maintenance.



WARNING

Do not remove the radiator cap while coolant is hot. When cool to the touch, rotate cap to the first stop to allow excess pressure to escape. Then remove cap completely.

If overheating should occur, escaping pressurized steam may be present from the radiator or recovery tank. Severe burns can result in contact with this steam.



CAUTION

Always wear personal protective equipment such as gloves, safety shoes or boots, eye, and hearing protection as required for the task at hand.



CAUTION

Compressors and engines generate heat and create hot surfaces. Use caution when operating or servicing equipment. Some surfaces and components may be hot.

IMPORTANT

Do not stop the engine suddenly! Stop the engine after approximately five (5) minutes of unloaded idling.

NOTE

It may be necessary to change the compressor oil and oil filter at earlier intervals if the compressor oil has water contamination or if the compressor system is operated in a dirty environment.

NOTE

Refer to the Engine Operator's Manual for detailed maintenance and replacement procedures for the engine.

NOTE

Inspect and replace damaged components before operation with Genuine Vanair® Replacement Parts.

DO NOT mix different compressor fluid types. Use only Vanguard™ Premium Synthetic Compressor Oil.

Substituting non-Vanguard Oil or non-genuine Vanair filter components will void the warranty.

5.4.1 ADJUSTING THE ENGINE SPEED

Consult the Vanair® Service Department for issues relating to adjustment of engine speed.

5.4.2 ADJUSTING THE PRESSURE SETTING**WARNING**

The compressor cut-in/cut-out pressures have been factory-adjusted within the limits of the compressor manufacturer, and should not need to be adjusted. The maximum pressure limit of the compressor is 175 psi. Pressure should never be allowed to go beyond this limit or what has been set by local laws and regulators. This system will disengage the clutch at 185 psi. A 200 psi safety relief valve is located on the air tank to prevent over pressurizing the system.

The **Cut-in pressure** is defined as the pressure in which the compressor starts pumping. Anytime the pressure in the tank falls below this pressure the compressor is allowed to start pumping.


The **Cut-out pressure** is defined as the pressure in which the compressor stops pumping. When the pressure in the air tank rises above this pressure the compressor is signaled to stop pumping.

Although pressure settings are adjusted at the factory before shipping, and should not need to be adjusted, a situation may occur where it is necessary to manually adjust or reset either or both of these settings. For such cases, consult **Figure 5-2**, and the following procedure:

1. Locate the air pressure control switch [A] at the left rear corner of the machine. Remove the cover-retaining screw fastening the cover to the switch, and remove the cover.
2. To adjust the compressor pressure, turn the cut-in pressure adjustment screw [B] clockwise to increase the pressure and counterclockwise to lessen the pressure.
3. After making your adjustments, position and re-fasten the cover to the pressure switch body with the cover retaining screw.
4. Close the hood, and cycle the compressor several times to ensure that the correct pressures are set.
5. If additional adjustments are needed, repeat steps #1 through #4 until the correct pressures are set.

5.4.3 RE-TENSIONING AND REPLACING THE SERPENTINE DRIVE BELTS

The compressor and generator are driven by the engine using two belts. The belts will generally not need replacement during the

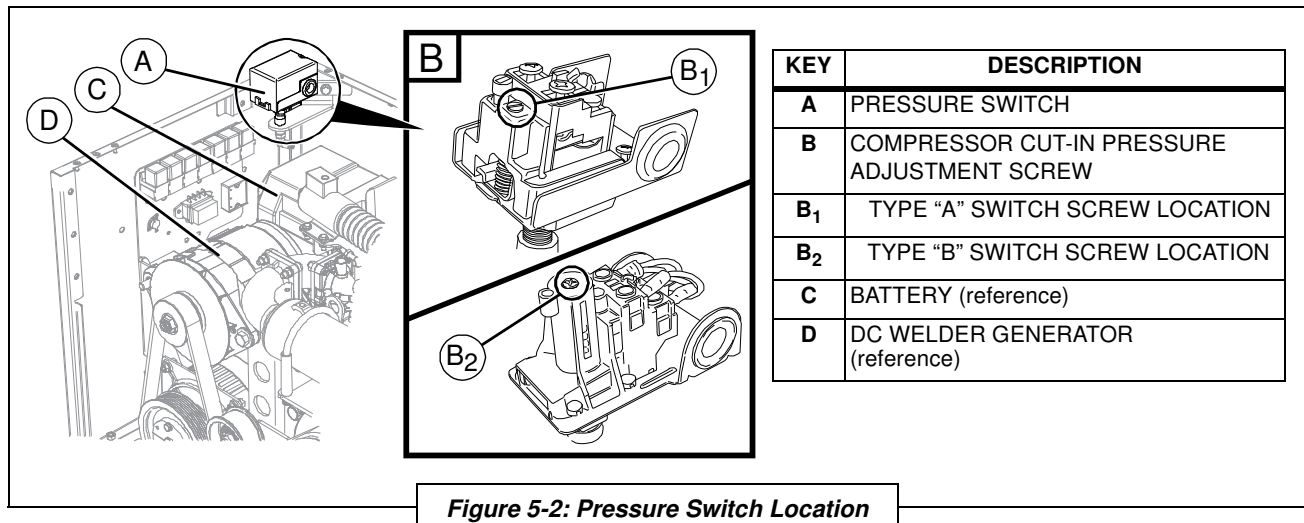

service life of the compressor system. However, you may find that over time they become loose and need to be tightened. The proper tension can be determined by using a tension tester to measure the deflection from a given force.

5.4.3.1 RE-TENSIONING THE AIR COMPRESSOR SERPENTINE DRIVE BELT

Consult **Figure 5-3**, and the following procedure.

1. With the machine off and the ignition key removed, open and remove the front panel.
2. Loosen the four tensioner plate bolts [A] mounting the tensioner plate [C] to the compressor only enough to allow tensioner plate to rotate/slide along the grooves in the plate while still in position (**DO NOT** remove).

This allows the idler sheave [B] to change position, causing the belt to be loosened or tightened.

3. Use a 1/2" drive torque wrench applied to the square tensioning hole [D] to manually rotate the plate/idler about the loosened, but anchored, mounting bolt. Apply torque of 40 ft-lbs.

4. Once a position is achieved that accounts for a satisfactory tension in the belt, torque the four (4) tensioner plate bolts [A] to 12 ft-lbs to secure the tensioner into position.

5.4.3.2 REPLACING THE AIR COMPRESSOR SERPENTINE DRIVE BELT

To replace the air compressor serpentine belt consult **Figures 5-4** and **5-5**, and the following procedure:

With the machine off and the ignition key removed, open and remove the access panel.



BELT ACCESS AT CLUTCH (**Figure 5-4**)

1. Release the electrical connection wire [B] fastened at the front of the clutch plate [C]. Note that this wire is also secured at the harness cable clamp [G].

NOTE

It is not necessary to remove the zip tie securing the clamp to the wire.

2. Locate the clutch retaining cable ([H] in **Figure 5-4**) secured to the floor of the machine near the clutch apparatus of the engine.

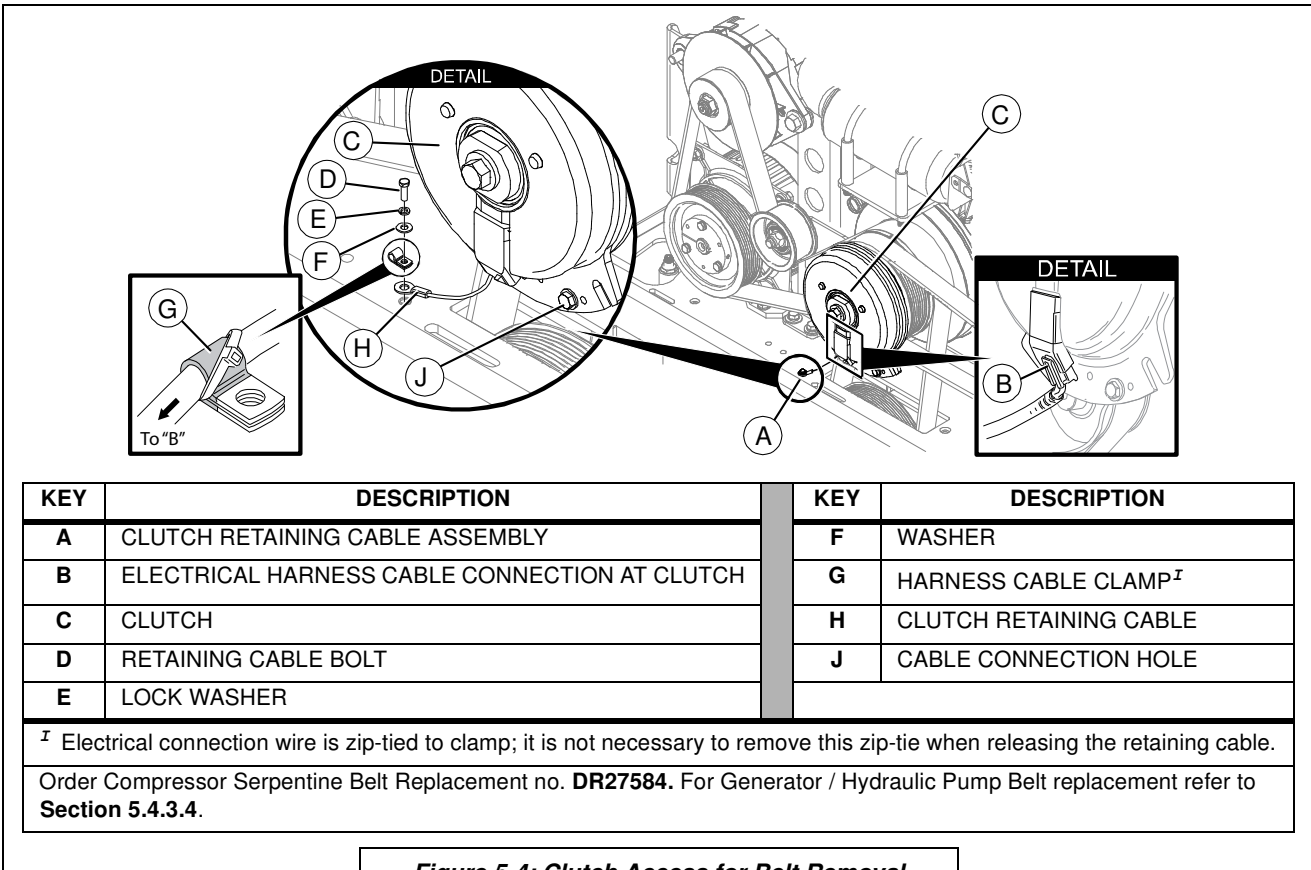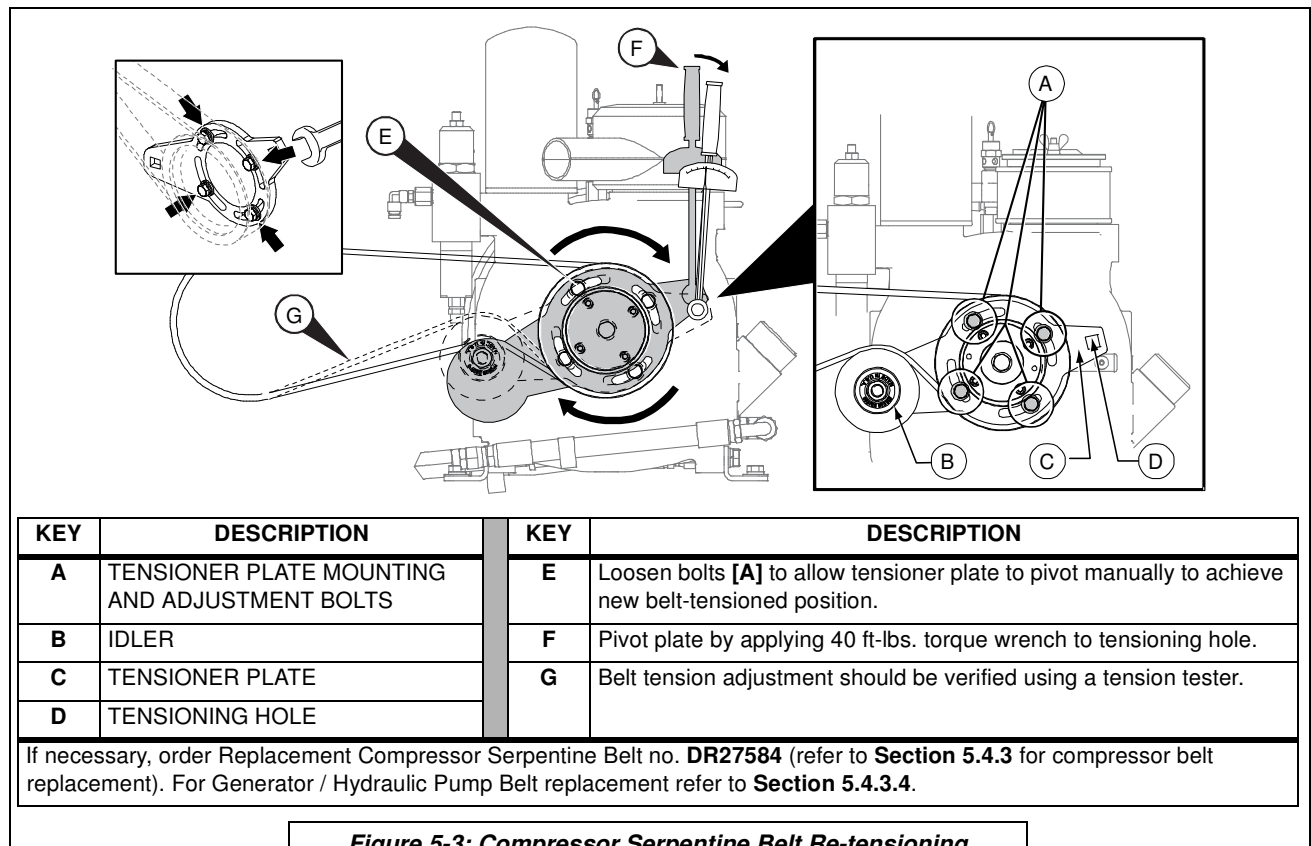

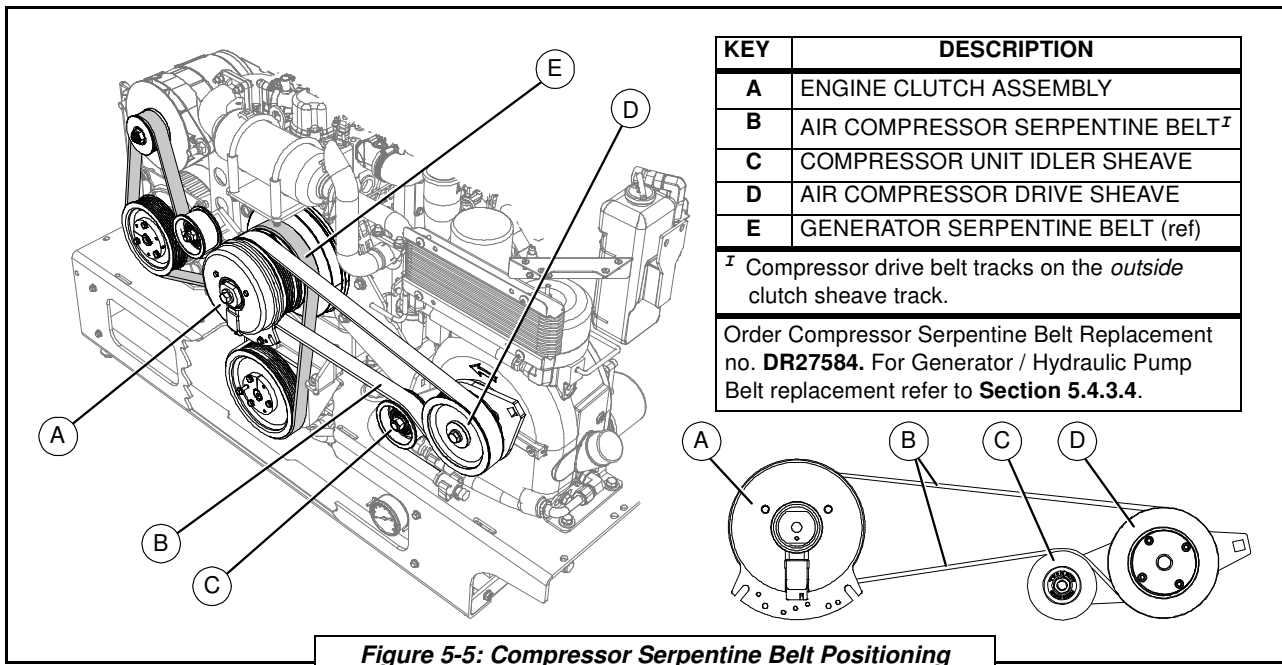


Figure 5-5: Compressor Serpentine Belt Positioning

- Unfasten the clutch retaining cable by removing the retaining cable bolt [D], lock washer [E], washer [F], and harness cable clamp [G] securing the cable to the floor. The harness cable does not have to be removed from the clamp. Retain parts for reassembly.

COMPRESSOR DRIVE BELT REMOVAL AND REPLACEMENT


- Loosen the compressor belt as instructed in steps #1 and #2 in **Section 5.4.3.1**. When belt is loose enough to clear the sheave(s) remove the belt.
- Position and route a new air compressor serpentine belt [B] onto the proper driver tracks as shown in **Figure 5-5**, making sure that it goes on the *outside* driver of the double sheave track of the engine clutch assembly, closest to the face plate of the clutch. Also note that the textured side of the drive belt goes on the inside of the belt for traction with the drive pulleys.
- (**Figure 5-4**) Reposition the clutch retaining cable [H], harness cable

clamp (with harness wire intact) [G], washer [F], lock washer [E] and retaining cable bolt [D] into proper anchoring hole in the frame base. Tighten the bolt securely.

5.4.3.3 RE-TENSIONING THE GENERATOR / HYDRAULIC PUMP SERPENTINE DRIVE BELT

To re-tension the generator / hydraulic pump serpentine belt, consult **Figure 5-6** and the following procedure:

- With the machine off and the ignition key removed, open and remove the front panel.
- Locate the generator tensioner plate [C]. Using a 3/4" socket wrench, loosen, but do not remove, the tensioner adjustment/set bolt [F] and anchor bolt [D] to allow the tensioner plate to pivot.
- Place a torque wrench fitting into the anchor hole [E], and adjust the plate to a reading of 65 ft-lbs.
- Without relieving pressure on the torque wrench, tighten the adjustment/

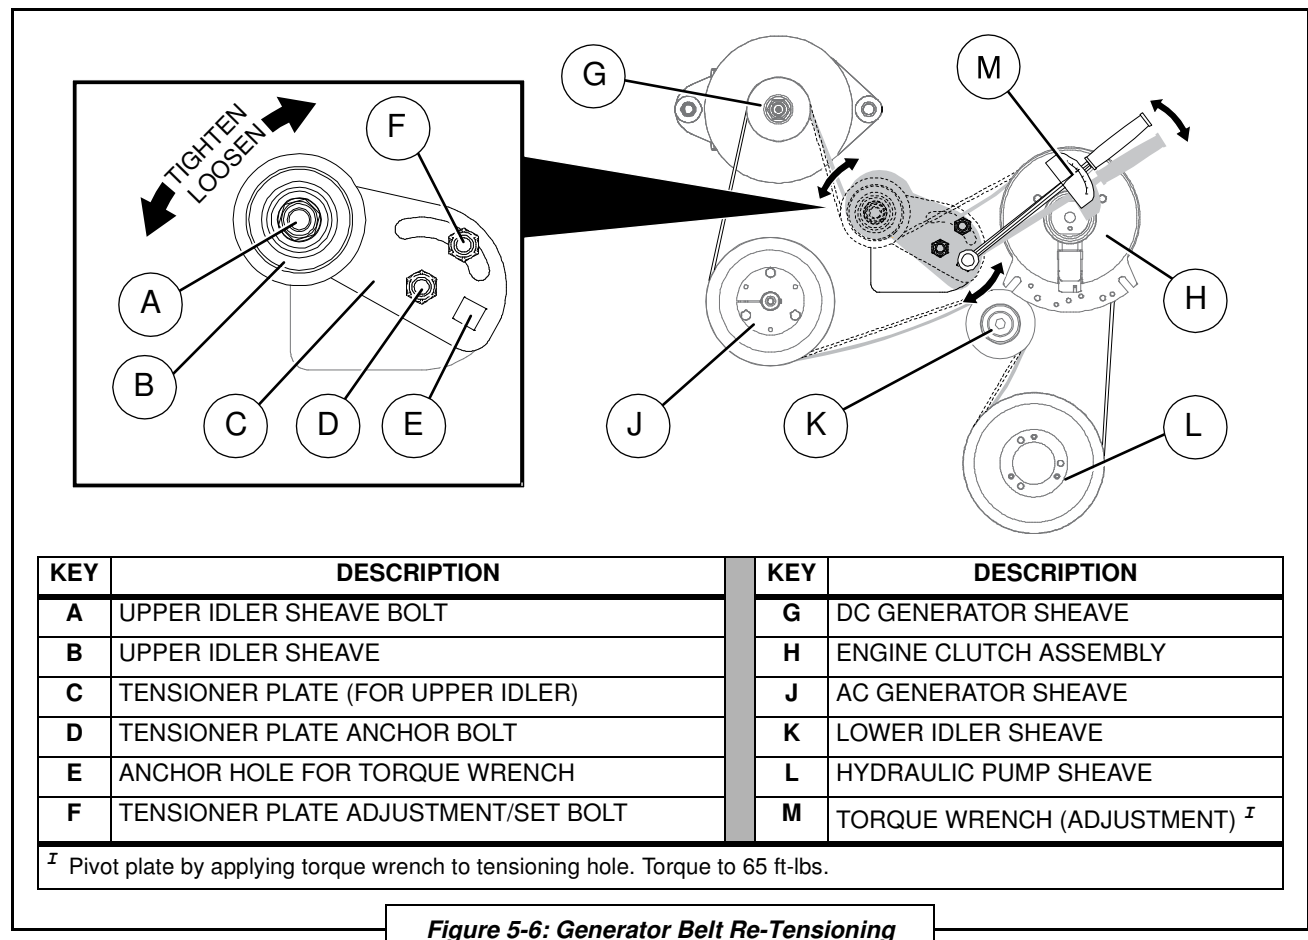

set bolt [F] and anchor bolt [D] to fasten the tensioner plate into the proper torqued position. Remove the torque wrench.

5.4.3.4 REPLACING THE GENERATOR/ HYDRAULIC PUMP SERPENTINE DRIVE BELT

To replace the generator / hydraulic pump serpentine belt, the compressor drive belt must first be removed. Consult **Figures 5-4** (for clutch access to belts), **Figure 5-7**, and the following procedure:

1. With the machine off and the ignition key removed, open and remove the front access panel.
2. To access the drive belts from the clutch pulleys, refer to the steps in **Section 5.4.3.2** under “**Belt Access at Clutch**”.

Once the clutch assembly path is free from the retaining cable and harness wire connection, the belts can be accessed for removal.

The compressor drive belt must first be removed in order to access the generator/ hydraulic drive belt. Refer to **Section 5.4.3.2** for compressor serpentine belt removal. Once the compressor drive belt is removed, the worn generator serpentine belt can be replaced. Refer to **Figure 5-7** and the following steps:

1. Using a 3/4” socket wrench, loosen bolt [F] enough to allow pivoting of tensioner plate [C] to relieve enough tension on the upper idler sheave in order to remove the generator/ hydraulic pump belt; remove belt.
2. Position and route the new generator serpentine belt as shown in **Figure 5-7**.

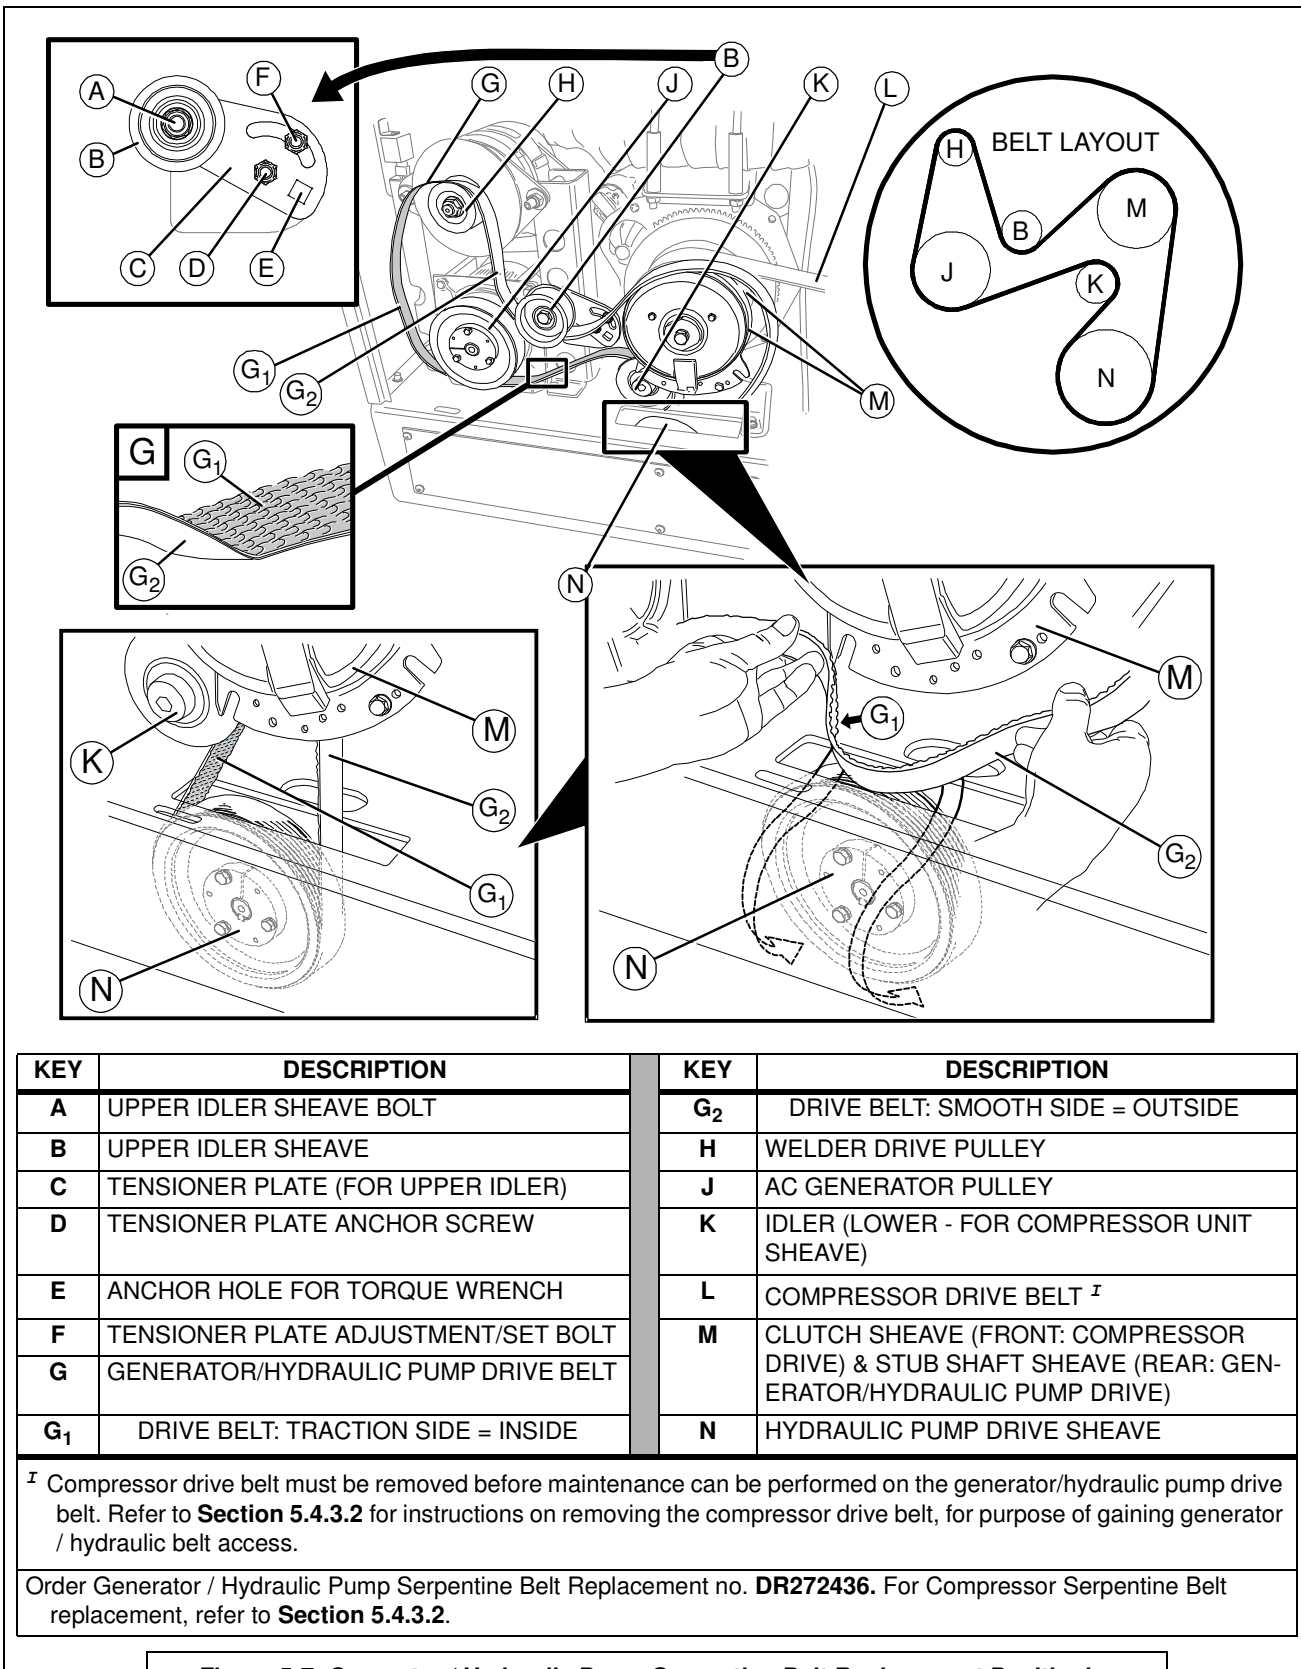


Figure 5-7: Generator / Hydraulic Pump Serpentine Belt Replacement Positioning

Ensure that the traction side of the drive belt [G₁] runs on the *inside* to directly contact the drive pulleys [H, B, M, N, K and J] that run the generators and hydraulic pump. Also note that the drive belt tracks on the inside of the clutch assembly [M] (closest to the engine).

3. Replace the compressor serpentine drive belt (refer to **Section 5.4.3.2**).

At this point the belts will need to be checked for proper tension. Consult **Section 5.4.3.3** on how to re-tension the generator serpentine belt, and **Section 5.4.3.1** to re-tension the compressor serpentine belt.

NOTE

Vanair® recommends that the air compressor and generator/ hydraulic pump drive belts both be changed at the same time even if only one of the belts is in need of being changed.

5.4.3.5 RE-TENSIONING THE ENGINE HYDRAULIC PUMP DRIVE BELTS


The hydraulic pump can only be accessed when the machine's maintenance access panels are removed. Once the panels are removed, consult **Figure 5-8**, and the following procedure:

1. Make certain that the machine is off and the ignition key removed.
2. Loosen, but do not remove, the three (3) tensioner plate bolts [D] mounting the tensioner plate/pump sheave [A] in place. Loosen only enough to allow tensioner plate to pivot along the grooves in the plate while still remaining in position.
3. Use a 1/2" drive torque wrench applied to the square tensioning hole [E] to manually rotate the plate/pump sheave about the loosened, but anchored, mounting bolt (bottom bolt). Apply torque of 51 in-lbs. as per **Table 5B: Measuring Belt Deflection** for the proper tension measurement.
4. Once a position is achieved that accounts for a satisfactory tension in the belt, torque the three (3) tensioner plate bolts [D] to 12 ft-lbs. (16.3 Nm) to secure the tensioner into position.

5.4.4 SERVICING THE SYSTEM FUSES AND CIRCUIT BREAKERS

Consult **Figure 5-9** for the location of the DC welder generator fuse, and **Figure 5-10** to determine the location of the engine and generator breakers. **Figure 5-11** gives the locations of the Power System fuses.

TABLE 5B: MEASURING BELT DEFLECTION (All measurements given are estimations)

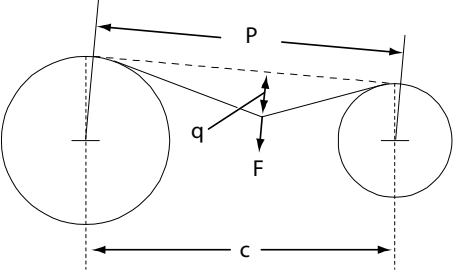 <div style="margin-left: 20px;"> <p>P - Span Length</p> <p>c - Center Distance</p> <p>F - Deflection Force</p> <p>q - Deflection Distance</p> </div>					
SPAN LENGTH (in)	DEFLECTION DISTANCE (in)	DEFLECTION FORCE (lbs)			
		ALL RIBS		TORQUE TO IN-LB TENSION	
		RE-TENSION	NEW INSTALL	RE-TENSION	NEW INSTALL
17.91	0.25	12.000	18.5	53	81

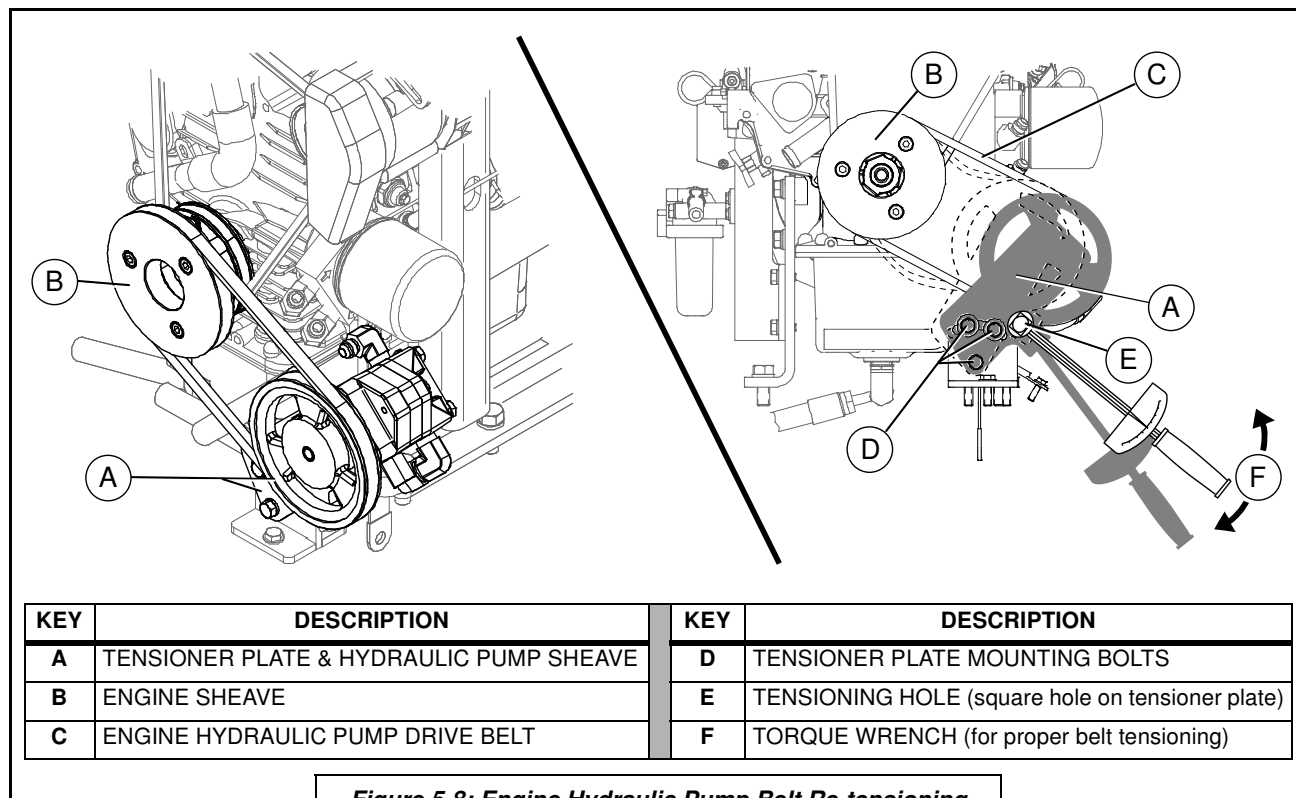


Figure 5-8: Engine Hydraulic Pump Belt Re-tensioning

**DANGER**

Fuses will need to be replaced if they are blown when tripped. When changing any fuse, or dealing directly with any function of the electrical system maintenance, always be aware of the safety warnings given in *Section 1, Safety*.

NOTE


Replacement fuses can sometimes be found at local vendor carriers, such as automobile supply stores, hardware stores, etc.

**WARNING**

Before performing maintenance:
Shut down machine, relieve all system pressure and lock out all power, as per the Safety Section of this manual. If machine is hot, allow package to cool before removing any panel.

NOTE THAT THE SYSTEM CAN BE STARTED REMOTELY:

Always clearly tag the start-up instrumentation against accidental system start-ups during maintenance.

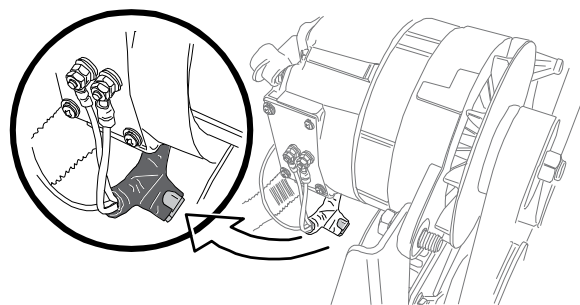

Order 15A Replacement Fuse no. 265909.

Figure 5-9: DC Welder Generator Fuse Location

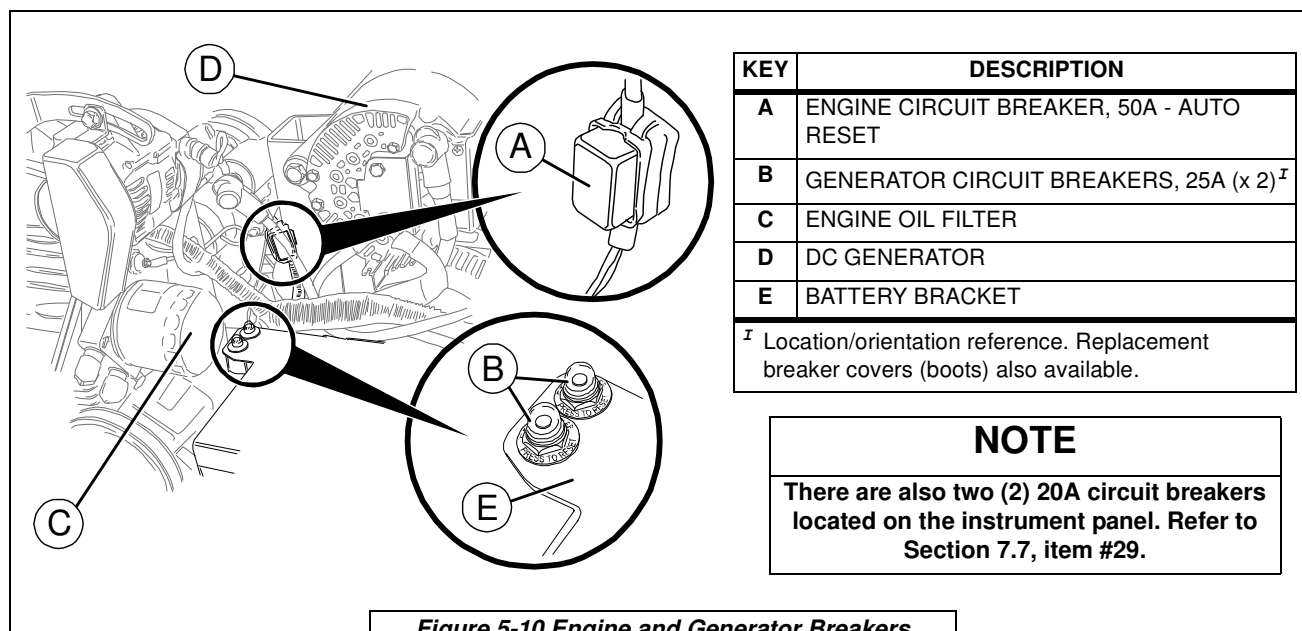


Figure 5-10 Engine and Generator Breakers

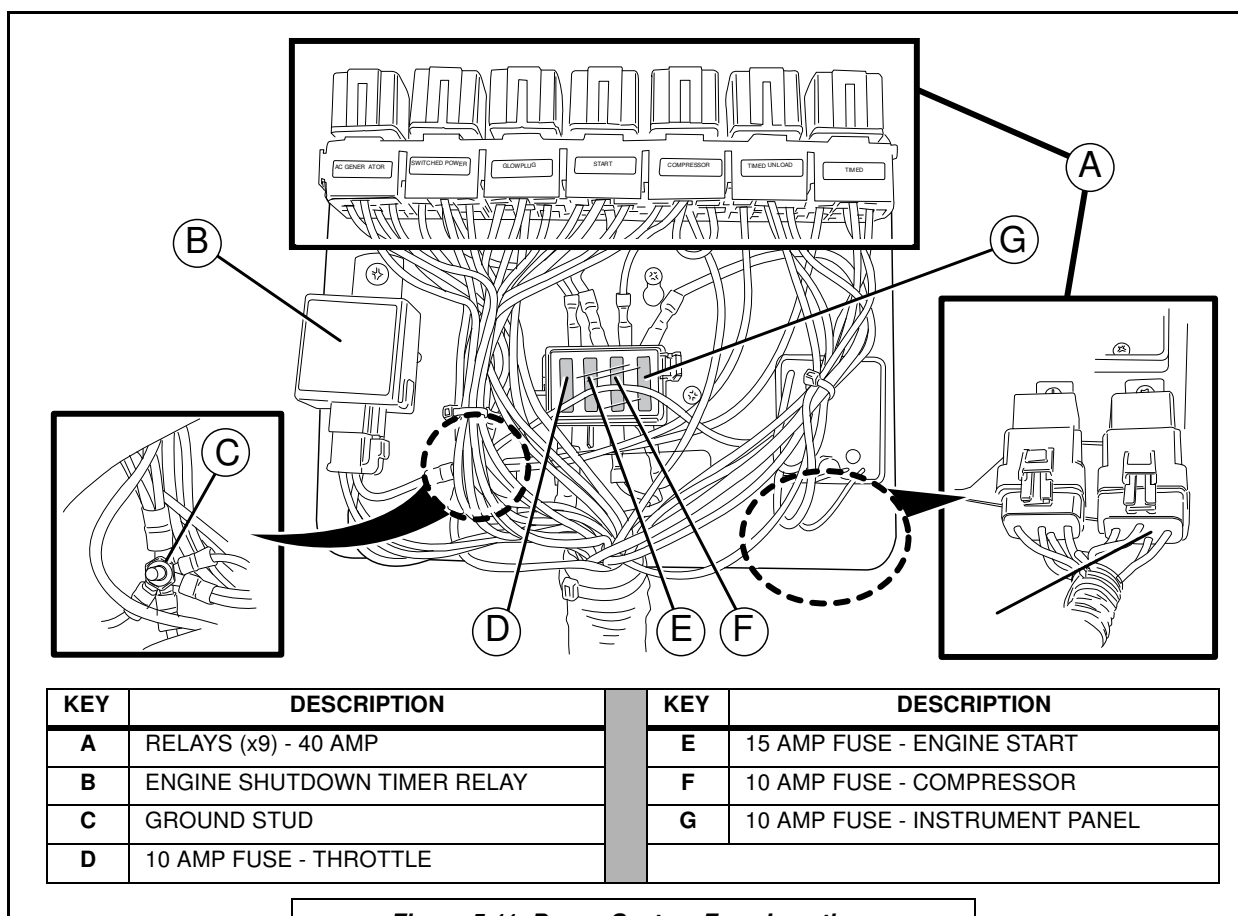


Figure 5-11: Power System Fuse Locations

5.5 STORAGE AND INTERMITTENT USE

5.5.1 INTERMITTENT USE

If the unit is not used very regularly always treat the fuel with a fuel stabilizer.

Check all belts and hoses for signs of deterioration such as visible surface cracks, stiffness or discoloration.

5.5.2 LONG TERM STORAGE

Disconnect the battery cable that is connected to the positive (+) side of the battery.

Depressurize the air tank and open the drain valve on the tank.

Fill the fuel tank with fuel and fuel stabilizer to prevent moisture build-up in the tank, and start up to cycle fuel stabilizer throughout engine before storing.

After fuel stabilizer has been cycled, cover the unit with a tarp or plastic to prevent the accumulation of dust, but leave the bottom open for air circulation.

SECTION 6: TROUBLESHOOTING

6.1 GENERAL INFORMATION

The information contained in this section has been compiled from years' worth of information gathered from the field. It contains symptoms and usual causes for the most common types of problems that may occur. All available data concerning the trouble should be systematically analyzed before undertaking any repairs or component replacement.

A visual inspection is worth performing for almost all problems and may avoid unnecessary additional damage to the machine. The procedures which can be performed in the least amount of time and with the least amount of removal or disassembly of parts, should be performed first. Adherence to a routine maintenance regimen will minimize the occurrence of many common problems. Refer to **Table 5A: Maintenance Schedule**, for a typical maintenance regimen program.

Although Vanair® strives to anticipate situations that may occur during the operation life of the machine package, the **Troubleshooting Guide** may not cover all possible situations. Be aware that additional troubleshooting information may be found in other sources such as the Engine Operation Manual and the Generator Operation Manual. Should the situation remain unresolved after exhausting available sources, contact the Vanair Service Department at:

Phone: 800-526-8817 (toll free)

Phone: 219-879-5100, ext. 400

Fax: 219-879-5335

NOTE

When contacting the Vanair Service Department, please have machine serial number on hand to quickly expedite service. See *Figures W-1* in the *Warranty Details Section* for machine, and specific engine, compressor and generator serial plate locations.



WARNING


DO NOT operate any of the Air N Arc I-300 Series' functions if there is a known unsafe condition. Disable the equipment by disconnecting it from its power source. Install a lock-out tag to identify the equipment as inoperable to other personnel to prevent accidental application.



WARNING

Before starting, performing maintenance, or replacing parts, relieve the entire system pressure by opening the air tank drain/vent valve, which will vent all pressure to the atmosphere.

Refer to Figure 6-1. Open fill cap SLOWLY (contents under pressure) to make sure all pressure has been relieved.

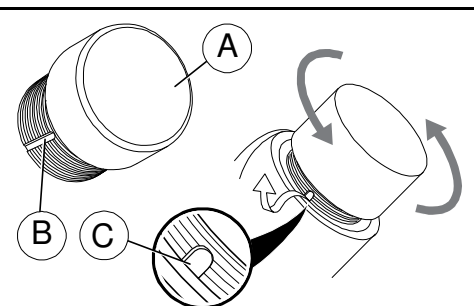

KEY	DESCRIPTION
A	COMPRESSOR FILL CAP (red)
B	FILL CAP BLEED VENT GROOVE
C	Open/crack cap slightly to allow bleed vent to relieve pressure

Figure 6-1: Pressure Relief

6.2 TROUBLESHOOTING GUIDE		Use Section 7, Illustrated Parts List, to visually identify and confirm any part number that may need to be replaced.
Fault/Malfunction	Possible Cause	Corrective Action
ENGINE		
Engine will not crank	Faulty battery connection.	Check for proper battery connections and battery charge.
	Battery out of power	Recharge or replace battery.
	Engine fuse blown	Check engine fuse: See Section 5.4.4, Servicing the System Fuses and Circuit Breakers , and/or consult the Engine Operation Manual.
	Possible starter and/or solenoid problem	Replace if defective.
	Possible seized engine	Consult the Vanair® Service Department.
	Hood switch malfunction	Replace if defective
	Machine hood shutdown safety switch prevents start-up of engine	Close hood panel or check if roof switch is faulty. See Section 1.12, Machine Canopy Access Safety Switches .
	Low or dead battery voltage	Recharge or replace battery.
	Poor grounding	Check and confirm ground connection.
Engine will not start	Low fuel and/or oil supply	Check fuel gauge. Check engine oil level. Replenish as necessary. Consult the Engine Operation Manual for additional information on engine maintenance.
	Pinched fuel line	Replace or reroute if necessary.
	Plugged fuel filter(s)	Replace if necessary. Refer to the Engine Operation Manual.
	Low battery voltage	Recharge or replace if necessary.
		Loose connections—tighten connections.
		Dirty connections—clean connections.
	Plugged engine air filter	Replace engine air filter. Refer to Engine Operation Manual.
	Defective oil pressure switch	Check continuity, and replace if necessary.
	Defective engine temperature switch	Check continuity, and replace if necessary.
	Poor ground connection	Check and clean/renew connection.
Continued on next page		

6.2 TROUBLESHOOTING GUIDE		Use Section 7, Illustrated Parts List, to visually identify and confirm any part number that may need to be replaced.
Fault/Malfunction	Possible Cause	Corrective Action
ENGINE (CONTINUED)		
Engine will not start (continued)	Glow plugs not engaging	Check fuse, wiring, and Engine Operation Manual.
	Fuel solenoid is faulty	Replace fuel solenoid.
Improper Control Operation: Engine does not speed up	Throttle solenoid stuck	Lubricate; replace throttle solenoid if necessary.
	Fuel shut-off solenoid stuck	Free governor and lubricate if necessary.
	Operating pressure too high	Adjust to proper pressure setting. Refer to Section 5.4.2, Adjusting the Pressure Setting . Replace if switch continues to deviate from setting.
	If pressure too high, always on high speed.	Check pressure setting.
	Fuel filter partly plugged	Replace fuel filter. Refer to the Engine Operation Manual.
		Auxiliary fuel pump may be needed for remote fuel tank. Refer to Section 3, Installation .
	Pressure switch faulty	Replace pressure switch.
Defective Throttle Control Relay	Solenoid not actuating	Inspect; replace if necessary.
Improper Control Operation: Engine does not slow down	Leak in control line	Check for leaks; replace line if necessary.
	Pressure switch out of adjustment	Adjust to proper pressure setting. Refer to Section 5.4.2, Adjusting the Pressure Setting . Replace if switch continues to deviate from setting.
	Generator switch left on	Turn generator switch off.
	Pressure switch faulty	Replace pressure switch.
	Throttle solenoid stuck	Free governor and lubricate if necessary. Refer to Engine Operation Manual.
Engine overheats	Low oil level	Check engine oil level. Consult the Engine Operation Manual for additional information on engine maintenance.
	Engine coolant level low	Check coolant level; add if necessary.
	Located too close to obstruction	Move further from obstruction.
Continued on next page		

6.2 TROUBLESHOOTING GUIDE		Use Section 7, Illustrated Parts List, to visually identify and confirm any part number that may need to be replaced.
Fault/Malfunction	Possible Cause	Corrective Action
ENGINE (CONTINUED)		
Engine overheats (continued)	Engine oil filter plugged	Replace engine oil filter. Refer to Engine Operation Manual.
	Engine oil radiator plugged	Clear debris/dirt from cooler core/flush shroud.
	Restricted cooling air in or out	Clear debris/dirt from engine radiator.
	Faulty hydraulic fan pump / motor	Repair hydraulic fan pump / motor.
	Fault with engine cooling system	Consult Engine Operation Manual.
	Compressor oil level low (fan hydraulics depend on compressor oil level)	Check oil level and refill to proper level if necessary (ensure machine is parked on a level surface).
Engine stops during operation	Low oil level	Check engine oil level. Consult the Engine Operation Manual for additional information on engine maintenance.
	High engine temperature	Let engine cool. Check for engine coolant level. Refer to <i>Engine Overheats</i> fault.
	Engine shutdown switch activated	Confirm that access door is properly in place. Replace faulty engine shutdown switch; see Section 1.12, Machine Canopy Access Safety Switches .
	Excessive hydraulic pressure overload	Check hydraulic pressure.
	Low Fuel	Check and refill fuel tank if necessary.
	PLugged air filter	Check and replace air filter element if necessary.
Gradual loss of engine power	Contaminated fuel	Draw and replace fuel supply.
	Engine air filter contaminated	Check engine air filter. Replace if necessary (refer to the Engine Operation Manual).
	Fuel filter(s) contaminated	Check fuel filters. Refer to the Engine Operation Manual.
	Low fuel level	Add fuel.
	Overload	Reduce load; check load use, and reduce.
	Engine not warmed up	Allow engine to warm up.
For additional information concerning an engine problem, consult the Engine Operation Manual.		
<i>Continued on next page</i>		

6.2 TROUBLESHOOTING GUIDE		Use Section 7, Illustrated Parts List, to visually identify and confirm any part number that may need to be replaced.
Fault/Malfunction	Possible Cause	Corrective Action
COMPRESSOR		
Compressor overheats This condition will cause a compressor shutdown and compressor fault light to turn on. Before restarting the compressor, determine the cause for overheating.	Low compressor oil level	Check oil level and refill to proper level if necessary (ensure machine is parked on a level surface).
	Obstructed fluid cooler	Clear debris/dirt from cooler core/flush shroud.
	Obstructed cooler fins	Clear/clean if required.
	Insufficient air flow over cooler	Check for obstructions (frame, body, etc.) to cooling air flow.
	Defective temperature switch	Check switch; replace if necessary.
	Compressor oil filter plugged	Replace compressor oil filter. Also consult Section 5, Table 5A for additional periodic oil filter system maintenance.
	Input rpm too high	Adjust to proper setting; refer to Section 5.4.1, Adjusting the Engine Speed , and the Engine Operation Manual.
	Fan not operating	Low oil; check oil level and refill to proper level if necessary (ensure machine is parked on a level surface). Belt slip on hydraulic pump. Refer to the hydraulic pump sub-sections in Section 5.4.3, Re-tensioning and Replacing the Serpentine Drive Belts .
Compressor shuts down with air demand present	Compressor temperature switch opening	Check compressor oil level. Replenish if necessary.
	Restricted cooling air intake	Reposition machine.
	Fan not operating	Low oil; check oil level and refill to proper level if necessary (ensure machine is parked on a level surface). Belt slip on hydraulic pump. Refer to the hydraulic pump sub-sections in Section 5.4.3, Re-tensioning and Replacing the Serpentine Drive Belts .
	Compressor oil filter plugged	Replace compressor oil filter. Also consult Section 5, Table 5A for additional periodic oil filter system maintenance.
<i>Continued on next page</i>		

6.2 TROUBLESHOOTING GUIDE		Use Section 7, Illustrated Parts List, to visually identify and confirm any part number that may need to be replaced.
Fault/Malfunction	Possible Cause	Corrective Action
COMPRESSOR (CONTINUED)		
Compressor shuts down with air demand present (continued)	Clutch faulty	Inspect; replace if necessary.
	Plugged or restricted cooler core	Flush cooler. Consult the Vanair® Service Department for assistance in cleaning/flushing the cooler core.
	Contaminated cooler fins	Clean cooler fins.
Compressor will not build up pressure	Low compressor oil level	Check oil level and refill to proper level if necessary (ensure machine is parked on a level surface).
	Air demand too high	Check for leaks and take corrective action.
	Air demand too high (continued)	Check air tools for wear, damage, or malfunctions. Replace or repair.
	Compressor capacity too low to accommodate demand	Substitute larger capacity compressor system.
	Compressor air filter plugged	Check compressor air filter. Replace if necessary.
	Pressure switch out of adjustment	Reset pressure switch. Refer to Section 5.4.2, Adjusting the Pressure Setting . Replace if switch continues to deviate from setting.
	Defective pressure switch	Replace pressure switch.
	Engine does not speed up	Adjust speed control. Consult Section 5.4.1, Adjusting the Engine Speed , and the Engine Operation Manual.
	Belt(s) slipping	Re-situate and adjust belt tension, or replace belt if necessary. Consult Section 5.4.3, Re-tensioning and Replacing the Serpentine Belts .
	Service valve is open	Close service valve.
	Pressure gauge is malfunctioning	Check pressure gauge function/control line routing: adjust, repair or replace as necessary.
		Check for proper operation with an auxiliary air source. Replace if necessary.
	Inlet solenoid valve fails to open	Repair/replace inlet valve.
Continued on next page		

6.2 TROUBLESHOOTING GUIDE		Use Section 7, Illustrated Parts List, to visually identify and confirm any part number that may need to be replaced.
Fault/Malfunction	Possible Cause	Corrective Action
COMPRESSOR (CONTINUED)		
Compressor will not build up pressure (continued)	Inlet valve frozen shut	Repair/replace inlet valve.
	Clutch faulty	Inspect; replace if necessary.
	Broken or loose belt	Re-tension or replace belt.
Compressor system over-pressures This condition will cause a compressor shutdown, and a fault light will turn on. Before restarting the compressor, determine the cause of the over-pressure. May also cause the relief valve to open.	Pressure switch setting too high	Reset pressure switch. Refer to Section 5.4.2, Adjusting the Pressure Setting . Replace if switch continues to deviate from setting.
	Pressure switch malfunction	Check for operation/damage: repair or replace.
	Unload solenoid valve defective	Replace solenoid valve.
	Leak in air control line	Check for leaks and take corrective action.
	Restriction in control line	Clean if soiled; if ice is present, clear and remove.
	Damaged/kinked control line	Check line for damage (wear, kinks, etc.). Re-route, re-tie or replace if necessary (refer to Section 7.20, Hose Installation Guide for assistance in running or checking hose lines).
	Control line connections are not properly seated/poor connection quality	Check lines for proper seating/ensure line ends have been cut cleanly and are square. <ul style="list-style-type: none"> Refer to Section 7.20, Hose Installation Guide for assistance in running or checking hose lines. DO NOT use wire cutters: use a loom cutting tool or a clean, sharp razor blade.
	Inlet valve Teflon "O" ring popped out of groove	Replace "O" ring.
	Inlet valve piston is stuck in down position.	Check for proper operation with an auxiliary air source—replace or rebuild inlet valve.
	Compressor shaft seal is leaking	Replace shaft seal with available kit.
	Defective safety valve	Replace safety valve.
	Plugged coalescer	Replace coalescer.
No service air output (See also <i>Compressor will not build up pressure</i>)	If equipped, OSHA valve/velocity fuse, not functioning properly	Reset or replace OSHA valve.
Continued on next page		

6.2 TROUBLESHOOTING GUIDE		Use Section 7, Illustrated Parts List, to visually identify and confirm any part number that may need to be replaced.
Fault/Malfunction	Possible Cause	Corrective Action
COMPRESSOR (CONTINUED)		
No service air output (See also <i>Compressor will not build up pressure</i>) (continued)	Clogged compressor air filter	Check compressor air filter; replace if necessary
	Solenoid valve sending continuous signal to inlet valve	Rebuild or replace solenoid valve if defective.
	Incorrect compressor speed	Adjust speed. Refer to Section 5.4.2, Adjusting the Pressure Setting .
	Minimum pressure/check valve is malfunctioning	Rebuild or replace check valve.
	Belt not tensioned properly	Check belt tension; replace belt(s) if necessary. Refer to Section 5.4.3 for belt maintenance or replacement procedures.
Compressor stalls	Pressure switch setting too high	Adjust pressure switch setting. Refer to Section 5.4.2, Adjusting the Pressure Setting . Replace if switch continues to deviate from setting.
	Speed is set too low	Check to see if compressor goes to high speed.
System operating pressure below specified minimum	Air demand too high	Check air tools for wear, damage, or malfunctions. Replace or repair.
	Compressor capacity too low to accommodate demand	Substitute larger capacity compressor system.
	System leaks or is damaged	Inspect for leaks. Repair and/or replace damaged parts as necessary.
	Pressure switch set too low/ malfunction	Adjust pressure switch setting. Section 5.4.2, Adjusting the Pressure Setting . Replace if switch continues to deviate from setting.
	Input rpm too low	Adjust to proper setting.
	Contaminated inlet valve	Remove valve and clean piston. Order inlet valve repair kit if necessary.
	Inlet solenoid valve fails to open	Repair/replace inlet valve.
	Inlet valve frozen shut	Repair/replace inlet valve.
Excess amount of oil in air discharge	Machine not on level surface	Move machine to level surface.
Continued on next page		

6.2 TROUBLESHOOTING GUIDE		Use Section 7, Illustrated Parts List, to visually identify and confirm any part number that may need to be replaced.
Fault/Malfunction	Possible Cause	Corrective Action
COMPRESSOR (CONTINUED)		
Excess amount of oil in air discharge (continued)	Compressor oil level too high	The correct oil level is between the bottom of the oil port threads (low level) to the top lip of the port's threads (high level) (refer to Figure 5-1). Drain excess oil to correct level.
	Scavenger system not operating	Inspect scavenger line for obstructions or leaks. Replace if necessary.
	Coalescer element plugged or damaged	Replace the coalescer element.
Excessive moisture in the compressed air	Moisture accumulating in air tank	Drain water from air tank.
WELDER		
Welder and battery charger behave erratically	Connection cables or receptacles are soiled/contaminated	Check for twisted cables and/or soiled/contaminated or loose receptacle connections. Untwist and/or straighten out any suspected cable tensions. Carefully wipe off any contaminants to receptacle connectors before re-connecting. Replace any worn or damaged cables or receptacles. Contact Vanair® Service Department if behavior persists.
	Welding function is not drawing enough operating power	If running more than one function simultaneously, turn off competing function.
	Input voltage too low	Battery must be 25 volts.
No welder output	Fuse at welder field blown	Replace the welder field fuse. Refer to Section 5.4.4, Servicing the System Fuses and Circuit Breakers
	Main cable loose connection	All Anderson (weld cable) connection plugs on machine and instrument panel.
	Broken or loose belt	Re-tension or replace belt.
No welder output in CC mode	Bad ground connect	Make sure of connection. Clean welding surface.
	Faulty electrical circuit	Check electrical circuit.
	Broken or loose belt	Re-tension or replace belt.
Continued on next page		

6.2 TROUBLESHOOTING GUIDE		Use Section 7, Illustrated Parts List, to visually identify and confirm any part number that may need to be replaced.
Fault/Malfunction	Possible Cause	Corrective Action
GENERATOR		
No AC generator output	Serpentine belt damaged or not tensioned properly	Re-situate and adjust belt tension, or replace belt if necessary. Consult Section 5.4.3, Re-tensioning and Replacing the Serpentine Belts . Order replacement belt.
	Faulty AC generator relay	Check; replace if necessary.
	Faulty capacitor	Check; replace if necessary.
	Circuit breaker / GFCI tripped	Replace/reset breakers.
Low AC voltage	Engine speed too low for demand	Adjust speed control. Consult Section 5.4.1, Adjusting the Engine Speed , and the Engine Operation Manual.
	Weak, faulty or incorrect capacitor	Check; replace if necessary.
	Serpentine belt damaged or not tensioned properly	Re-situate and adjust belt tension, or replace belt if necessary. Consult Section 5.4.3, Re-tensioning and Replacing the Serpentine Belts .
High AC voltage	Engine speed too high for demand	Adjust speed control. Consult Section 5.4.1, Adjusting the Engine Speed , and the Engine Operation Manual.
BATTERY BOOST		
No voltage shows when select charge or boost	Hooked to battery with less than (<) 2.5 volts; battery voltage inadequate	Check battery voltage; battery must be at properly-sized/charged battery of at least 2.5 volts.

SECTION 7:

ILLUSTRATED PARTS LIST

7.1 PARTS ORDERING PROCEDURE

Part orders should be placed through the distributor from whom the unit was purchased. If, for any reason parts cannot be obtained in this manner, contact the factory directly at the address or phone numbers below.

When ordering parts, always indicate the **Serial Number** of the machine package. This can be obtained from the Bill of Lading for the machine package, or from the compressor unit serial number plate. See **Figure 7-1** for location of machine package serial plate. Consult **Table 7A: Recommended Spare Parts List** on the next page for a listing of replacement parts.

VANAIR® MANUFACTURING, INC.

10896 West 300 North

Michigan City, IN 46360

Telephone: (800) 526-8817


(219) 879-5100


Service Fax: (219) 879-5335

Parts Fax: (219) 879-5340

Sales Fax: (219) 879-5800

www.vanair.com

		800-526-8817 www.vanair.com
MODEL NUMBER		
SERIAL NUMBER		
MAXIMUM PRESSURE		
COMPRESSOR INPUT RPM		
		260940

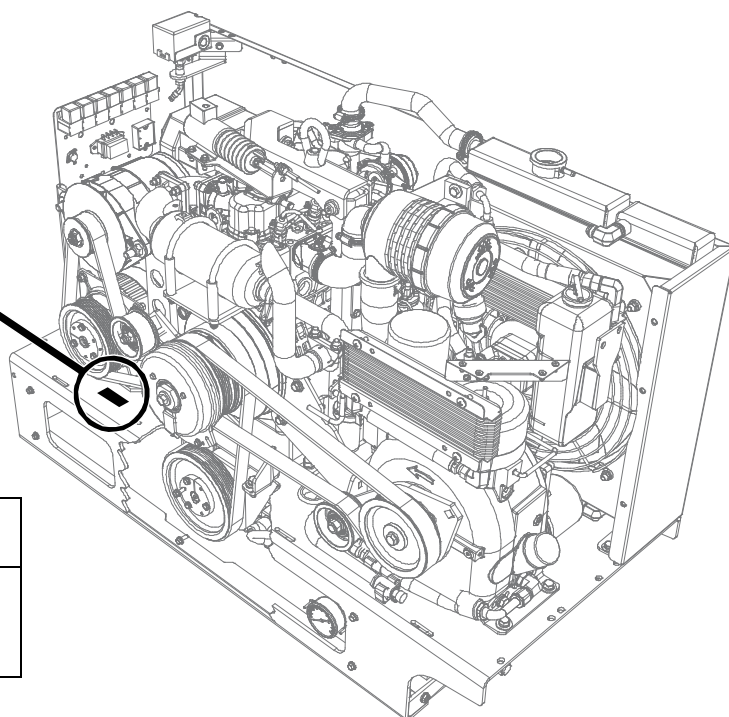

NOTE

For engine, compressor, and generator serial tag locations, refer to **Figure W-1** in the Warranty Procedure Section.

Figure 7-1: Machine Package Serial Number Plate / Serial Number Location

TABLE 7A: RECOMMENDED SPARE PARTS LIST ^I

	KEY NO.	ORDER PART NUMBER	DESCRIPTION	QTY
ROUTINE/SCHEDULED MAINTENANCE ITEMS	1	264626-1GAL	Vanguard™ Premium Oil ^{II}	1 gal
	2	KIT1153	Compressor Maintenance Kit (contains part items #1, 3, 4 & 5)	1
	3	264469	Element, Compressor Air Filter	1
	4	264471	Element, Compressor Oil Filter	1
	5	264470	Element, Compressor Air/Fluid Separator Spin-on Style Coalescer	1
	6	KIT1154	Engine Maintenance Kit (contains part items #7, 8 and 9)	1
	7	270764	Element, Engine Air Filter	1
	8	EN38480	Filter, Engine Oil Filter	1
	9	RC77662	Filter, Engine Fuel	1
NON-ROUTINE/SCHEDULED MAINTENANCE ITEMS	10	264154-102	Kit, Air Inlet Valve Rebuild	1
	11	270766	Kit, Compressor Shaft Seal Rebuild	1
	12	270765	Kit, Minimum Pressure / Check Valve Rebuild	1
	13	DR27584	Belt, Serpentine Compressor	1
	14	DR272436	Belt, Hydraulic Pump Drive and Generators	1
	15	267306	Breaker, Circuit 50A	1
	16	CO270786	Breaker, 25A	2
	17	PR81817	Boot, 25A Breaker	2
	18	263173	Fuse, 10 Amp	3
	19	265909	Fuse, 15 Amp	1
	20	270501	Relay, 40A	9
	21	264325	Switch, 240 °F NC	1
	22	HY270358	Motor, Hydraulic (Fan)	1
	23	CO62617	Breaker, Circuit 20A	2
	24	CO79106	Gauge, Hour Meter	1
	25	CO89649	Gauge, Air, Dry	1
	26	PR270548	Boot, Breaker 3/8" (for 20A instrument panel breakers)	2
	27	HY270357	Pump, Hydraulic (Engine)	1
	28	KIT1197	Kit, Open Center / Filter Rerouting	1
	29	TU2733020	Kit, Hose and Fittings	1

^I For guidance on routine maintenance, refer to **Table 5A: Maintenance Schedule Table** in **Section 5, Maintenance**, and the Engine Operation Manual.

^{II} For fluid fill amounts, refer to **Section 2, Specifications**.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

IMPORTANT

Use only approved Vanair® Vanguard™ Premium Synthetic Oil and Genuine Vanair Parts. Inspect and replace damaged components before operation. Substituting non-Vanguard Oil or non-genuine Vanair filter components will VOID THE COMPRESSOR WARRANTY!

IMPORTANT


The listing in the recommended spare parts list table contains items that require maintenance on a routine basis, and also those parts that may require maintenance over the course of the compressor package's performance schedule. Although this recommended list is proffered as a comprehensive guide to replacement parts, damage may occur to the machine beyond the scope of this listing.

Should any part of the compressor package that is not listed in Table 5A become damaged or inoperable, use the various sub-sections in Section 5 to best locate and identify the damaged part(s).

IMPORTANT

If additional spare parts are being stored for future use, ensure that they are stored in proper containers that allow for protection against contamination, and kept in a clean area of moderate temperature reading. For information on storing the machine package for periods of non-use, consult *Section 5.5.2, Long Term Storage*.

7.2 AIR N ARC I-300 SYSTEMS ASSEMBLIES

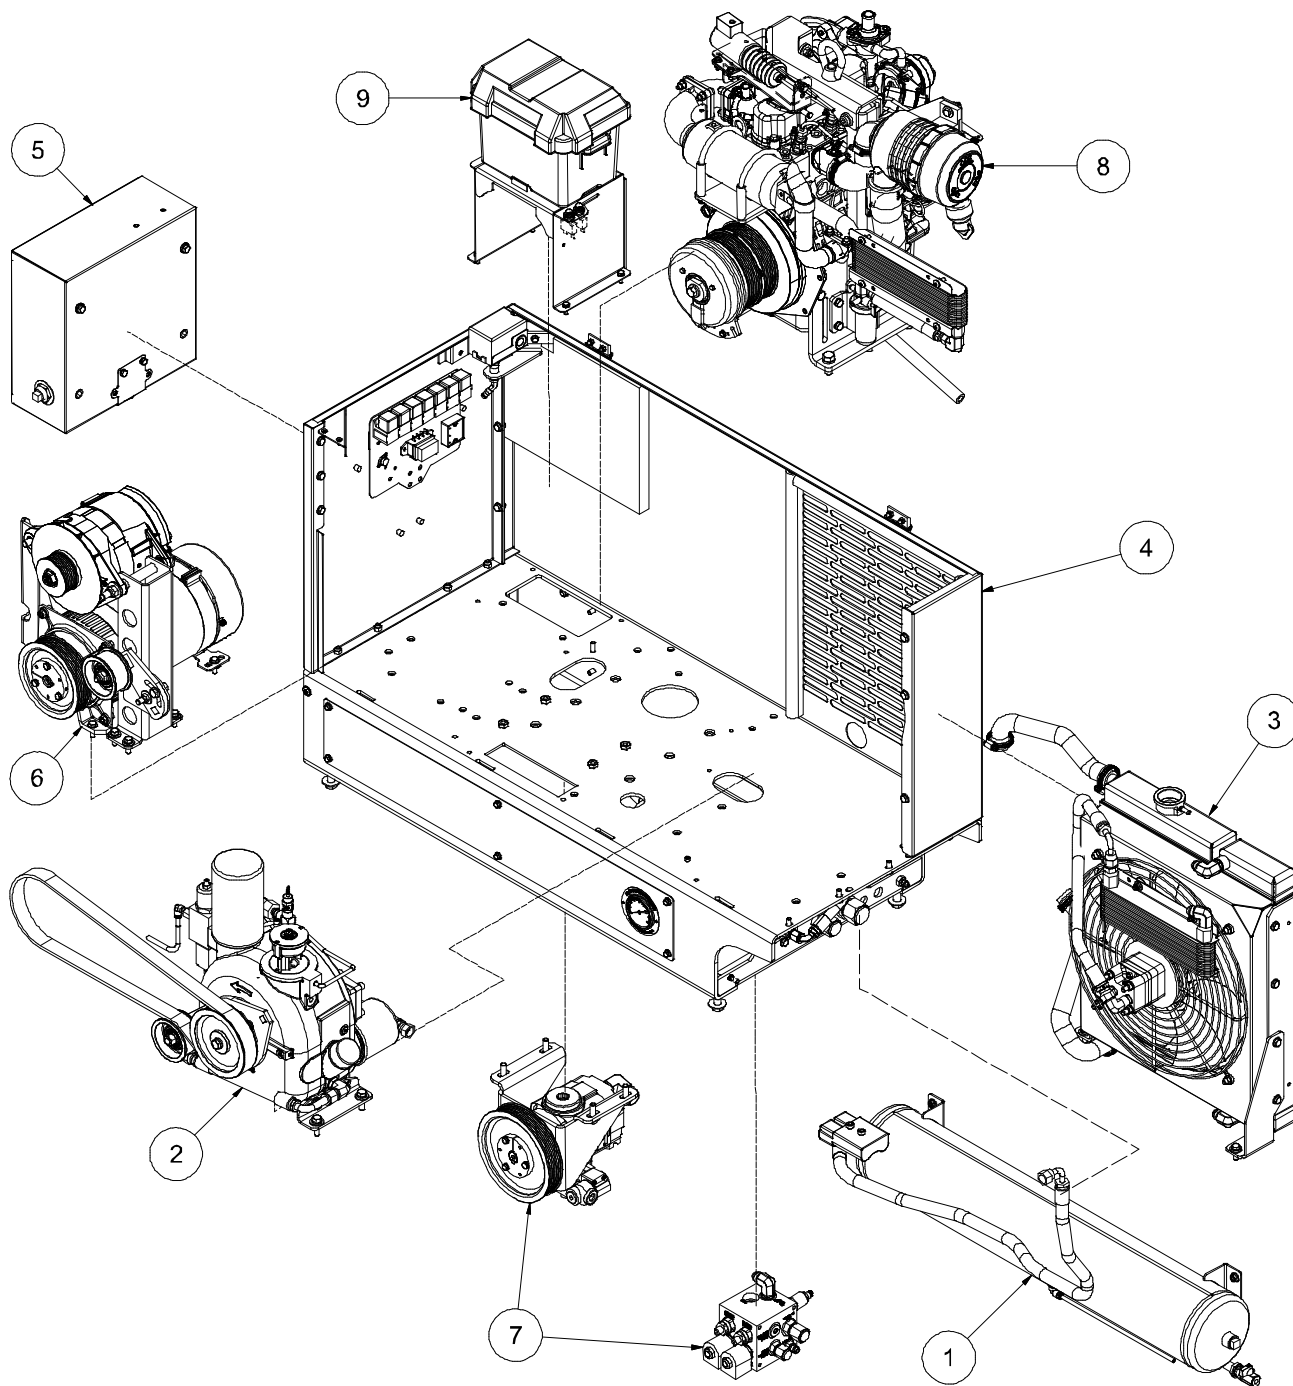

PA6130069-001ID_r0


7.2 AIR N ARC I-300 SYSTEMS ASSEMBLIES

ITEM	DESCRIPTION	PART NUMBER	QTY	REFERENCE SECTION ^I
1	AIR STORAGE ASSEMBLY	PA6000079-001ID	1	7.3
2	ID, COMPRESSOR & PARTS	PA6010123ID	1	7.4
3	ID, COOLER ASSEMBLY	PA6020024ID	1	7.5
4	ID, FRAME & CANOPY	PA6030062-001ID	1	7.6
5	INSTRUMENT PANEL	PA6040047ID	1	7.7
6	ID, GENERATORS AND PARTS	PA6050012ID	1	7.8
7	ID, HYDRAULIC PISTON PUMP ASSY	PA6100036-001ID	1	7.9 ^{II}
8	ID, ENGINE & DRIVE PARTS	PA6100056ID	1	7.10
9	ID, ELECTRICAL SYSTEM I300D EM	PA6120136ID	1	7.11
10	ID, MANIFOLD ASSEMBLY	PA6120134-03ID	1	7.12
11	ID, HYDRAULIC TANK ASSEMBLY	PA6120139ID	1	7.13
12	DECAL LOCATIONS	-	-	7.14

^I For a detailed breakdown of the item number assembly, refer to the section listing in this column, for this manual.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.3 AIR STORAGE ASSEMBLY

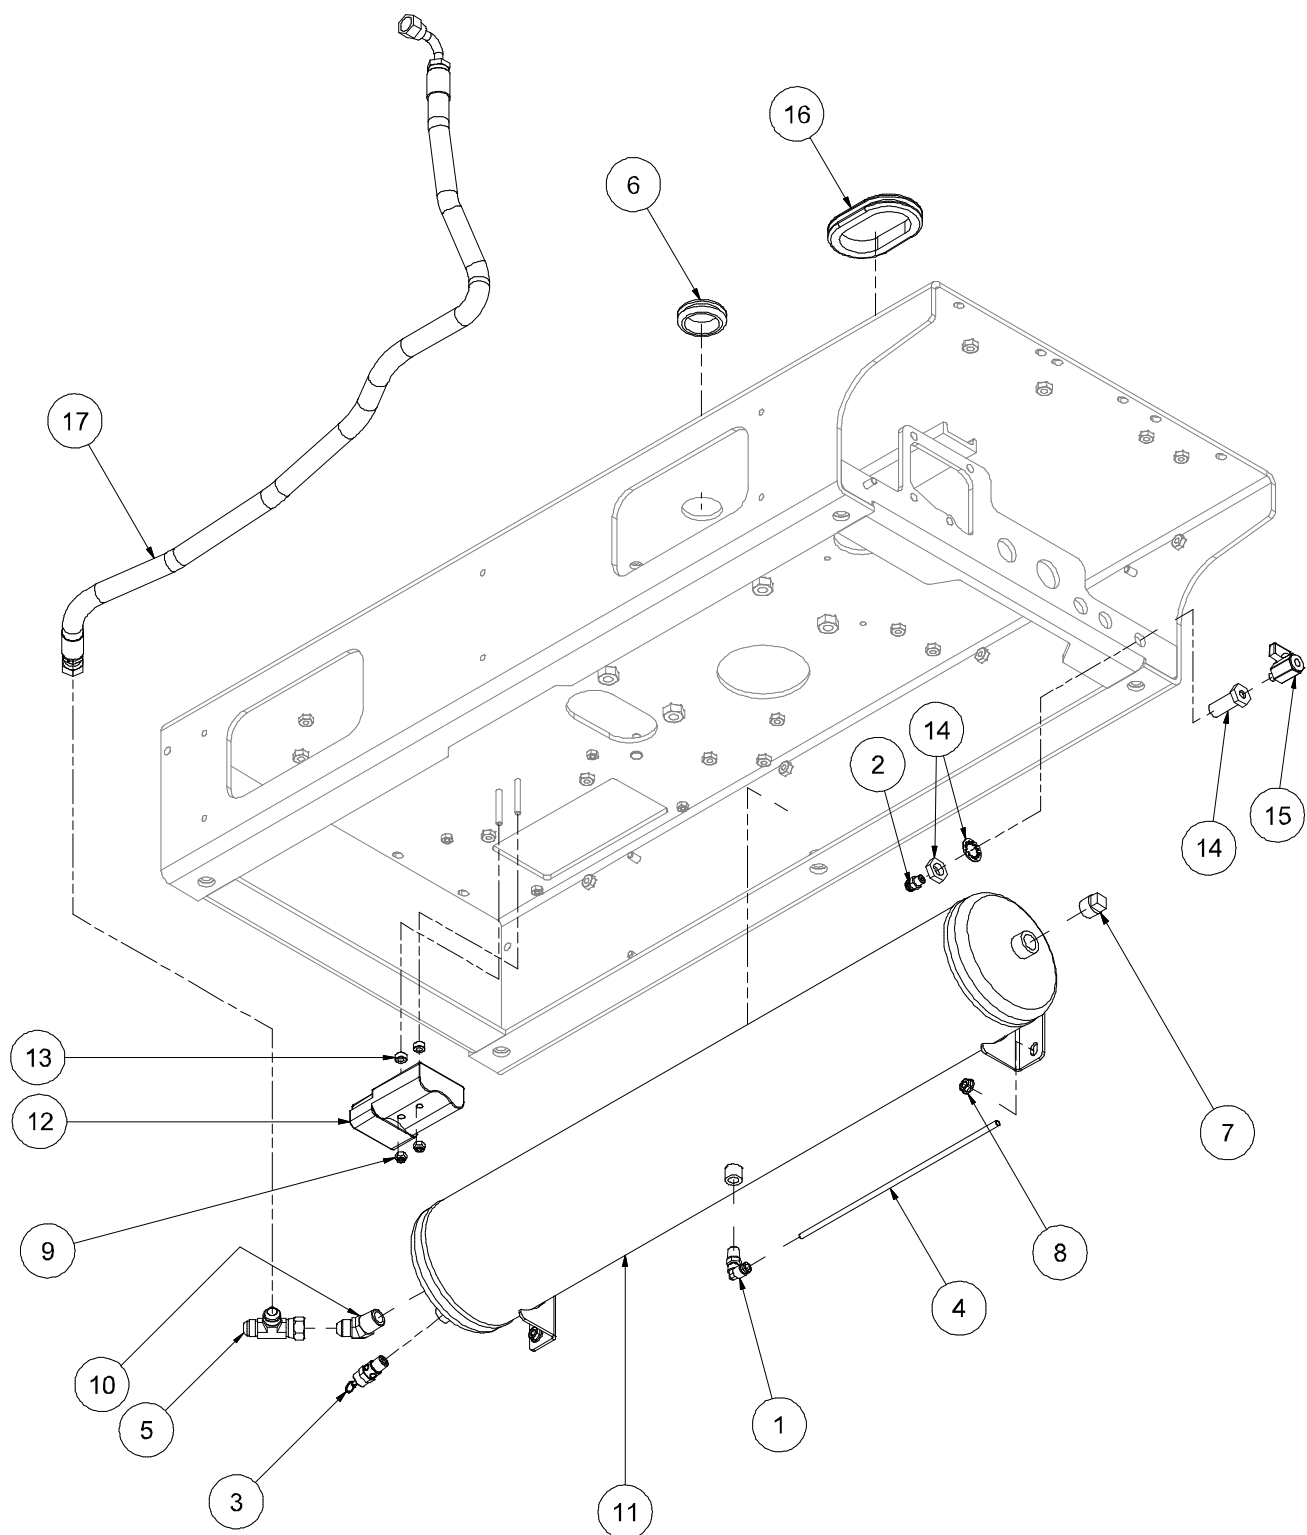


PA6000079-001ID_r0

7.3 AIR STORAGE ASSEMBLY			
ITEM	DESCRIPTION	PART NUMBER	QTY
1	ELBOW, 90 deg. PUSH ON 1/4T x 1/4P	261310	1
2	CONNECTOR, 1/8P x 1/4T PUSH ON	261316	1
3	VALVE, RELIEF 200 PSI 1/4 NPT MALE	264232	1
4	TUBING, 1/4DIA., NYLON, 230 PSI X 3.5 FT	264480	1
5	TEE,RUN SWIVEL 1/2	268769-004	1
6	GROMMET,RUBBER 1 3/4X2 1/8X1/4	269302	1
7	PLUG, PIPE 1/2	807800-020	1
8	NUT, HEX FLANGE 5/16-18	825305-283	4
9	NUT, HEX LOCKING 1/4-20	825504-145	2
10	ELBOW, 45 DEG. 1/2 MPT x #8 MJIC	860008-050	1
11	TANK,AIR ACCUMULATOR 4 GAL	A1269633	1
12	HOUSING, CONNECTOR, 350 AMP, GRAY	EL52049	1
13	SPACER, NYLON, 1/2 OD x 1/4 ID	FA29036	2
14	PIPE BRASS, BULKHEAD 1/8 NPT	FI54337	1
15	VALVE, BALL MINI, 1/8NPT M/F,	FI95272	1
16	GROMMET, BLACK RUBBER, 3.00ID	PR272450	1
17	HOSE, COMPRESSOR TO AIR TANK	TU273020-025	1

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.4 COMPRESSOR AND PARTS ASSEMBLY (1 OF 2)

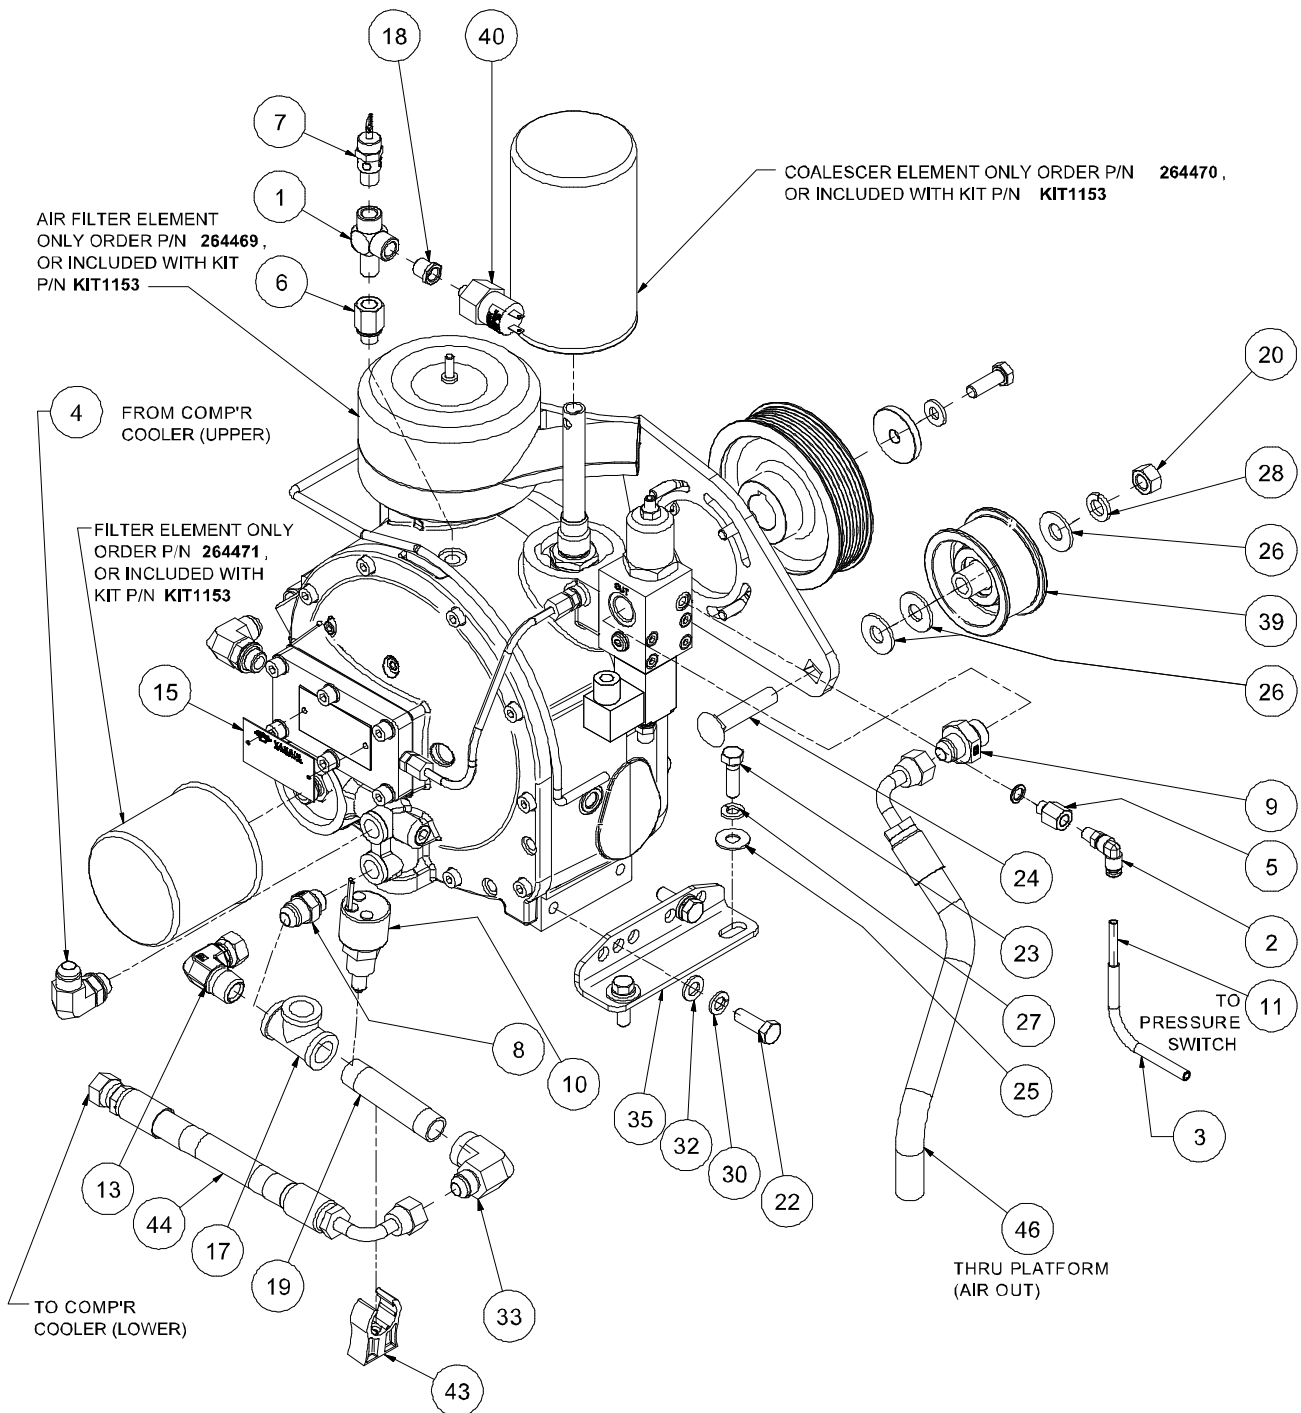

PA6010123ID_r2 (1 of 2)

7.4 COMPRESSOR AND PARTS ASSEMBLY (1 OF 2)

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1	TEE, MALE STREET 1/4 x 1/4 x 1/4	260402-102	1	24	BOLT, CARRIAGE 1/2-13UNC X 2-1/2" LG.	829508-250	1
2	ELBOW, 1/4T x 1/8P PUSH-ON	261309	1	25	WASHER, FLAT 3/8	838206-071	4
3	LOOM, FLEX-GARD 1/4 ID X 3 FT	262751	3 ft	26	WASHER, FLAT 1/2	838208-112	3
4	ELBOW, 90 DEG. 1/2 MJIC X 3/8 MBSPP ADJ	263747-021	2	27	WASHER, LOCK 3/8	838506-094	4
5	ADAPTER, FEMALE PIPE x BSPP 1/8	263748-001	1	28	WASHER, LOCK 1/2	838508-125	1
6	ADAPTER, FEMALE PIPE x BSPP 1/4	263748-004	1	29	WASHER, LOCK METRIC M8	838808-200	4
7	VALVE, RELIEF 200 PSI 1/4 NPT MALE	264232	1	30	WASHER, LOCK METRIC M10	838810-220	4
8	ADAPTER, M-JIC 1/2 x BSPP 3/8	264312-007	1	31	WASHER, FLAT METRIC M8	838908-180	4
9	ADAPTER, MJIC x MBSPP 1/2 x 1/2	264312-008	1	32	WASHER, FLAT METRIC M10	838910-220	4
10	SWITCH, TEMP 240 DEG F NC NASON	264325	1	33	ELBOW, 37FL/90F 1/2X1/2	860308-050	1
11	TUBING, 1/4 DIA., NYLON, 230 PSI X 3 FT	264480	3 ft	34	TENSIONER, AIR END ^{II}	A1270372	1
12	OIL, VANGUARD 3.5 QUARTS ^I	264626	0.88 gal	35	BRACKET, COMPRESSOR MTG	A1270373	2
13	ELBOW, 1/2MPT X 1/2FJIC SWVL 90	268929-008	1	36	WASHER, SHEAVE COMPRESSOR	A1270884	1
14	COMPR & PART VANAIR 31 EMC, 12VDC STD SHAFT	269761	1	37	SHEAVE, COMPRESSOR "8-GROOVE"	DR270371	1
15	TAG, COMPR VANAIR 31	270610	1	38	BELT, SERPENTINE, (GATORBACK 4080537) 8 RIB X 53.75" LG EFFECTIVE LENGTH, BLK RUBBER	DR27584	1
16	CLIP, TOOL ZINC 3/4 TO 1-1/8	272059	1	39	IDLER, 1.375 WIDTH, 3 3/8 DIA	DR46584	1
17	TEE, PIPE GALV 1/2	804415-020	1	40	SWITCH, PRESSURE N.C. 185 PSI	EL270002	1
18	BUSHING, RED STEEL 1/4 x 1/8	807600-005	1	41	WASHER, 3/8ID X 13/16OD	FA49463	1
19	NIPPLE, PIPE GALV 1/2 x 3-1/2 LG.	823108-035	1	42	PIPE BRASS, PLUG, COUNTERSUNK 1/8" NPT	FI67437	1
20	NUT, HEX 1/2-13	825208-448	1	43	CLIP, DRAIN HOSE HOLDER, 3/4	HA270218	1
21	CAPSCREW, HEX M8-1.25 x 25mm	828008-025	4	44	COMPRESSOR TO OIL COOLER, LOWER ^{III}	TU273020-001	1
22	CAPSCREW, HEX 10MM 1.5 X 30MM	828010-030	5	45	HOSE, COMPRESSOR DRAIN ^{III}	TU273020-002	1
23	CAPSCREW, HEX GR8 3/8-16X1 1/4	829406-125	4	46	COMPRESSOR TO AIR TANK UPPER ^{III}	TU273020-003	1

^I Part not shown.


^{II} Tension belt support to 40 ft-lbs.

^{III} Hoses with "TU271765" prefix are part of hose kit TU271765.

NOTE: Pipe dope all NPT fittings.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.4 COMPRESSOR AND PARTS ASSEMBLY (2 OF 2)

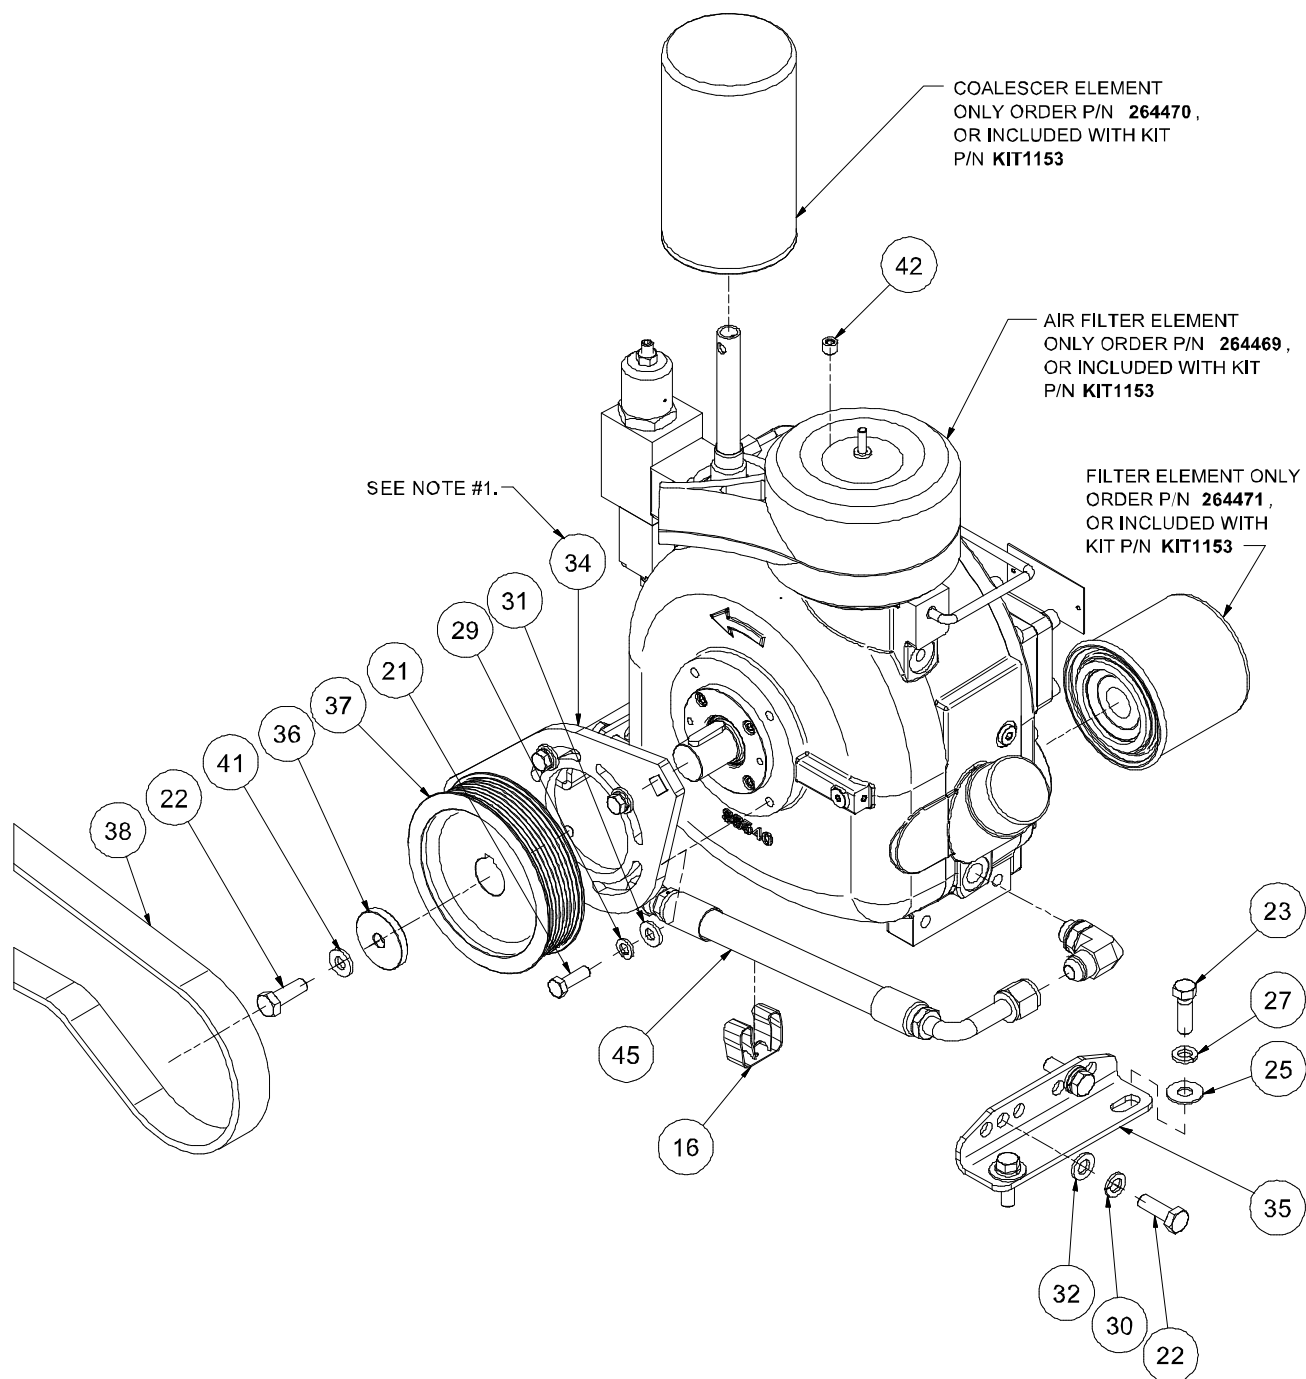


PA6010123ID_r2 (2 of 2)

7.4 COMPRESSOR AND PARTS ASSEMBLY (2 OF 2)

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1	TEE, MALE STREET 1/4 x 1/4 x 1/4	260402-102	1	24	BOLT, CARRIAGE 1/2-13UNC X 2-1/2" LG.	829508-250	1
2	ELBOW, 1/4T x 1/8P PUSH-ON	261309	1	25	WASHER, FLAT 3/8	838206-071	4
3	LOOM,FLEX-GARD 1/4 ID X 3 FT	262751	3 FT	26	WASHER, FLAT 1/2	838208-112	3
4	ELBOW,90 DEG. 1/2 MJIC X 3/8 MBSP ADJ	263747-021	2	27	WASHER, LOCK 3/8	838506-094	4
5	ADAPTER, FEMALE PIPE x BSPP 1/8	263748-001	1	28	WASHER, LOCK 1/2	838508-125	1
6	ADAPTER,FEMALE PIPE x BSPP 1/4	263748-004	1	29	WASHER, LOCK METRIC M8	838808-200	4
7	VALVE, RELIEF 200 PSI 1/4 NPT MALE	264232	1	30	WASHER, LOCK METRIC M10	838810-220	4
8	ADAPTER, M-JIC 1/2 x BSPP 3/8	264312-007	1	31	WASHER, FLAT METRIC M8	838908-180	4
9	ADAPTER, MJIC x MBSP 1/2 x 1/2	264312-008	1	32	WASHER, FLAT METRIC M10	838910-220	4
10	SWITCH,TEMP 240 DEG F NC NASON	264325	1	33	ELBOW,37FL/90F 1/2X1/2	860308-050	1
11	TUBING, 1/4DIA., NYLON, 230 PSI X 3 FT	264480.	3 ft	34	TENSIONER, AIR END ^{II}	A1270372	1
12	OIL, VANGUARD 3.5 QUARTS ^I	264626	0.88 gal	35	BRACKET, COMPRESSOR MTG	A1270373	2
13	ELBOW,1/2MPT X 1/2FJIC SWVL 90	268929-008	1	36	WASHER, SHEAVE COMPRESSOR	A1270884	1
14	COMPR & PART VANAI 31 EMC, 12VDC STD SHAFT	269761	1	37	SHEAVE, COMPRESSOR "8-GROOVE"	DR270371	1
15	TAG, COMPR VANAI 31	270610	1	38	BELT, SERPENTINE, (GATORBACK 4080537) 8 RIB X 53.75" LG EFFECTIVE LENGTH, BLK RUBBER	DR27584	1
16	CLIP, TOOL ZINC 3/4 TO 1-1/8	272059	1	39	IDLER, 1.375 WIDTH, 3 3/8DIA	DR46584	1
17	TEE, PIPE GALV 1/2	804415-020	1	40	SWITCH, PRESSURE N.C. 185 PSI	EL270002	1
18	BUSHING, RED STEEL 1/4 x 1/8	807600-005	1	41	WASHER, 3/8ID X 13/16OD	FA49463	1
19	NIPPLE, PIPE GALV 1/2 x 3-1/2 LG.	823108-035	1	42	PIPE BRASS, PLUG, COUNTERSUNK 1/8" NPT	FI67437	1
20	NUT, HEX 1/2-13	825208-448	1	43	CLIP, DRAIN HOSE HOLDER, 3/4	HA270218	1
21	CAPSCREW,HEX M8-1.25 x 25mm	828008-025	4	44	COMPRESSOR TO OIL COOLER, LOWER ^{III}	TU273020-001	1
22	CAPSCREW, HEX 10MM 1.5 X 30MM	828010-030	5	45	HOSE, COMPRESSOR DRAIN ^{III}	TU273020-002	1
23	CAPSCREW, HEX GR8 3/8-16X1 1/4	829406-125	4	46	COMPRESSOR TO AIR TANK UPPER ^{III}	TU273020-003	1

^I Part not shown.^{II} Tension belt support to 40 ft-lbs.^{III} Hoses with "TU271765" prefix are part of hose kit TU271765.**NOTE:** Pipe dope all NPT fittings.**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.**

7.5 COOLING SYSTEM

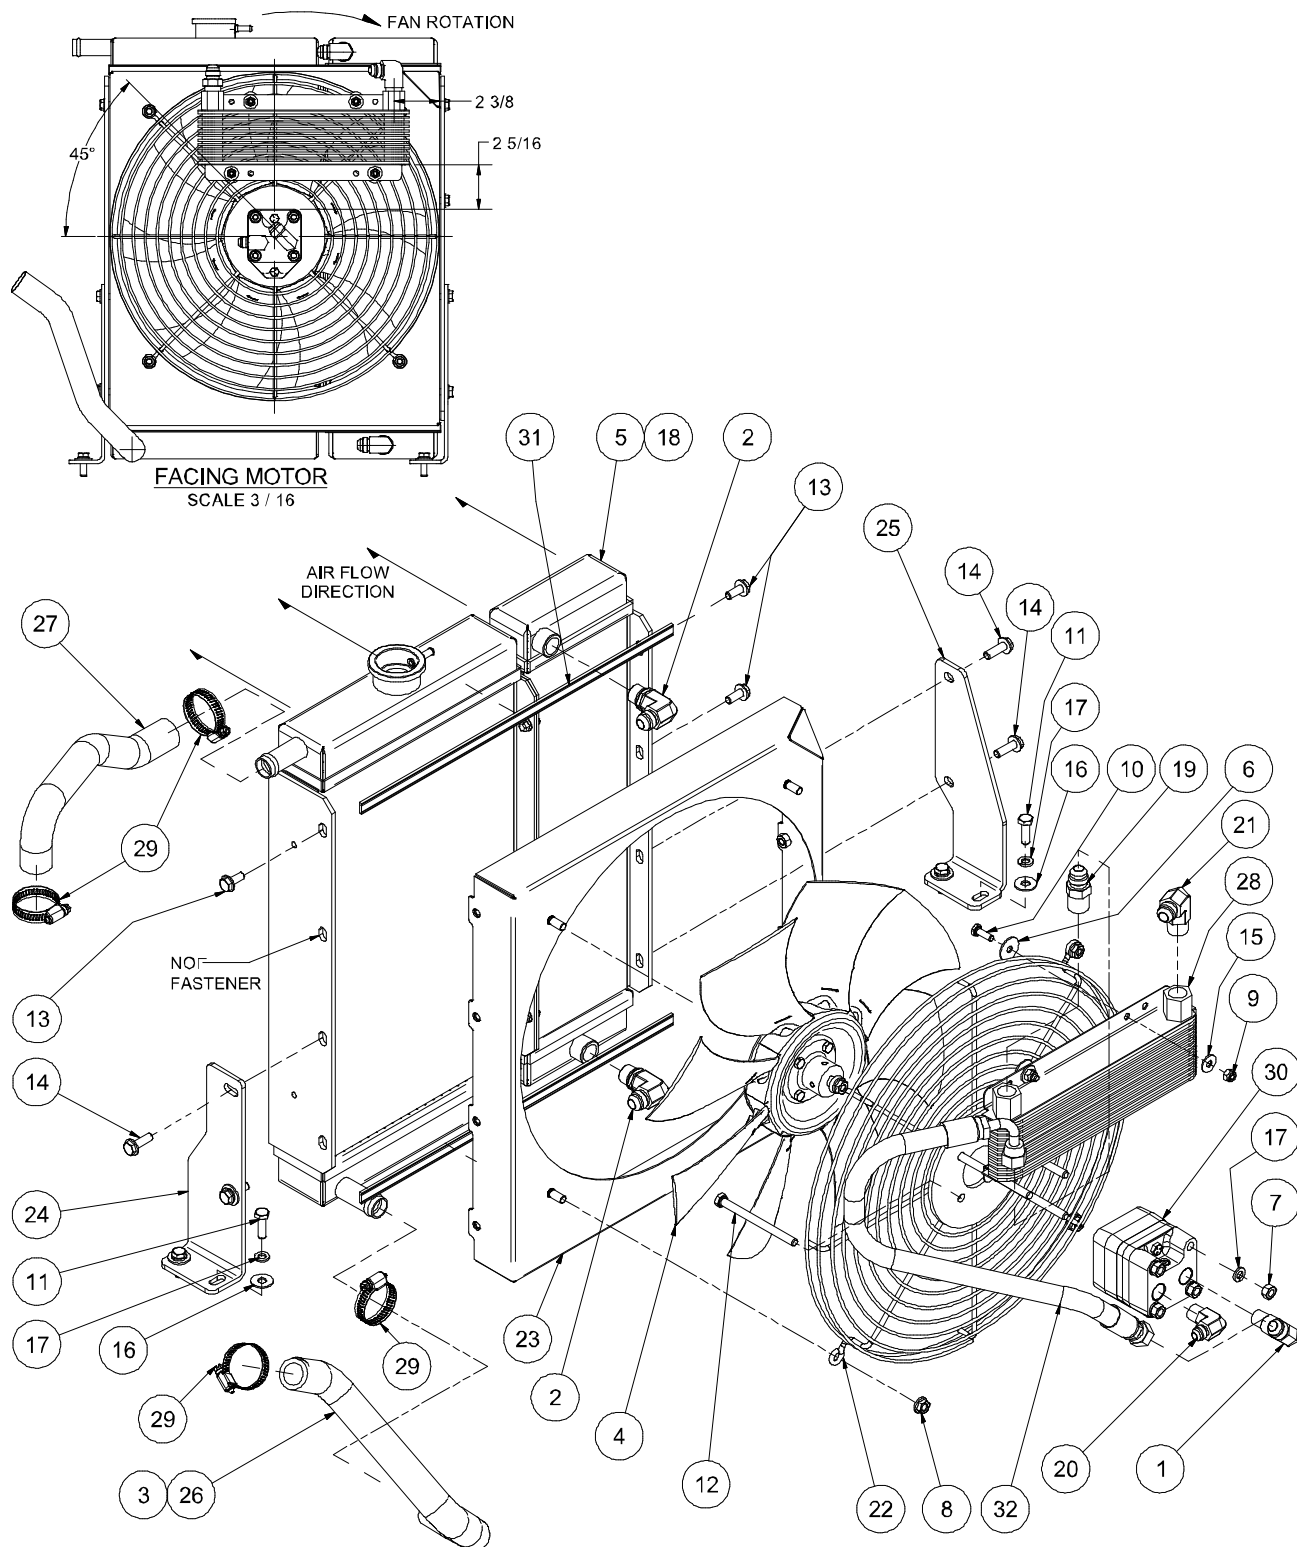

PA6020024ID_r10



7.5 COOLING SYSTEM

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1	ELBOW,90 DEG 3/8P X 1/2J LONG	044832-007	1	17	WASHER, LOCK 5/16	838505-078	9
2	ELBOW,90 DEG #8 MJICx#8 MSAE	260403-104	2	18	ANTI FREEZE,GAL 50/50 MIX	844400-001	1
3	SLEEVE, HOSE NYLON 17" LG	270286	1	19	CONNECTOR, 37FL/MPT #08 x 1/2	860108-050	1
4	FAN, COOLER, 16 DIA, 8 BLADE	270366	1	20	ELBOW, 37FL/90M #06 x 3/8	860206-038	1
5	RADIATOR,ENG & COMPR CLR	270374	1	21	ELBOW, 37FL/90M #08 x 1/2	860208-050	1
6	WASHER,FENDER 1/4 x 1	270714	4	22	GUARD, COOLER	A1270356	1
7	NUT, HEX 5/16-18	825205-273	4	23	SHROUD, COOLER	A1270375	1
8	NUT, HEX FLANGE 5/16-18	825305-283	4	24	BRACKET, COOLER LH	A1270382	1
9	NUT, HEX LOCKING 1/4-20	825504-145	4	25	BRACKET, COOLER RH	A1270383	1
10	CAPSCREW,HEX GR5 1/4-20X 3/4	829104-075	4	26	HOSE, RADIATOR 7/8" ID X 17" LG	EN271127	1
11	CAPSCREW,HEX GR5 5/16-18 x 1	829105-100	4	27	HOSE, RAD 7/8" ID X 12-1/2" LG	EN271127	1
12	CAPSCREW, HEX GR5 5/16-18 x 4	829105-400	4	28	COOLER, OIL, PLATE TYPE	EN37997	1
13	SCREW, SER WASH 5/16-18 x 0.75	829705-075	3	29	CLAMP, HOSE, #20, 1.75DIA.	FA47720	4
14	SCREW, SER WASH 5/16-18 x 1	829705-100	4	30	MOTOR, HYD BI-ROT	HY270358	1
15	WASHER, FLAT 1/4	838204-071	4	31	GASKET, SEAL AND TRIM, EXTRUDE 17-1/4" LG.	PR35734	2
16	WASHER, FLAT 5/16	838205-071	5	32	HOSE, MOTOR TO COOLER	TU273020-013	1

NOTE: Pipe dope all NPT fittings.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.6 FRAME AND CANOPY ASSEMBLY (1 OF 2)

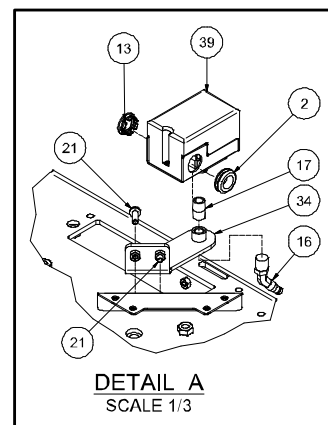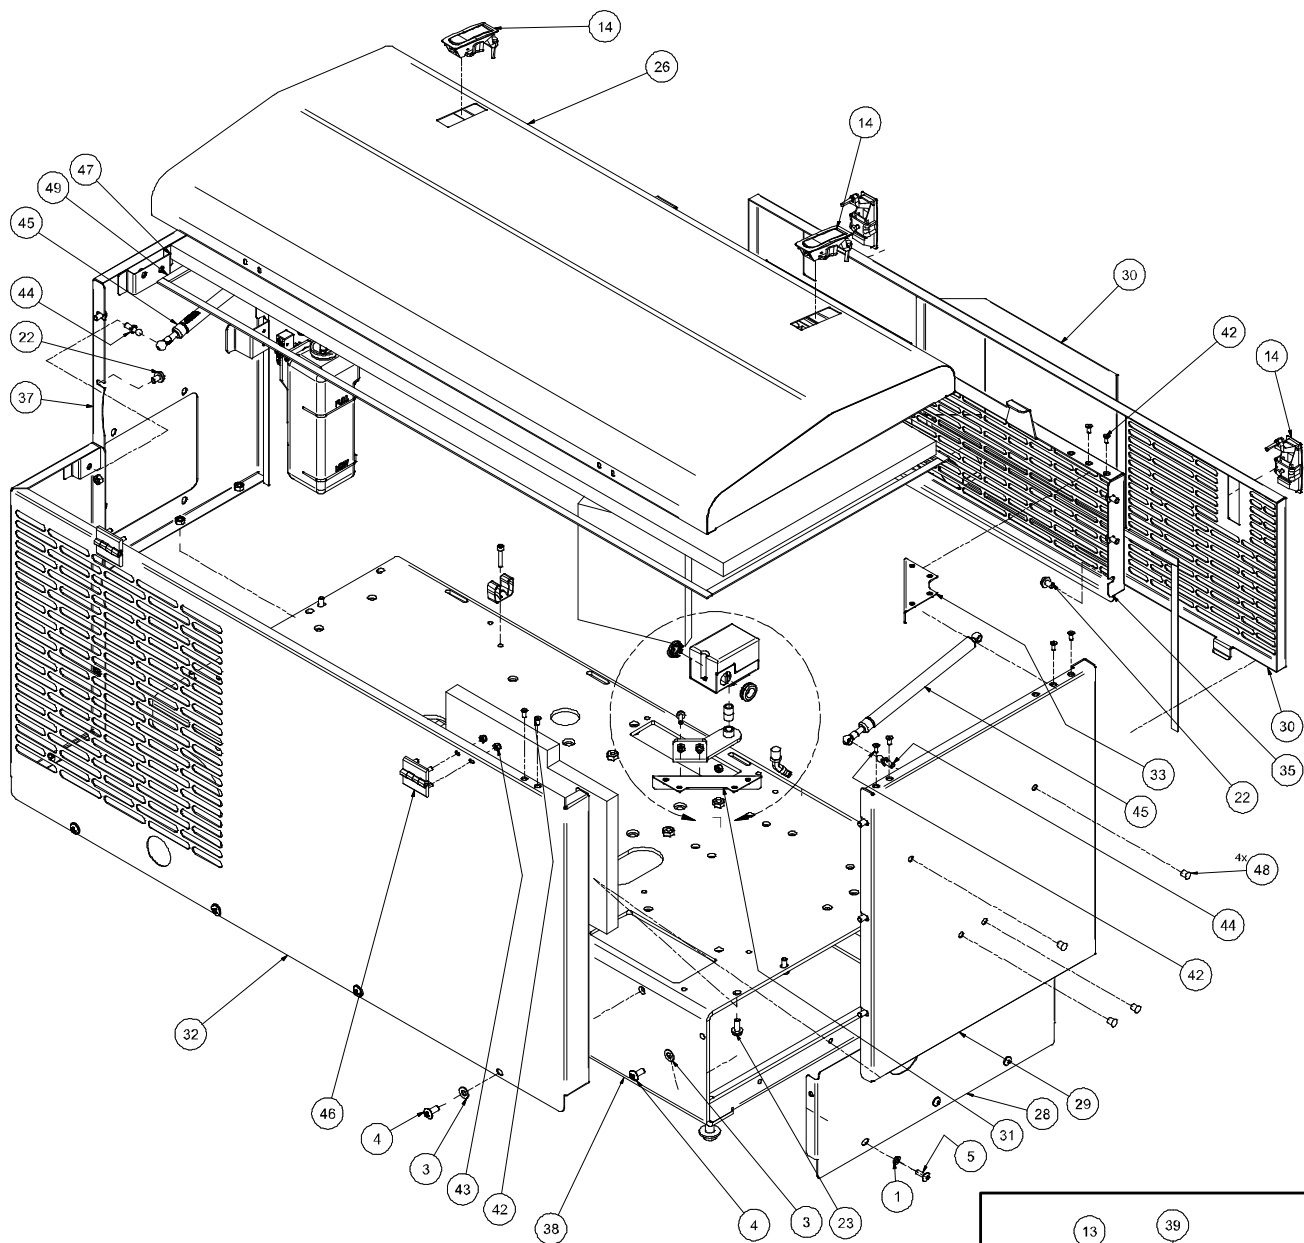


PA6030062-0011D_r0 (1 of 2)

7.6 FRAME AND CANOPY ASSEMBLY (1 OF 2)

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1	WASHER, NYLON FLAT 1/4	262704	3	26	CANOPY, HOOD	A1269763	1
2	GROMMET, RUBBER 5/8 x 7/8x 1/8	262905	1	27	SUPPORT, CROSS BRACE	A1269797	1
3	WASHER, NYLON 5/16-18	262943	6	28	COVER, BASE WITH CUTOUT	A1269980	1
4	SCREW, TRUSS HD 5/16-18x3/4 SS	262945	6	29	CANOPY, SIDE RH	A1270361	1
5	SCREW, TRUSS HD 1/4-20UNC X 3/4LG S.S.	262953	3	30	CANOPY, FRONT LOWER	A1270363	1
6	CLIP, SOUTHCO #85	263959-010	4	31	SUPPORT, CROSS BRACE	A1270459	1
7	RETAINER, SOUTHCO #85	263959-011	4	32	CANOPY, BACK	A1270866	1
8	WASHER, SOUTHCO #85	263959-012	4	33	SUPPORT, CROSS BRACE LESS FUEL	A1271451	1
9	SPRING, SOUTHCO #85	263959-013	4	34	BRACKET, ADJ. PRESSURE SWITCH	A1271657	1
10	STUD, SOUTHCO #85 FLAT HEAD	263959-014	4	35	CANOPY, FRONT UPPER	A1272411	1
11	SEAL, RUBBER "D" TRIM-LOK 1" X 1" X 21-3/16" LG	264138	2	36	PANEL, ACCESS COMPR OIL FILTER/FILL	A1273055	1
12	SEAL, RUBBER "D" TRIM-LOK 1" X 1" X 17-15/16" LG	264138.	1	37	CANOPY, SIDE LH W/ ACCESS	A1273056	1
13	SEAL, KNOCKOUT 1/2"	264443	1	38	PLATFORM, I	A1273058	1
14	LATCH, SENTRY PANEL	267124	4	39	SWITCH, PRESSURE ADJUSTABLE 50-175 PSI	CO271659	1
15	CLIP, TOOL ZINC 3/4 TO 1-1/8	272059	1	40	SWITCH, HOOD SAFETY NO/NC 15A-125V. AC	CO81774	2
16	45 DEG, PTC SWIVEL, MALE	272423	1	41	TANK, 1 GAL RECOVERY, COOLANT	EN45487	1
17	NIPPLE, PIPE XS CLOSE 1/4	822204-000	1	42	CAPSCREW, S.H. FLAT #10-24 X 1/2	FA269805	12
18	NUT, HEX FLANGE 5/16-18	825305-283	1	43	NUT, LOCK, M6 X 1.0 PITCH	FA55272	9
19	CAPSCREW, S.H. 1/4-20 x 1 1/4	828304-125	1	44	STUD, BALL, .39DIA. X .55LG.	FA58724	4
20	CAPSCREW, HEX GR8 1/2-13 x 2.5	829408-250	4	45	GAS SPRING, 6 STROKE, 20#	HA72205	2
21	SCREW, SER WASH 1/4-20X 3/4	829704-075	2	46	HINGE, 2" X 2", BLACK	HA88014	2
22	SCREW, SER WASH 5/16-18 x 0.5	829705-050	12	47	KIT, 1" ACOUSTICAL FOAM INSULATION	PR270450	1
23	SCREW, SER WASH 5/16-18 X 0.75	829705-075	10	48	PLUG, HOLE 3/8 DIA, WH	PR272560	4
24	SCREW, MACHINE #6-32 X 1	831600-100	4	49	GASKET, SEAL AND TRIM (16 FT TOTAL)	PR35734	1
25	WASHER, FLAT 1/2	838208-112	4				

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.6 FRAME AND CANOPY ASSEMBLY (2 OF 2)

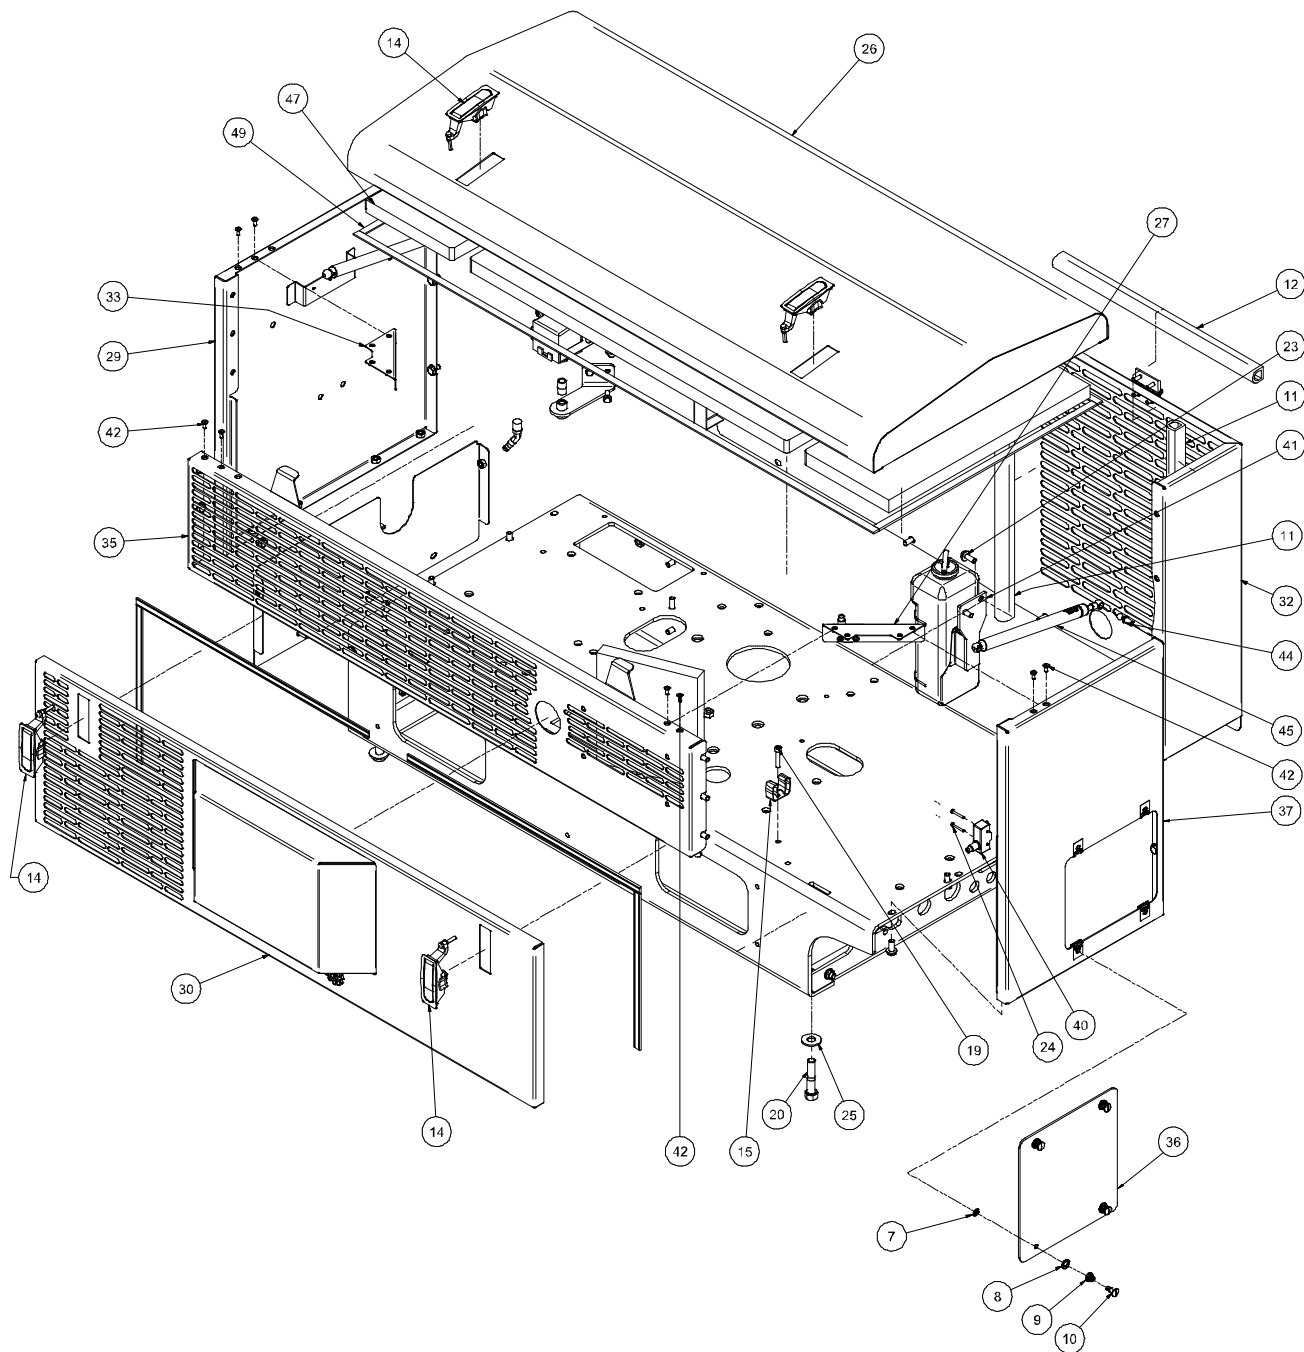



PA6030062ID-001_r0 (2 of 2)

7.6 FRAME AND CANOPY ASSEMBLY (2 OF 2)

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1	WASHER, NYLON FLAT 1/4	262704	3	26	CANOPY, HOOD	A1269763	1
2	GROMMET, RUBBER 5/8 x 7/8x 1/8	262905	1	27	SUPPORT, CROSS BRACE	A1269797	1
3	WASHER, NYLON 5/16-18	262943	6	28	COVER, BASE WITH CUTOUT	A1269980	1
4	SCREW, TRUSS HD 5/16-18x3/4 SS	262945	6	29	CANOPY, SIDE RH	A1270361	1
5	SCREW, TRUSS HD 1/4-20UNC X 3/4LG S.S.	262953	3	30	CANOPY, FRONT LOWER	A1270363	1
6	CLIP, SOUTHCO #85	263959-010	4	31	SUPPORT, CROSS BRACE	A1270459	1
7	RETAINER, SOUTHCO #85	263959-011	4	32	CANOPY, BACK	A1270866	1
8	WASHER, SOUTHCO #85	263959-012	4	33	SUPPORT, CROSS BRACE LESS FUEL	A1271451	1
9	SPRING, SOUTHCO #85	263959-013	4	34	BRACKET, ADJ. PRESSURE SWITCH	A1271657	1
10	STUD, SOUTHCO #85 FLAT HEAD	263959-014	4	35	CANOPY, FRONT UPPER	A1272411	1
11	SEAL, RUBBER "D" TRIM-LOK 1" X 1" X 21-3/16" LG	264138	2	36	PANEL, ACCESS COMPRESSOR OIL FILTER/FILL	A1273055	1
12	SEAL, RUBBER "D" TRIM-LOK 1" X 1" X 17-15/16" LG	264138	1	37	CANOPY, SIDE LH W/ ACCESS	A1273056	1
13	SEAL, KNOCKOUT 1/2"	264443	1	38	PLATFORM, I	A1273058	1
14	LATCH, SENTRY PANEL	267124	4	39	SWITCH, PRESSURE ADJUSTABLE 50-175 PSI	CO271659	1
15	CLIP, TOOL ZINC 3/4 TO 1-1/8	272059	1	40	SWITCH, HOOD SAFETY NO/NC 15A-125V. AC	CO81774	2
16	45 DEG, PTC SWIVEL, MALE	272423	1	41	TANK, 1 GAL RECOVERY, COOLANT	EN45487	1
17	NIPPLE, PIPE XS CLOSE 1/4	822204-000	1	42	CAPSCREW, S.H. FLAT #10-24 X 1/2	FA269805	12
18	NUT, HEX FLANGE 5/16-18	825305-283	1	43	NUT, LOCK, M6 X 1.0 PITCH	FA55272	9
19	CAPSCREW, S.H. 1/4-20 x 1 1/4	828304-125	1	44	STUD, BALL, .39DIA. X .55LG.	FA58724	4
20	CAPSCREW, HEX GR8 1/2-13 x 2.5	829408-250	4	45	GAS SPRING, 6 STROKE, 20#	HA72205	2
21	SCREW, SER WASH 1/4-20X 3/4	829704-075	2	46	HINGE, 2" X 2", BLACK	HA88014	2
22	SCREW, SER WASH 5/16-18 x 0.5	829705-050	12	47	KIT, 1" ACOUSTICAL FOAM INSULATION	PR270450	1
23	SCREW, SER WASH 5/16-18 X 0.75	829705-075	10	48	PLUG, HOLE 3/8 DIA, WH	PR272560	4
24	SCREW, MACHINE #6-32 X 1	831600-100	4	49	GASKET, SEAL AND TRIM (16 FT TOTAL)	PR35734	1
25	WASHER, FLAT 1/2	838208-112	4				

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.7 INSTRUMENT PANEL

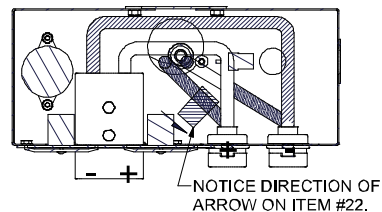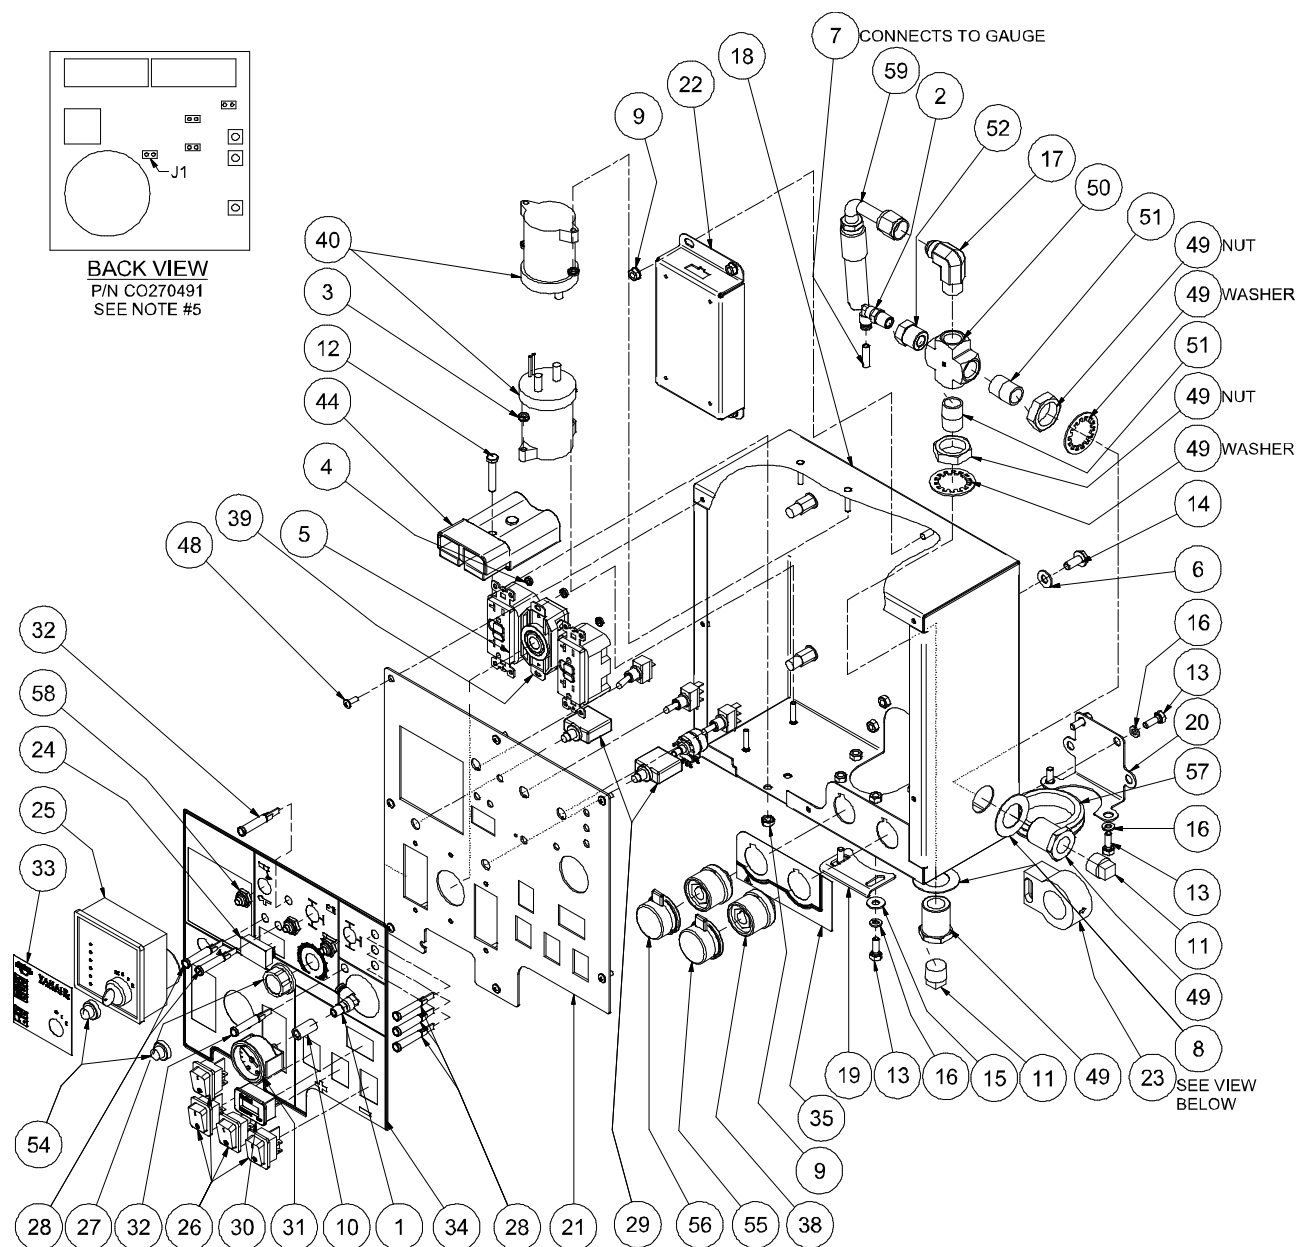


PA6040047ID r2

7.7 INSTRUMENT PANEL

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1	ELBOW, 1/4T x 1/8P PUSH-ON	261309	1	31	GAUGE, AIR, DRY, 0-200 PSI	CO89649	1
2	ELBOW, 90 DEG. PUSH ON 1/4T x 1/4P	261310	1	32	LAMP, INDICATOR, LED, RED	CO89659	2
3	NUT, HEX #10-32 KEPS	261595-032	4	33	DECAL, CNTRL, ENG. START/STOP	DL270508	1
4	NUT, HEX #6-32 KEPS	261595-632	6	34	DECAL, FACEPLATE	DL272406	1
5	RECEPTACLE, 120V/20A GFCI	262392	2	35	DECAL, CNTRL PNL, WELDER	DL272786	1
6	WASHER, NYLON 5/16-18	262943	2	36	CABLE, CHARGE JUMPER	EA272452	1
7	TUBING, 1/4DIA., NYLON, 230 PSI X 1.25 FT	264480	1	37	HARNESS, CHARGE JUMPER	EA272453	1
8	WASHER, FLAT REDUCING 3/4 x 1 ELECT.	267994	2	38	RECEPTACLE, PNL 350 AMP	EL269932	2
9	NUT, LOCK W/TOOTH LOCKWASHER, 1/4-20	270970	6	39	RECEPTACLE, 240V/30A TURNLOC	EL270148	1
10	COUPLING, PIPE 1/8	806230-005	1	40	RELAY, 500 AMP 12V COIL NO	EL270483	2
11	PLUG, PIPE 1/2	807800-020	2	41	HARNESS, WIRE INST PNL LIGHTS	EP269871	1
12	CAPSCREW, HEX GR5 1/4-20 X 1 1/2 LG.	829104-150	2	42	HARNESS, WIRE INST PNL SWITCH	EP269872	1
13	CAPSCREW, HEX GR8 1/4-20 X 3/4 LG	829404-075	6	43	HARNESS, WELD CABLE, MACH TO PNL	EP270170	1
14	SCREW, SER WASH 5/16-18 x 0.75	829705-075	2	44	HARNESS, WELD CABLE JUMPER	EP270171	1
15	WASHER, FLAT 1/4	838204-071	2	45	HARNESS, A/C PNL TO MACHINE	EP270230	1
16	WASHER, LOCK 1/4	838504-062	6	46	HARNESS, WIRE INST. PNL DISPLAY	EP270315	1
17	ELBOW, 37FL/90M #08 x 1/2	860208-050	1	47	HARNESS, WIRE INST PNL	EP272404	1
18	PNL, CNTRL BACK	A1269489	1	48	SCREW, PHILLIPS PAN HEAD #10-32 X 1/2" LG. SS	FA33542	7
19	CLAMP, CNTRL PNL CABLE	A1269491	1	49	PIPE BRASS, BULKHEAD 1/2 NPT	FI23542	2
20	COVER, CNTRL PNL CABLES	A1269492	1	50	PIPE BRASS, CROSS, 1/2 NPT.	FI25405	1
21	FACEPLATE, CNTRL PNL	A1272405	1	51	NIPPLE, PIPE XS CLOSE 1/2, BRASS	FI34220	2
22	MODULE, WELD CNTRL SYS ASSY	CO269598	1	52	BUSHING, PIPE BRASS 1/4 x 1/2	FI75068	1
23	SENSOR, HALL EFFECT WELD CNTRLS	CO269900	1	53	CABLE, BATTERY EXTENSION, MACHINE	MA269944	1
24	PNLMETER, VOLTAGE, LED	CO270314	1	54	BOOT, CIRCUIT BREAKER 3/8	PR270548	2
25	CNTRL, ENG. START/STOP	CO270491	1	55	CAP, RUBBER TETHERED 1-3/8 BLACK	PR272373	1
26	SWITCH, ROCKER 12V DPST CLEAR LIGHT	CO272343	4	56	CAP, RUBBER TETHERED 1-3/8 RED	PR272390	1
27	KNOB, PLASTIC, 1.3 DIA., 1/4 SHAFT	CO59489	1	57	GROMMET, BLACK RUBBER, 2.25ID	PR74492	1
28	LAMP, INDICATOR, LED, GREEN	CO59966	5	58	SWITCH BOOT, TOGGLE, WEATHER PROOF	PR77230	3
29	CIRCUIT BREAKER, 20 AMP	CO62617	2	59	HOSE, AIR TANK TO PNL	TU270453-006	1
30	TACHOMETER, HOUR, 12V SINGLE	CO79106	1				

NOTE: Pipe dope all NPT fittings.**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.**

7.8 GENERATORS AND PARTS

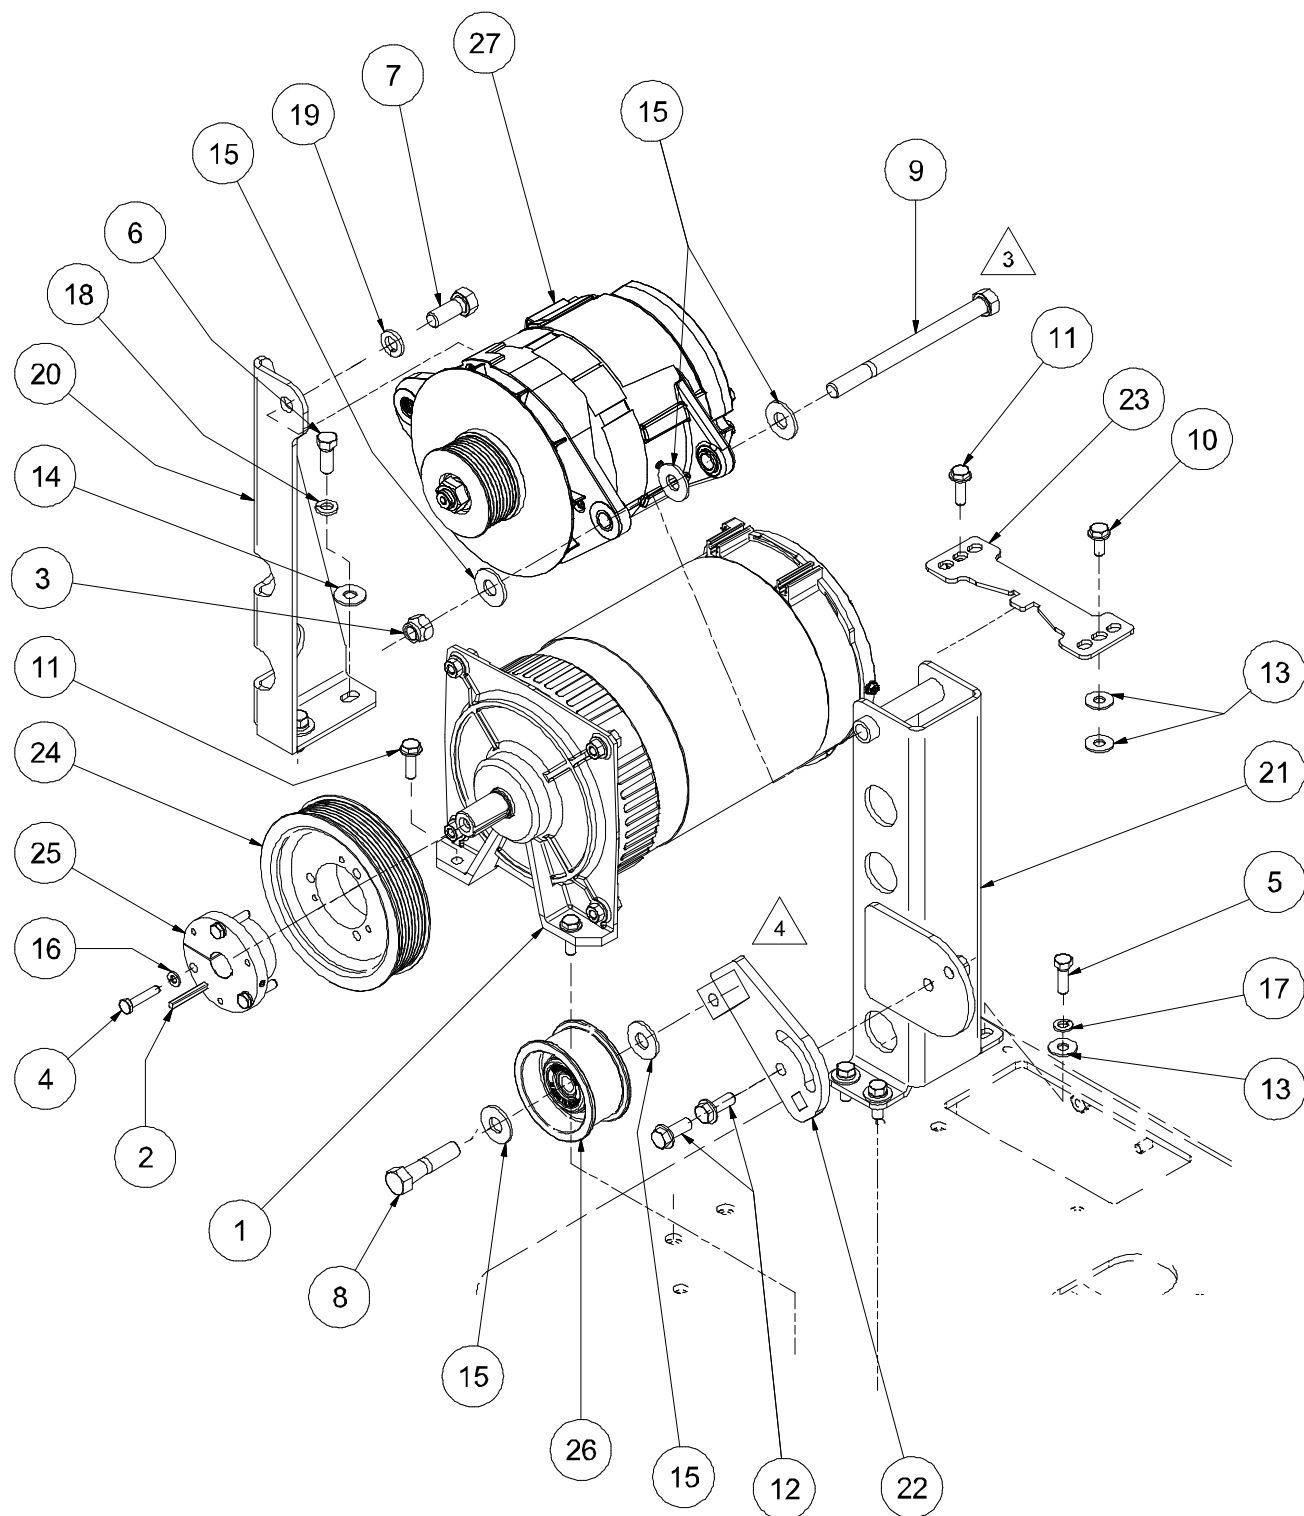

PA6050012ID_r4


7.8 GENERATORS AND PARTS

ITEM	DESCRIPTION	PART NUMBER	QTY
1	GENERATOR, AC, 6.8KW	269530	1
2	KEY, SQUARE 3/16 x 3/16 x 1.5	821103-150	1
3	NUT, HEX LOCKING 1/2-13	825508-262	1
4	CAPSCREW, HEX GR5 1/4-20 X 1 1/4	829104-125	3
5	CAPSCREW, HEX GR8 5/16-18 X 1.0 LG.	829405-100	4
6	CAPSCREW, HEX GR8 3/8-16 X 1.0 LG.	829406-100	2
7	CAPSCREW, HEX GR8 1/2-13 x 1.25	829408-125	1
8	CAPSCREW, HEX GR8 1/2-13 x 2.25	829408-225	1
9	CAPSCREW, HEX GR8 1/2-13 x 6.5	829408-650	1
10	SCREW, SER WASH 5/16-18 x 0.75	829705-075	1
11	SCREW, SER WASH 5/16-18 x 1	829705-100	3
12	SCREW, SER WASH 3/8-16 x 1	829706-100	2
13	WASHER, FLAT 5/16	838205-071	8
14	WASHER, FLAT 3/8	838206-071	2
15	WASHER, FLAT 1/2	838208-112	5
16	WASHER, LOCK 1/4	838504-062	3
17	WASHER, LOCK 5/16	838505-078	4
18	WASHER, LOCK 3/8	838506-094	2
19	WASHER, LOCK 1/2	838508-125	1
20	BRACKET, WELD GENERATOR	A1269734	1
21	BRACKET, WELD GENERATOR SUPPORT	A1270388	1
22	TENSIONER, GENERATOR'S	A1272076	1
23	MOUNT, REAR GENERATOR	A15865P	1
24	SHEAVE, SERPENTINE, 8 GROOVE	A15891Z	1
25	BUSHING, SDS, QD, 7/8DIA.	DR41395Z	1
26	IDLER, 1.375 WIDTH, 3 3/8DIA	DR46584	1
27	WELDER, GENERATOR 300 AMP	GE270045	1

NOTE: Pipe dope all NPT fittings.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.9 HYDRAULIC PUMP ASSEMBLY (1 OF 3)

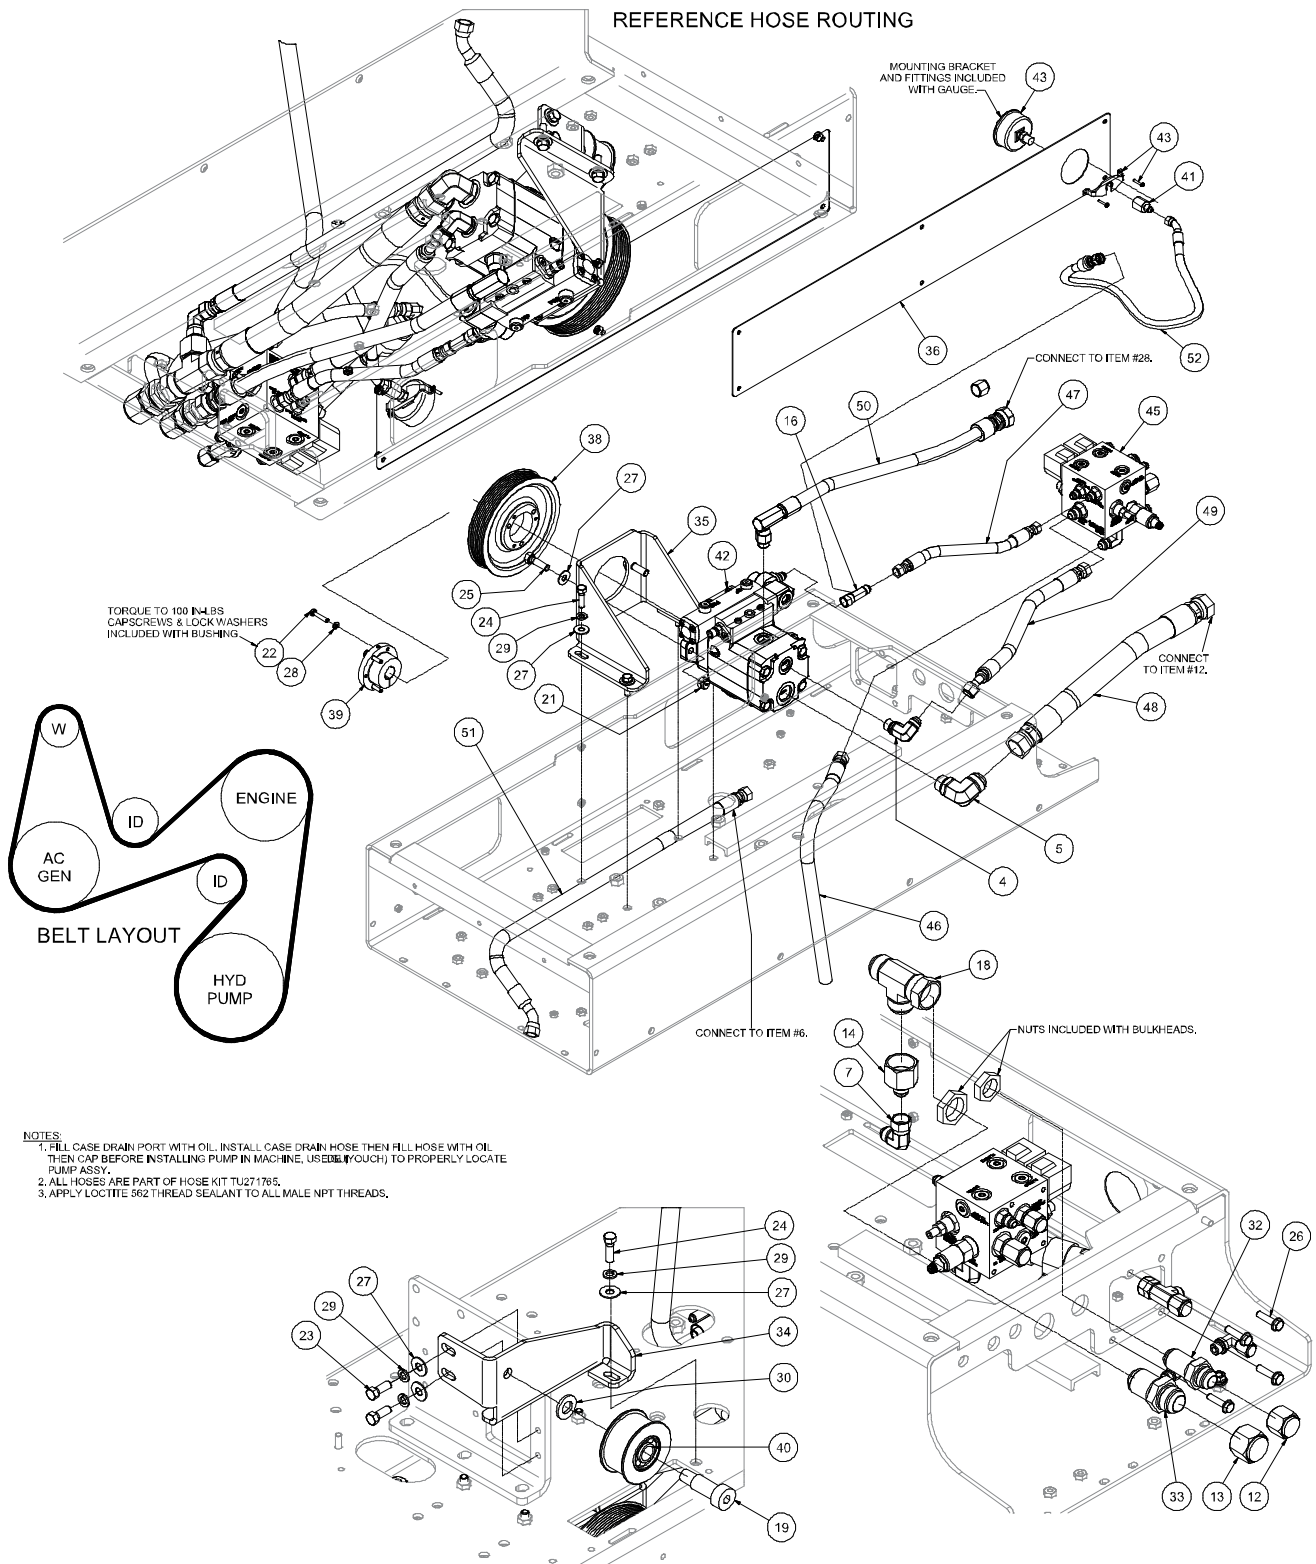

PA6100036ID-001_r1 (1of3)


7.9 HYDRAULIC PUMP ASSEMBLY (1 OF 3)

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1	CONNECTOR, #6 MSAE x #6 MJIC	260387-105	3	27	WASHER, FLAT 3/8	838206-071	9
2	CONNECTOR, #8 MSAE x #8 MJIC	260387-107	1	28	WASHER, LOCK 1/4	838504-062	3
3	ELBOW, 90 DEG. 3/8 MJIC x 3/8 MSAE	260403-103	2	29	WASHER, LOCK 3/8	838506-094	7
4	ELBOW, 90 DEG #8 MJIC x #8 MSAE	260403-104	1	30	WASHER, FLAT METRIC M16	838916-330	1
5	ELBOW, 90 DEG #16 MJIC x #12 MSAE	260403-117	1	31	BULKHEAD, MJIC x MJIC #4	862104-025	1
6	OIL, HYDRAULIC AW32	260658-010	2 qt	32	BULKHEAD, MJIC x MJIC #12	862112-075	1
7	ELBOW, 90 DEG. SWIVEL #8 FJIC x #8 MJIC	261842-006	1	33	BULKHEAD, MJIC x MJIC #16	862116-100	1
8	END, HOSE 1/2 F-JIC SW. 45 DEG.	261846-003	1	34	BRACKET, IDLER	A1271709	1
9	CLAMP, HOSE SUPPORT 1.50 ID	263812	2	35	BRACKET, HYDRO PUMP	A1271710	1
10	CAP, FEMALE #6 JIC 9/16-18 UNF-2B	264322-002	1	36	PANEL, COVER PLATFORM	A1273259	1
11	CAP, FEMALE JIC 3/4-16 #8	264322-003	2	37	DECAL, LOAD SENSE	DL273347	1
12	CAP, FEMALE JIC 1 1/16-12 #12	264322-005	1	38	SHEAVE, SERPENTINE, 8 GROOVE, 6.99 P.D.	DR269898	1
13	CAP, FEMALE JIC 1 5/16-12 #16	264322-006	1	39	BUSHING,QD STYLE SDS 7/8 BORE X 1/4 KEYWAY	DR271744	1
14	ADAPTER,#16 FJIC X #8 MJIC	265008-020	1	40	IDLER 3 OD X 1-3/8 FLAT FACE.	DR272187	1
15	PLUG, SAE O-RING HOLLOW HEX #6	268081-005	1	41	ADAPTER,1/4 FNPT X 1/4 JIC	FI273339	1
16	TEE, RUN SWIVEL 3/8" JIC	268769-003-SS	1	42	PUMP,HYD PISTON 0.86 DISP	HY271640	1
17	TEE,RUN SWIVEL 1/2	268769-004	1	43	GAUGE, HYD PRESSURE PNL MTG	HY273301	1
18	TEE,RUN SWIVEL #16	268769-008	1	44	FILTER, ELEMENT 3000PSI 25MIC	HY273367	2
19	BOLT, SHOULDER 20mm X 40mm LONG	272133	1	45	ID, MANIFOLD ASS'Y, O.C. CRANE, NO TOOL	PA6120134-03ID	1
20	NUT, HEX FLANGE 3/8-16	825306-347	2	46	HOSE, RETURN HYDRO	TU273020-006	1
21	NUT, HEX LOCKING 7/16-14	825507-223	2	47	HOSE, LOAD SENSE	TU273020-009	1
22	CAPSCREW, HEX GR5 1/4-20 X 1.25	829104-125	3	48	HOSE, PUMPSUCTION (CRANE)	TU273020-010	1
23	CAPSCREW, HEX GR8 3/8-16 x 1	829406-100	2	49	HOSE, PRESSURE TO MANIFOLD BLOCK	TU273020-011	1
24	CAPSCREW ,HEX GR8 3/8-16 x 1.25	829406-125	5	50	HOSE, CASE DRAIN	TU273020-012	1
25	CAPSCREW, HEX GR8 7/16-14 x 1.5	829407-150	2	51	HOSE, PUMP SUCTION (COOLER)	TU273020-014	1
26	SCREW, SER WASH 5/16-18 x 1.25	829705-125	4	52	HOSE, PRESSURE GAUGE, LOAD SENSE	TU273020-020	1

NOTE: Apply Loctite® 562 thread sealant to all male NPT threads.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.9 HYDRAULIC PUMP ASSEMBLY - OPEN CENTER (2 OF 3)

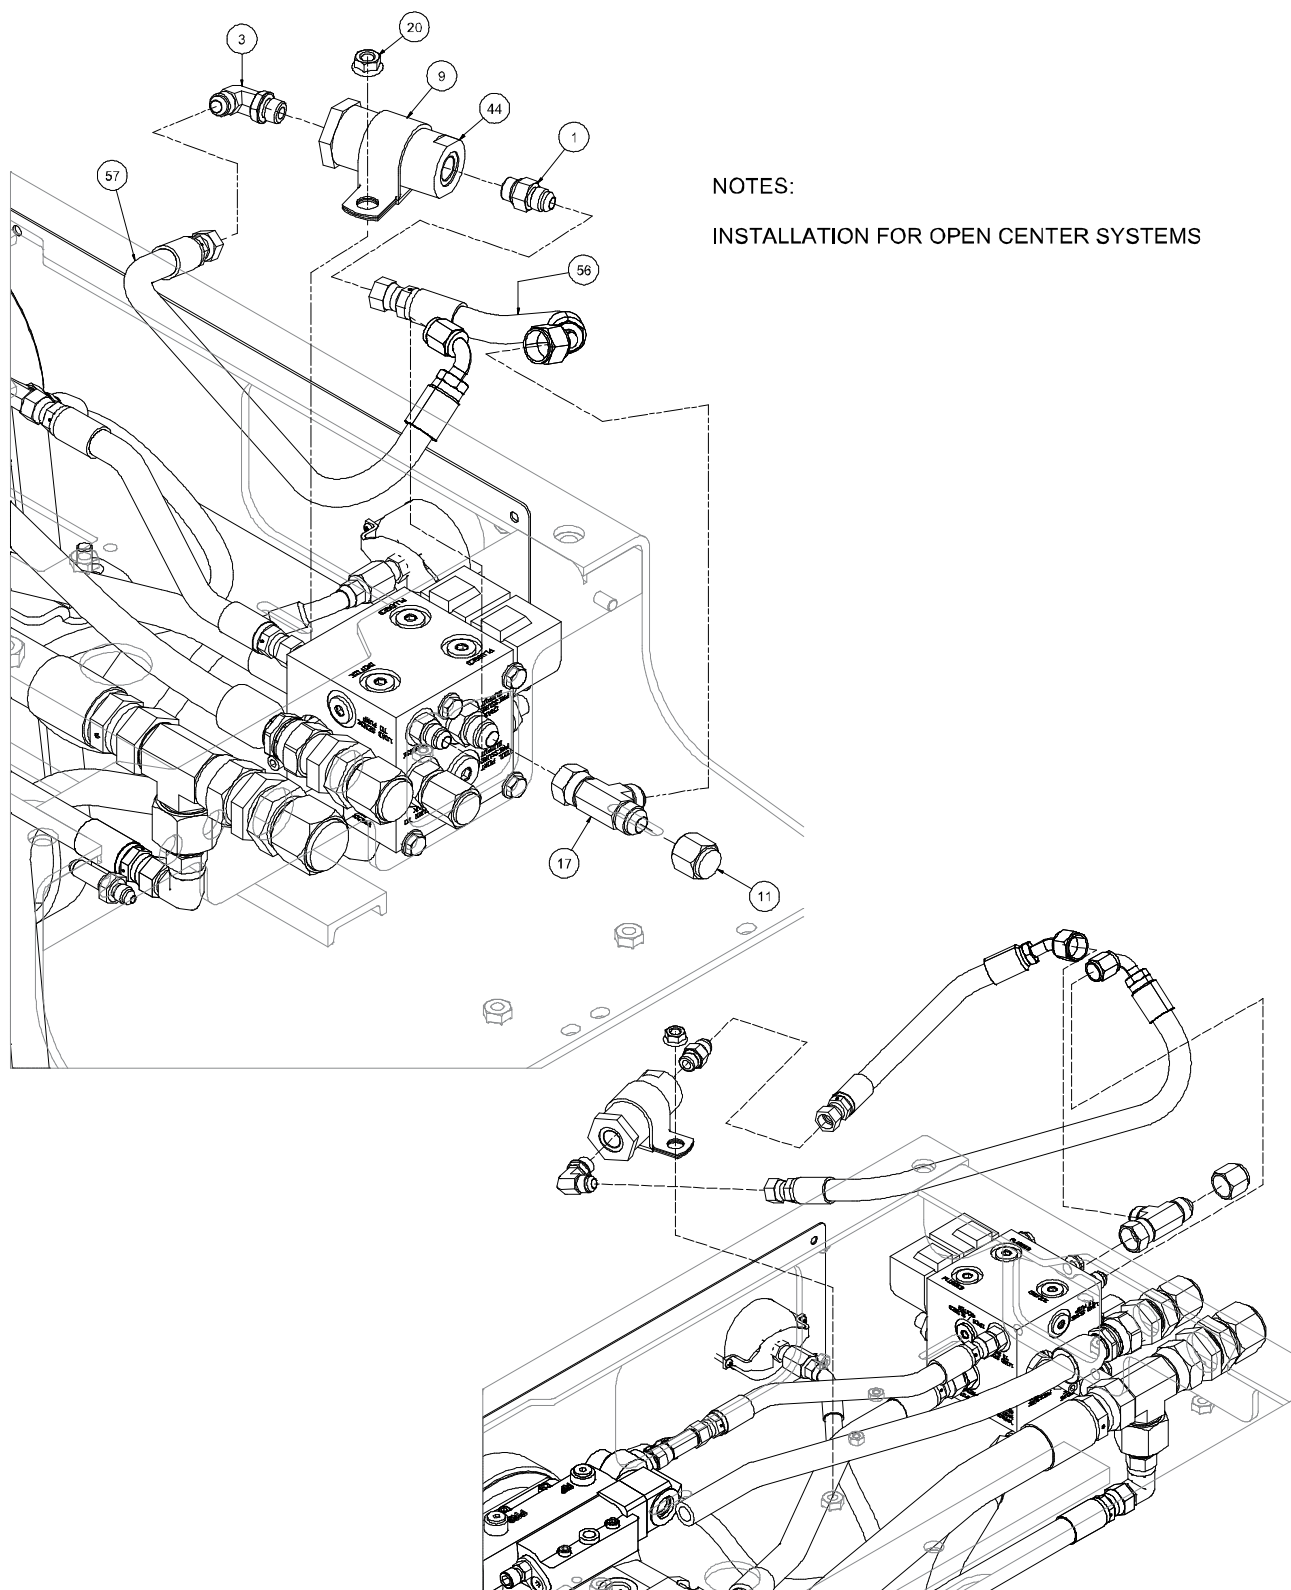


PA6100036ID-001_r1 (2of3)

7.9 HYDRAULIC PUMP ASSEMBLY - OPEN CENTER (2 OF 3)

ITEM	DESCRIPTION	PART NUMBER	QTY
1	CONNECTOR, #6 MSAE x #6 MJIC	260387-105	3
3	ELBOW, 90 DEG. 3/8 MJIC x 3/8 MSAE	260403-103	2
9	CLAMP, HOSE SUPPORT 1.50 ID	263812	2
10	CAP, FEMALE #6 JIC 9/16-18 UNF-2B	264322-002	1
11	CAP, FEMALE JIC 3/4-16 #8	264322-003	2
17	TEE, RUN SWIVEL 1/2	268769-004	1
20	NUT, HEX FLANGE 3/8-16	825306-347	2
36	PANEL, COVER PLATFORM	A1273259	1
37	DECAL, LOAD SENSE	DL273347	1
41	ADAPTER, 1/4 FNPT X 1/4 JIC	FI273339	1
43	GAUGE, HYD PRESSURE PNL MTG	HY273301	1
44	FILTER, ELEMENT 3000PSI 25MIC	HY273367	2
52	HOSE, PRESSURE GAUGE, LOAD SENSE	TU273020-020	1
56	HOSE, FILTER OUT TO MANIFOLD	TU273020-018	1
57	HOSE, MANIFOLD TO FILTER IN	TU273020-019	1

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.9 HYDRAULIC PUMP ASSEMBLY - CLOSED CENTER (3 OF 3)

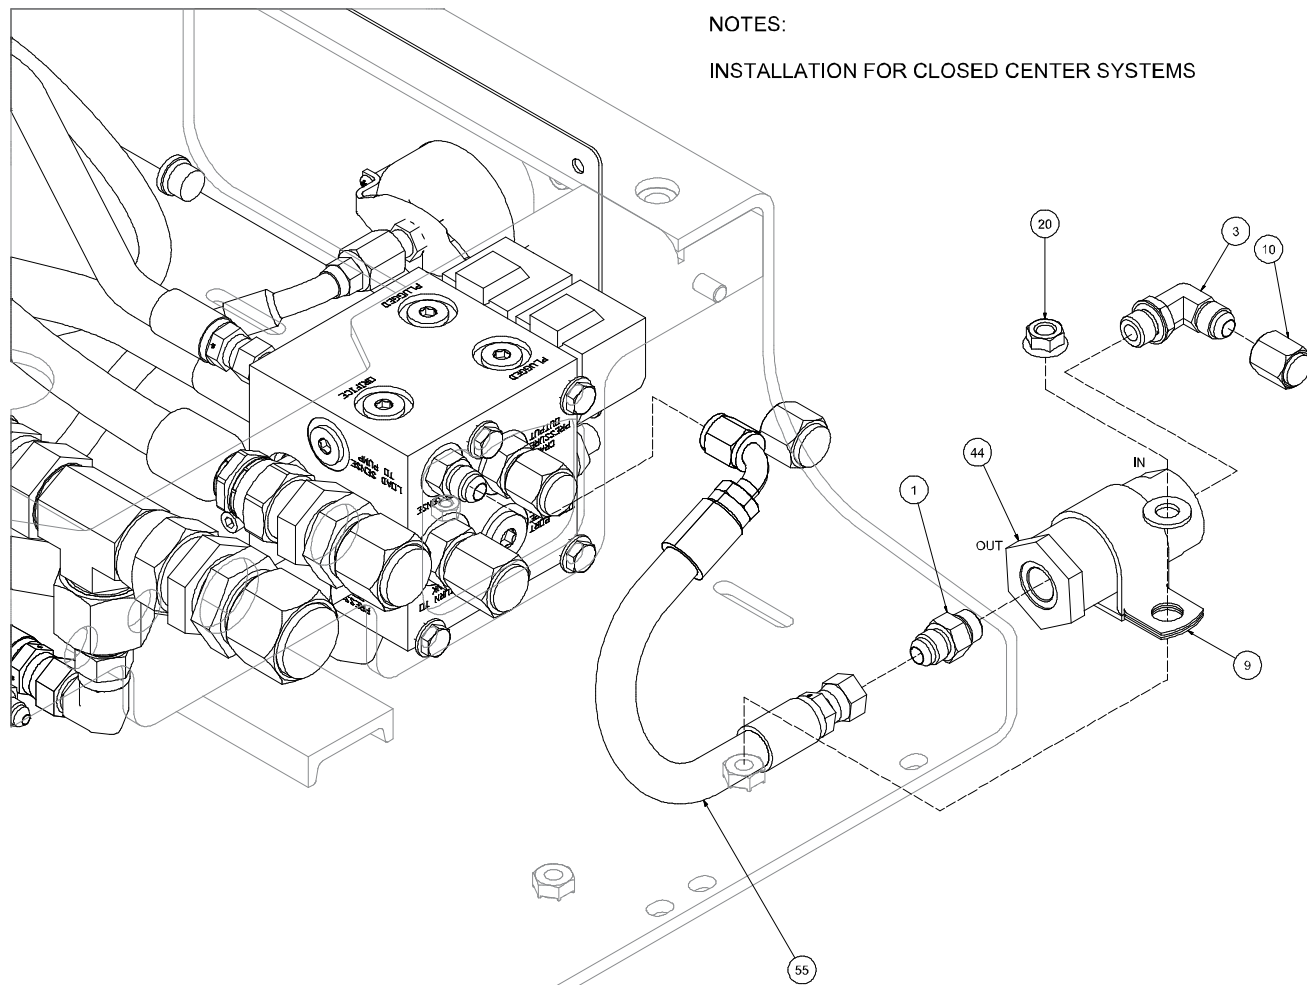


PA6100036ID-001_r1 (3of3)

7.9 HYDRAULIC PUMP ASSEMBLY - CLOSED CENTER (3 OF 3)

ITEM	DESCRIPTION	PART NUMBER	QTY
3	ELBOW, 90 DEG. 3/8 MJIC x 3/8 MSAE	260403-103	2
10	CAP, FEMALE #6 JIC 9/16-18 UNF-2B	264322-002	1
11	CAP, FEMALE JIC 3/4-16 #8	264322-003	2
15	PLUG, SAE O-RING HOLLOW HEX #6	268081-005	1
17	TEE,RUN SWIVEL 1/2	268769-004	1
20	NUT, HEX FLANGE 3/8-16	825306-347	2
36	PANEL, COVER PLATFORM	A1273259	1
37	DECAL, LOAD SENSE	DL273347	1
41	ADAPTER,1/4 FNPT X 1/4 JIC	FI273339	1
43	GAUGE, HYD PRESSURE PNL MTG	HY273301	1
55	HOSE, FILTER OUT TO MANIFOLD	TU273020-CC	1

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.10 ENGINE AND DRIVE PARTS (1 OF 2)

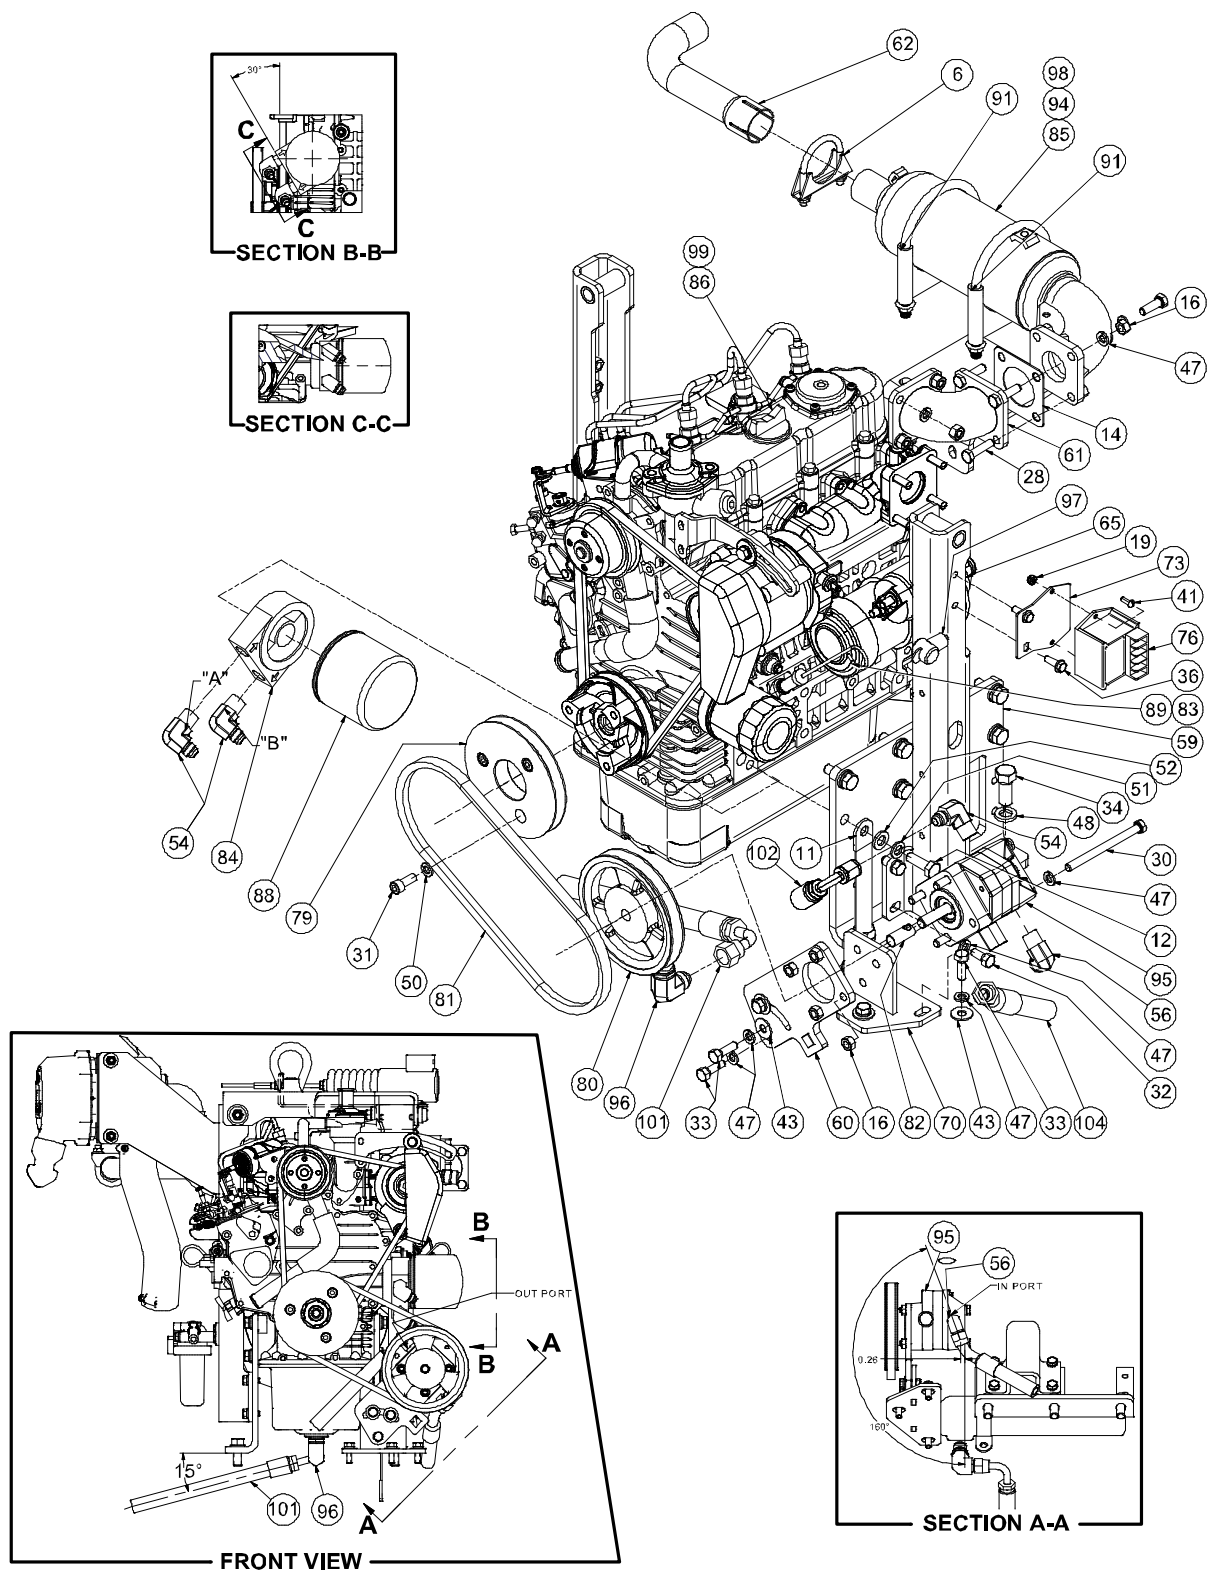


PA6100056ID_r1 (1 of 3)

7.10 ENGINE AND DRIVE PARTS (1 OF 2)

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1	CLAMP, HOSE 3/16 - 5/16 HOSE	260864	2	27	CAPSCREW, HEX GR5 1/4-20 x 1	829104-100	1
2	WASHER, NYLON FLAT 1/4	262704	4	28	CAPSCREW, HEX GR5 5/16-18 x 1 1/4	829105-125	6
3	HOSE, FLEX 2" I.D. x 21" LG.	262705	1.75 ft	29	CAPSCREW, HEX GR5 5/16-18 x 3	829105-300	1
4	CAP, RAIN 1 1/4" EXHAUST	262706	1	30	CAPSCREW, HEX GR5 5/16-18 x 4	829105-400	4
5	CLAMP, EXHAUST 1 1/4 REV.0	262906	1	31	CAPSCREW, S.H. M8x1.25 x 20mm	829308-020	3
6	CLAMP, EXHAUST 1 1/2	262906-150	1	32	CAPSCREW, HEX GR8 5/16-18 x 3/4	829405-075	8
7	SCREW, TRUSS HD 1/4-20UNC x 3/4LG S.S.	262953	4	33	CAPSCREW, HEX GR8 5/16-18 X 1	829405-100	6
8	EYENUT, 5/8-11	264113	1	34	CAPSCREW, HEX GR8 1/2-13 x 1.25	829408-125	6
9	CLAMP, HOSE #28	265560	4	35	CAPSCREW, HEX GR8 5/8-11 x 1.25	829410-125	1
10	ADAPTER, AIR FILTER RUBBER	267312	1	36	SCREW, SER WASH 1/4-20 x 0.75	829704-075	11
11	STRAP, GROUND 8" w/ 3/8 HOLES	267498	1	37	SCREW, SER WASH 5/16-18 x 0.75	829705-075	2
12	CAPSCREW, HEX 10MM 1.25 x 30MM GR10.9	269438	12	38	SCREW, SER WASH 5/16-18 x 1	829705-100	2
13	FILTER, AIR 6" 90 DEG.	269660	1	39	CAPSCREW, HEX GR8 7/16-20UNF x 2.5	829807-250	1
14	GASKET, MUFFLER REPLCMT KUBOTA D902	269961	1	40	SCREW, MACH SHOULDER 1/2 x 3 LG	830508-300	2
15	HOSE, FLEX 1-3/4" I.D. X 9" LG.	270698	0.75 ft	41	SCREW, ROUND HD #8-32 x 1/2	831601-050	2
16	NUT, HEX 5/16-18	825205-273	8	42	WASHER, FLAT 1/4	838204-071	1
17	NUT, HEX FLANGE 1/4-20	825304-236	5	43	WASHER, FLAT 5/16	838205-071	11
18	NUT, HEX FLANGE 5/16-18	825305-283	3	44	WASHER, FLAT 3/8	838206-071	2
19	NUT, HEX LOCKING #8-32	825501-070	2	45	WASHER, FLAT 1/2	838208-112	4
20	NUT, HEX LOCKING 1/4-20	825504-145	5	46	WASHER, LOCK 1/4	838504-062	1
21	NUT, HEX LOCKING 5/16-18	825505-166	2	47	WASHER, LOCK 5/16	838505-078	23
22	NUT, HEX LOCKING 3/8-16	825506-198	2	48	WASHER, LOCK 1/2	838508-125	6
23	CAPSCREW, HEX 6MM x 40MM	828006-040	1	49	WASHER, LOCK 5/8	838510-156	1
24	CAPSCREW, HEX M8 1.25 x 25mm	828008-025	2	50	WASHER, LOCK METRIC M8	838808-200	10
25	CAPSCREW, HEX 8mm 1.25 x 50	828008-050	5	51	WASHER, LOCK METRIC M10	838810-220	12
26	CAPSCREW, HEX GR5 1/4-20 x 3/4	829104-075	1	52	WASHER, FLAT METRIC M10	838910-220	12

*Continued on page 95***PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.**

7.10 ENGINE AND DRIVE PARTS (1 OF 2) (CONTINUED)

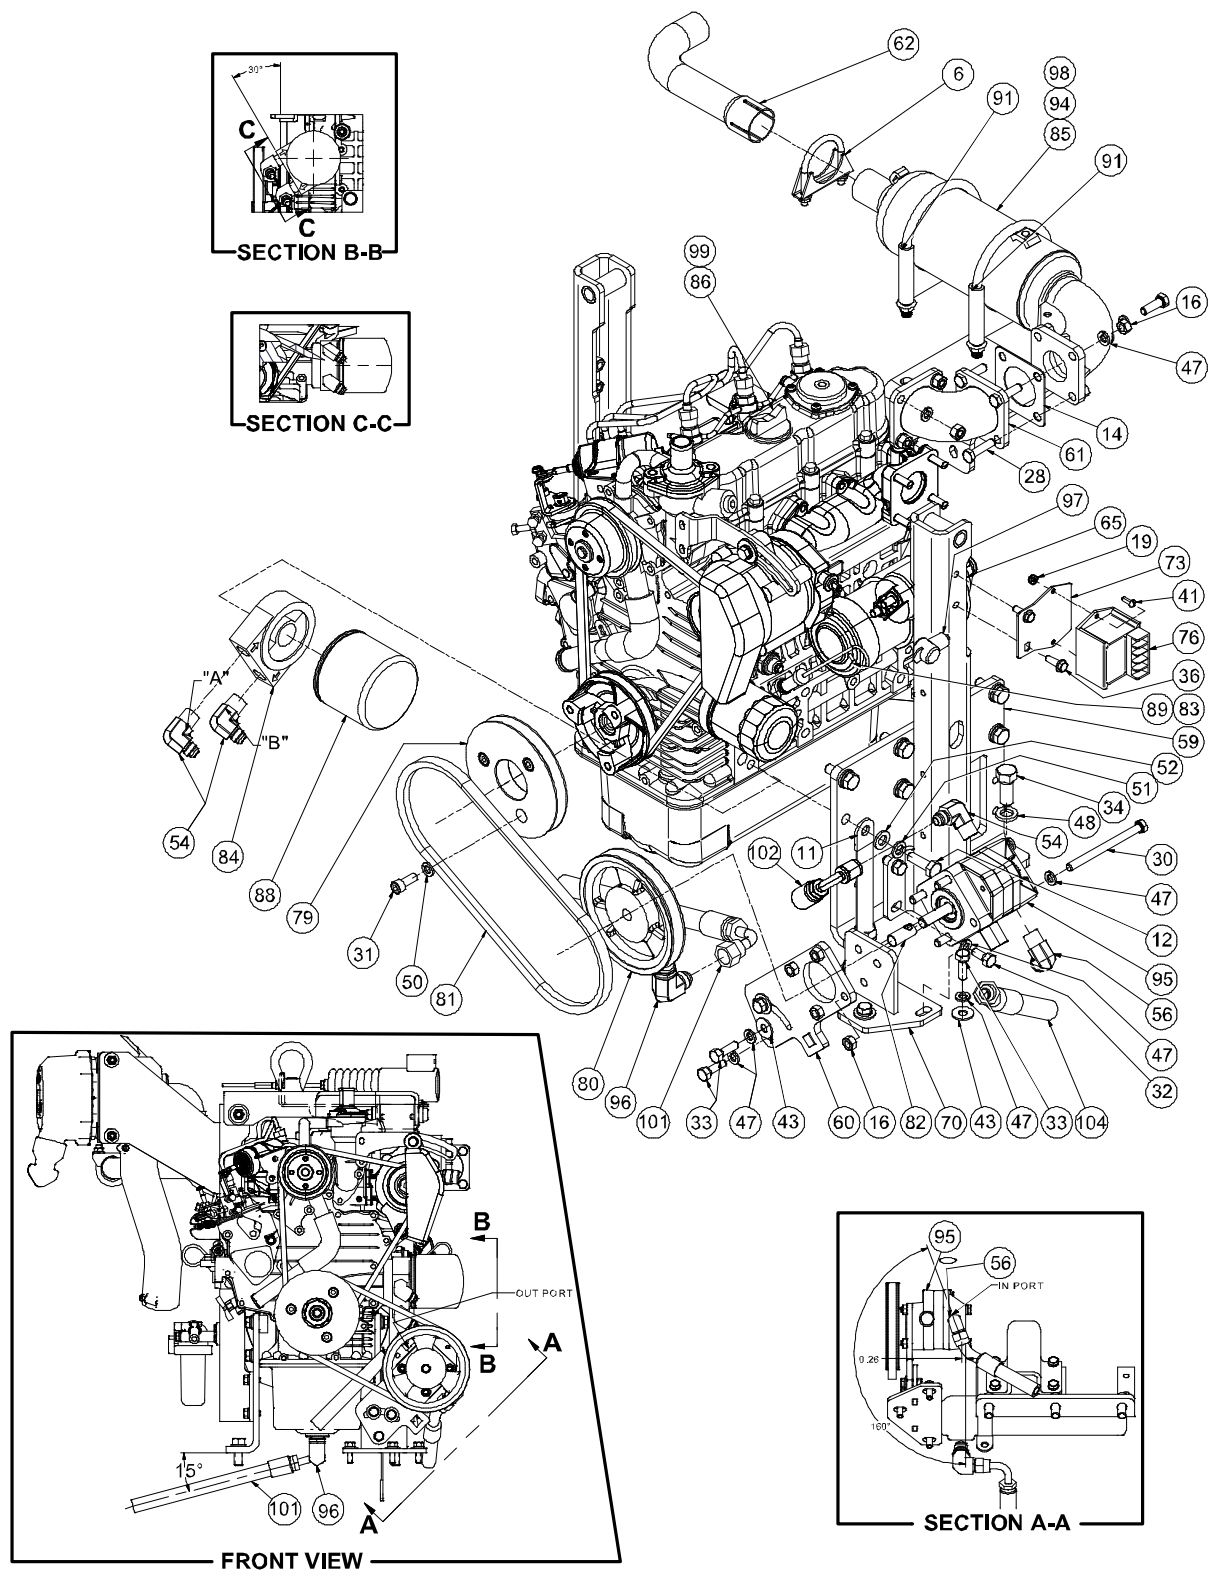

PA6100056ID_r1 (1 of 3)

7.10 ENGINE AND DRIVE PARTS (1 OF 2) (CONTINUED)


ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
53	HOSE, FUEL LINE 5/16 (FT)	842315-031	1	79	SHEAVE, ENGINE, "A" GROOVE	DR270377	1
54	ELBOW, 37FL/90M #06 x 3/8	860206-038	3	80	SHEAVE, A SINGLE GROOVE	DR270378	1
55	ELBOW, 37FL/90M #06 x 1/2	860206-050	2	81	BELT, DRIVE "A" SECTION x 31.0 OUTSIDE	DR270393	1
56	ELBOW, 37FL/90M #08 x 3/8	860208-038	1	82	BUSHING, 1/2 OD	DR270397	1
57	CABLE, ASSEMBLY, CLUTCH 9.0 LG.	A1269740-002	1	83	GUIDE, DIP STICK	EN22893	1
58	BRACKET, ENGINE RH	A1270367	1	84	ADAPTER, OIL FILTER, SANDWICH	EN24145	1
59	BRACKET, ENGINE LH	A1270368	1	85	EXHAUST, KUBOTA	EN270396	1
60	BRACKET, PUMP	A1270376	1	86	ENGINE DIESEL, 25 HP, HZ SHAFT	EN270451	1
61	ELBOW, EXHAUST	A1270384	1	87	COOLER, OIL, 12 PLATE, ALUMINUM	EN37997	1
62	ELBOW, EXHAUST OUT	A1270385	1	88	FILTER, OIL	EN38480	1
63	BRACKET, EXHAUST	A1270387	1	89	DIP STICK, OIL	EN71817	1
64	SUPPORT, MACHINE RH	A1270390	1	90	SPRING, 7/16 DIA. x .030 x 1 7/8" LG	EN75074	1
65	SUPPORT, MACHINE LH	A1270391	1	91	U-BOLT, 3/8-16 x 3 1/2 WD x 5 1/16	FA270399	2
66	BRACKET, LIFTING BAR	A1270392	1	92	WASHER, 1/2ID x 1OD, 2 PIECE	FA37629	1
67	BRACKET, AIR FILTER SUPPORT	A1270394	1	93	SHIPPED WITH ENGINE	FUEL FILTER	1
68	BRACKET, FUEL FILTER	A1270395	1	94	TIES, THERMAL, STAINLESS STEEL	HA42205	5
69	BRACKET, THROTTLE SPRING	A1270578	1	95	PUMP, HYD CWDE W/ RELIEF VALVE	HY270357	1
70	BRACKET, PUMP LOWER	A1270865	1	96	ELBOW, 90 DEG., METRIC 22 x 1.5	HY83058	1
71	BRACKET, THROTTLE CONTROL	A1271106	1	97	BOOT, TERMINAL, 10 GAUGE, RED	PR44522	1
72	BRACKET, CABLE MOUNT	A1271107	1	98	HEADER WRAP, HIGH TEMP, 25 ft	PR81122	25 ft
73	MOUNT, SD85 CONTROLLER	A13502SS	1	99	OIL, MOTOR 15W-40, (QT)	SE271475	5.5 qt
74	SOLENOID, 12VDC PUSH/PULL	CO23288	1	100	TUBE, EXHAUST 1.25 DIA.	TU270889	1
75	CABLE, THROTTLE CONTROL ANA 300 DIESEL	CO271105	1	101	HOSE, ENGINE DRAIN	TU271765-007	1
76	RELAY, SOLENOID CONTROL, SD85	CO72121	1	102	HOSE, PUMP TO MOTOR	TU271765-011	1
77	CLUTCH, CMS 5.8 P.D. 8 GRV SHEAVE	DR269574	1	103	HOSE, TO/FROM COOLER, ENGINE	TU271765-014	2
78	SHEAVE, STUB SHAFT 8 GROOVE	DR270365	1	104	HOSE, PUMP SUCTION (COOLER)	TU271765-016	1

NOTE: Pipe dope all NPT fittings.

Hoses with TU271765 prefix are part of hose kit 271765.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.10 ENGINE AND DRIVE PARTS (2 OF 2)

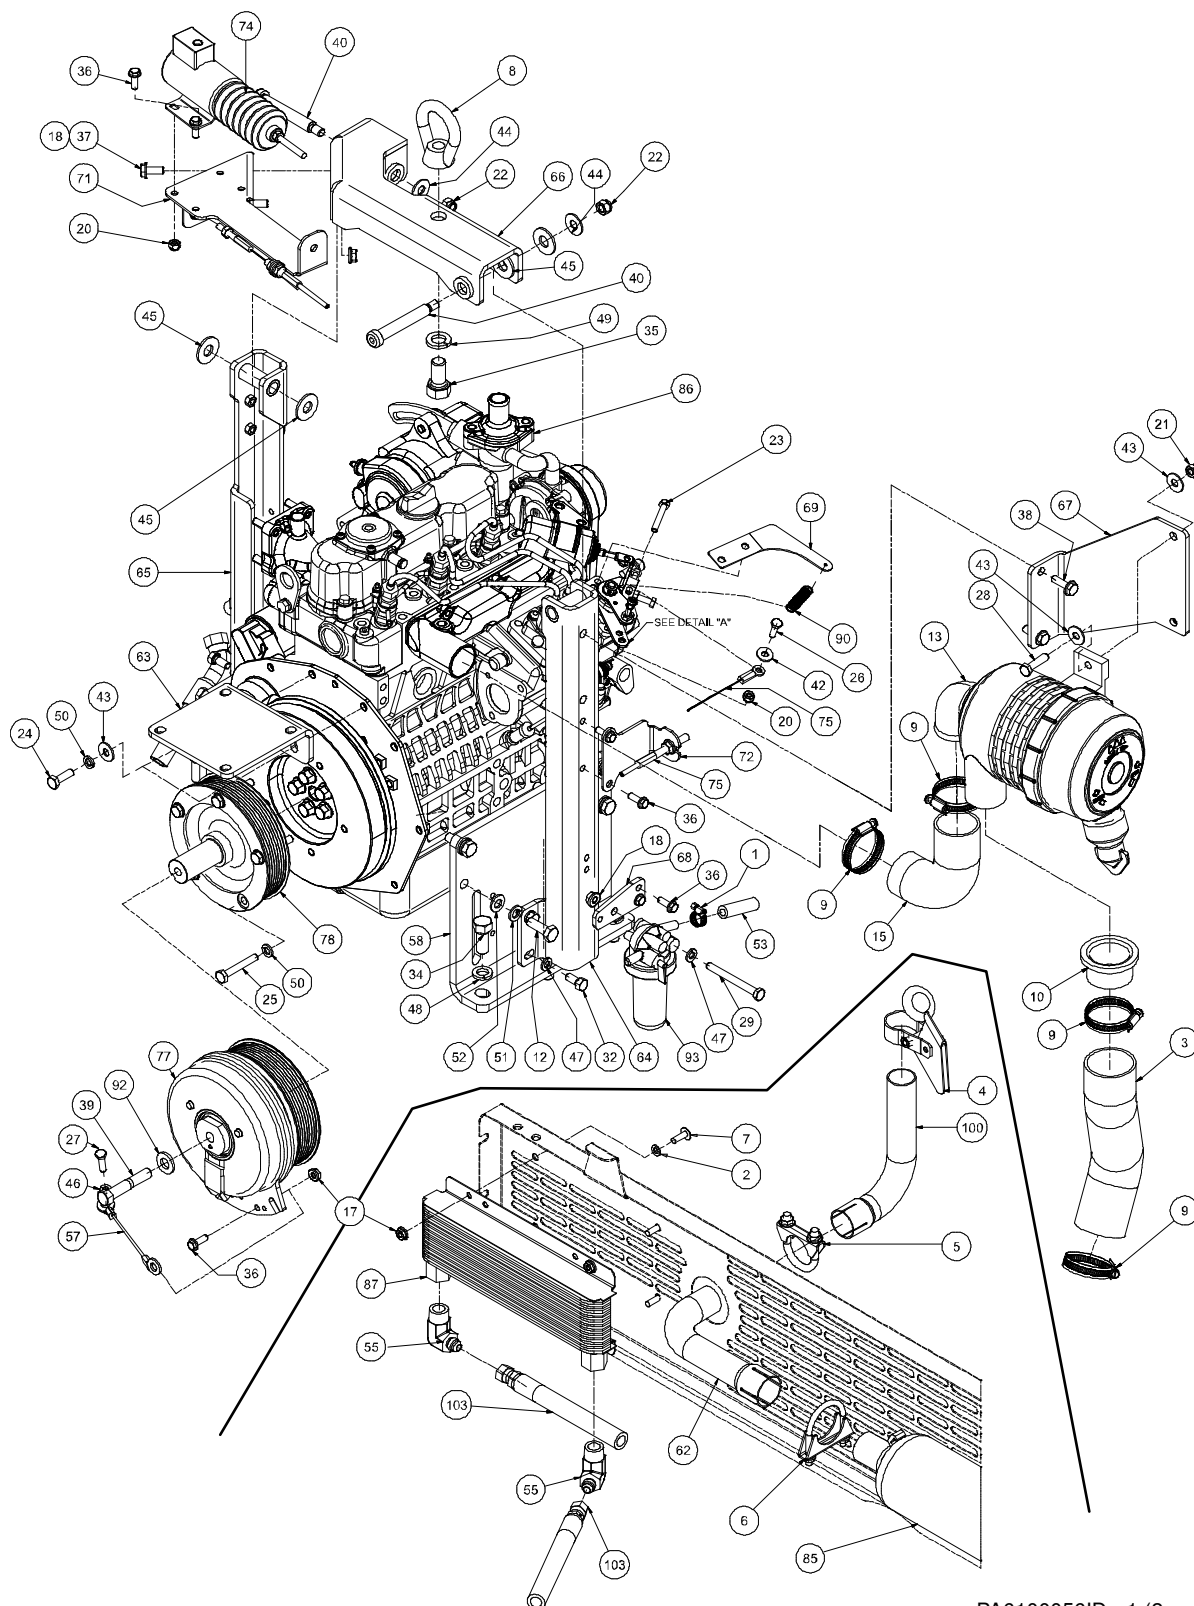


PA6100056ID_r1 (2 and 3 of 3)

7.10 ENGINE AND DRIVE PARTS (2 OF 2)

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1	CLAMP, HOSE 3/16 - 5/16 HOSE	260864	2	27	CAPSCREW, HEX GR5 1/4-20 x 1	829104-100	1
2	WASHER, NYLON FLAT 1/4	262704	4	28	CAPSCREW, HEX GR5 5/16-18 x 1 1/4	829105-125	6
3	HOSE, FLEX 2" I.D. x 21" LG.	262705	1.75 ft	29	CAPSCREW, HEX GR5 5/16-18 x 3	829105-300	1
4	CAP, RAIN 1 1/4" EXHAUST	262706	1	30	CAPSCREW, HEX GR5 5/16-18 x 4	829105-400	4
5	CLAMP, EXHAUST 1 1/4 REV.0	262906	1	31	CAPSCREW, S.H. M8x1.25 x 20mm	829308-020	3
6	CLAMP, EXHAUST 1 1/2	262906-150	1	32	CAPSCREW, HEX GR8 5/16-18 x 3/4	829405-075	8
7	SCREW, TRUSS HD 1/4-20UNC x 3/4LG S.S.	262953	4	33	CAPSCREW, HEX GR8 5/16-18 X 1	829405-100	6
8	EYENUT, 5/8-11	264113	1	34	CAPSCREW, HEX GR8 1/2-13 x 1.25	829408-125	6
9	CLAMP, HOSE #28	265560	4	35	CAPSCREW, HEX GR8 5/8-11 x 1.25	829410-125	1
10	ADAPTER, AIR FILTER RUBBER	267312	1	36	SCREW, SER WASH 1/4-20 x 0.75	829704-075	11
11	STRAP, GROUND 8" w/ 3/8 HOLES	267498	1	37	SCREW, SER WASH 5/16-18 x 0.75	829705-075	2
12	CAPSCREW, HEX 10MM 1.25 x 30MM GR10.9	269438	12	38	SCREW, SER WASH 5/16-18 x 1	829705-100	2
13	FILTER, AIR 6" 90 DEG.	269660	1	39	CAPSCREW, HEX GR8 7/16-20UNF x 2.5	829807-250	1
14	GASKET, MUFFLER REPLCMT KUBOTA D902	269961	1	40	SCREW, MACH SHOULDER 1/2 x 3 LG	830508-300	2
15	HOSE, FLEX 1-3/4" I.D. X 9" LG.	270698	0.75 ft	41	SCREW, ROUND HD #8-32 x 1/2	831601-050	2
16	NUT, HEX 5/16-18	825205-273	8	42	WASHER, FLAT 1/4	838204-071	1
17	NUT, HEX FLANGE 1/4-20	825304-236	5	43	WASHER, FLAT 5/16	838205-071	11
18	NUT, HEX FLANGE 5/16-18	825305-283	3	44	WASHER, FLAT 3/8	838206-071	2
19	NUT, HEX LOCKING #8-32	825501-070	2	45	WASHER, FLAT 1/2	838208-112	4
20	NUT, HEX LOCKING 1/4-20	825504-145	5	46	WASHER, LOCK 1/4	838504-062	1
21	NUT, HEX LOCKING 5/16-18	825505-166	2	47	WASHER, LOCK 5/16	838505-078	23
22	NUT, HEX LOCKING 3/8-16	825506-198	2	48	WASHER, LOCK 1/2	838508-125	6
23	CAPSCREW, HEX 6MM x 40MM	828006-040	1	49	WASHER, LOCK 5/8	838510-156	1
24	CAPSCREW, HEX M8 1.25 x 25mm	828008-025	2	50	WASHER, LOCK METRIC M8	838808-200	10
25	CAPSCREW, HEX 8mm 1.25 x 50	828008-050	5	51	WASHER, LOCK METRIC M10	838810-220	12
26	CAPSCREW, HEX GR5 1/4-20 x 3/4	829104-075	1	52	WASHER, FLAT METRIC M10	838910-220	12

*Continued on page 99***PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.**

7.10 ENGINE AND DRIVE PARTS (2 OF 2) (CONTINUED)

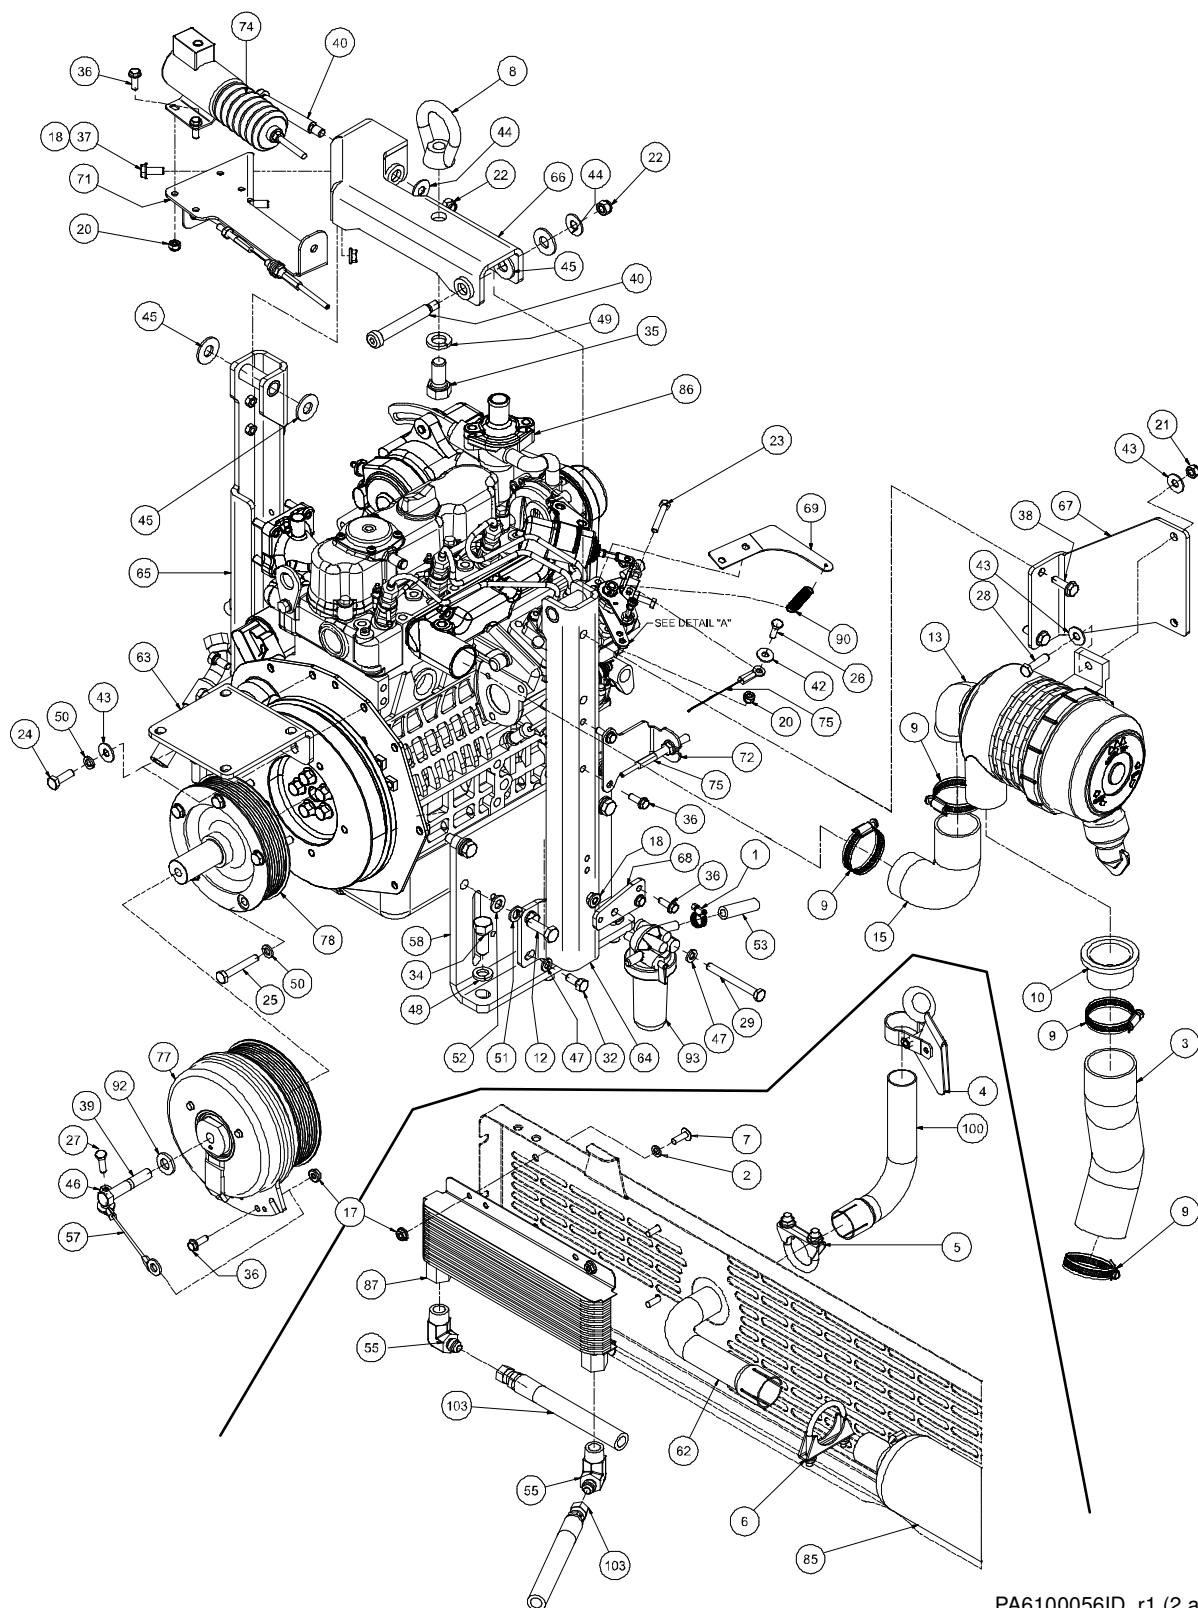

PA6100056ID_r1 (2 and 3 of 3)

7.10 ENGINE AND DRIVE PARTS (1 OF 2) (CONTINUED)


ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
53	HOSE, FUEL LINE 5/16 (FT)	842315-031	1	79	SHEAVE, ENGINE, "A" GROOVE	DR270377	1
54	ELBOW, 37FL/90M #06 x 3/8	860206-038	3	80	SHEAVE, A SINGLE GROOVE	DR270378	1
55	ELBOW, 37FL/90M #06 x 1/2	860206-050	2	81	BELT, DRIVE "A" SECTION x 31.0 OUTSIDE	DR270393	1
56	ELBOW, 37FL/90M #08 x 3/8	860208-038	1	82	BUSHING, 1/2 OD	DR270397	1
57	CABLE, ASSEMBLY, CLUTCH 9.0 LG.	A1269740-002	1	83	GUIDE, DIP STICK	EN22893	1
58	BRACKET, ENGINE RH	A1270367	1	84	ADAPTER, OIL FILTER, SANDWICH	EN24145	1
59	BRACKET, ENGINE LH	A1270368	1	85	EXHAUST, KUBOTA	EN270396	1
60	BRACKET, PUMP	A1270376	1	86	ENGINE DIESEL, 25 HP, HZ SHAFT	EN270451	1
61	ELBOW, EXHAUST	A1270384	1	87	COOLER, OIL, 12 PLATE, ALUMINUM	EN37997	1
62	ELBOW, EXHAUST OUT	A1270385	1	88	FILTER, OIL	EN38480	1
63	BRACKET, EXHAUST	A1270387	1	89	DIP STICK, OIL	EN71817	1
64	SUPPORT, MACHINE RH	A1270390	1	90	SPRING, 7/16 DIA. x .030 x 1 7/8" LG	EN75074	1
65	SUPPORT, MACHINE LH	A1270391	1	91	U-BOLT, 3/8-16 x 3 1/2 WD x 5 1/16	FA270399	2
66	BRACKET, LIFTING BAR	A1270392	1	92	WASHER, 1/2ID x 1OD, 2 PIECE	FA37629	1
67	BRACKET, AIR FILTER SUPPORT	A1270394	1	93	SHIPPED WITH ENGINE	FUEL FILTER	1
68	BRACKET, FUEL FILTER	A1270395	1	94	TIES, THERMAL, STAINLESS STEEL	HA42205	5
69	BRACKET, THROTTLE SPRING	A1270578	1	95	PUMP, HYD CWDE W/ RELIEF VALVE	HY270357	1
70	BRACKET, PUMP LOWER	A1270865	1	96	ELBOW, 90 DEG., METRIC 22 x 1.5	HY83058	1
71	BRACKET, THROTTLE CONTROL	A1271106	1	97	BOOT, TERMINAL, 10 GAUGE, RED	PR44522	1
72	BRACKET, CABLE MOUNT	A1271107	1	98	HEADER WRAP, HIGH TEMP, 25 ft	PR81122	25 ft
73	MOUNT, SD85 CONTROLLER	A13502SS	1	99	OIL, MOTOR 15W-40, (QT)	SE271475	5.5 qt
74	SOLENOID, 12VDC PUSH/PULL	CO23288	1	100	TUBE, EXHAUST 1.25 DIA.	TU270889	1
75	CABLE, THROTTLE CONTROL ANA 300 DIESEL	CO271105	1	101	HOSE, ENGINE DRAIN	TU271765-007	1
76	RELAY, SOLENOID CONTROL, SD85	CO72121	1	102	HOSE, PUMP TO MOTOR	TU271765-011	1
77	CLUTCH, CMS 5.8 P.D. 8 GRV SHEAVE	DR269574	1	103	HOSE, TO/FROM COOLER, ENGINE	TU271765-014	2
78	SHEAVE, STUB SHAFT 8 GROOVE	DR270365	1	104	HOSE, PUMP SUCTION (COOLER)	TU271765-016	1

NOTE: Pipe dope all NPT fittings.

Hoses with TU271765 prefix are part of hose kit 271765.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.11 ELECTRICAL SYSTEM

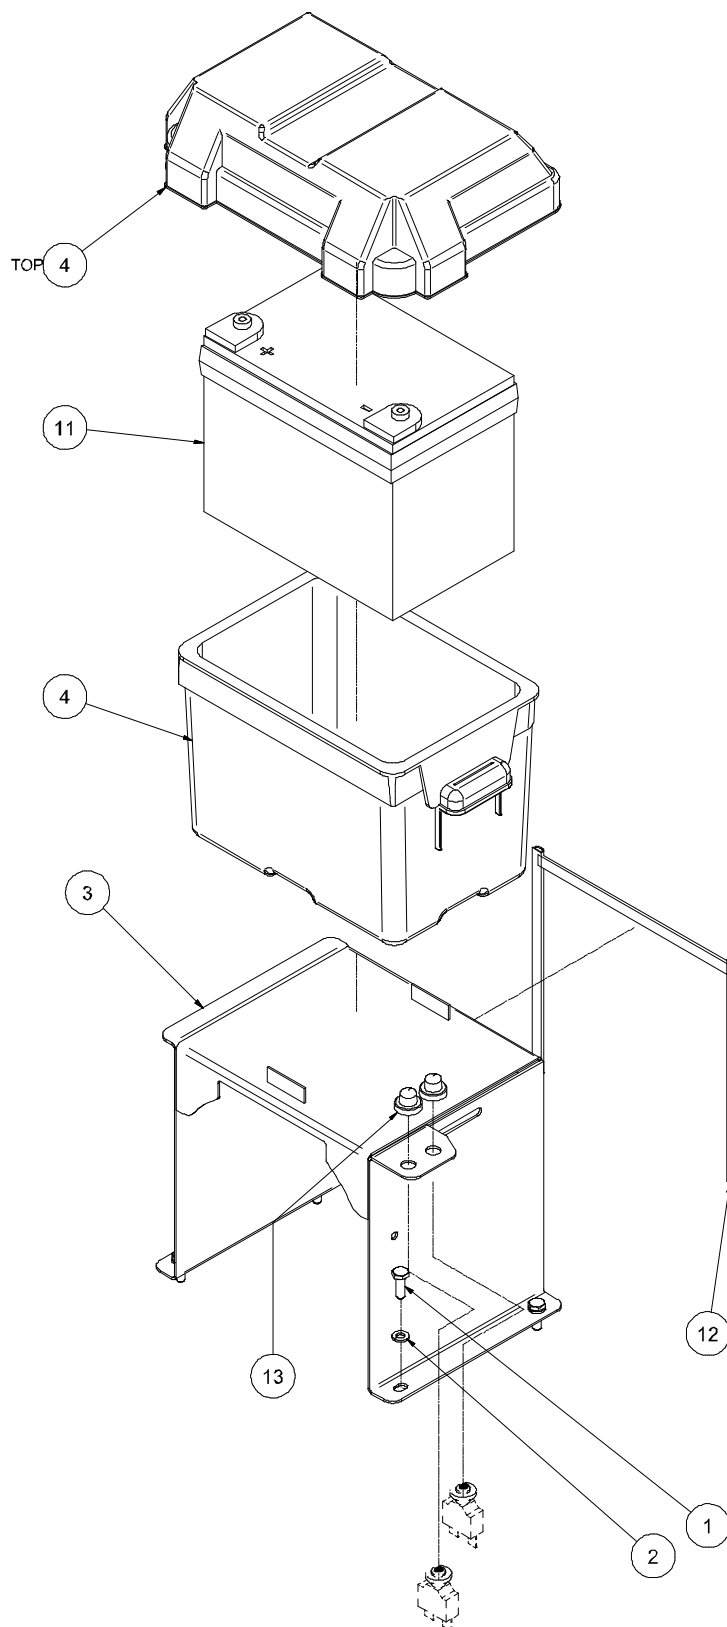

PA6120136ID_r0




7.11 ELECTRICAL SYSTEM

ITEM	DESCRIPTION	PART NUMBER	QTY
1	CAPSCREW, HEX GR5 1/4-20 x 3/4	829104-075	4
2	WASHER, LOCK 1/4	838504-062	4
3	BRACKET, BATTERY	A1270389	1
4	BOX, BATTERY	EL269924	1
5	HARNESS, WIRE WELDER ¹	EP269873	1
6	HARNESS, WIRE GENERATOR ¹	EP269874	1
7	CABLE, BATTERY, POSITIVE ¹	EP270599	1
8	HARNESS, WIRE MAIN ¹	EP272403	1
9	CABLE, BATTERY, NEGATIVE ¹	EP34513	2
10	WD, AIR N ARC, I-300 EM ¹	ID272402	1
11	BATTERY, 12 VOLT 35 AMP DEEP	MA31821	1
12	GASKET, ADHESIVE BACK, D SHAPE 7-3/4 LG.	PR81501	3
13	BOOT, BREAKER, PANEL MOUNT	PR81817	2

¹ Items #5 through #10 are not shown.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.12 MANIFOLD ASSEMBLY

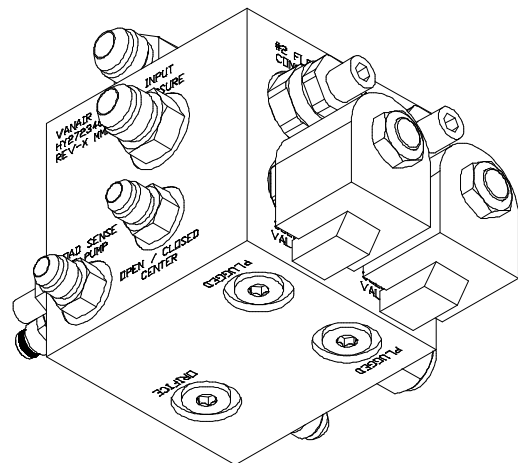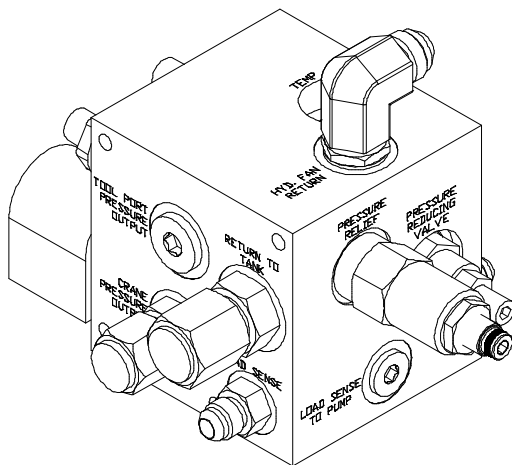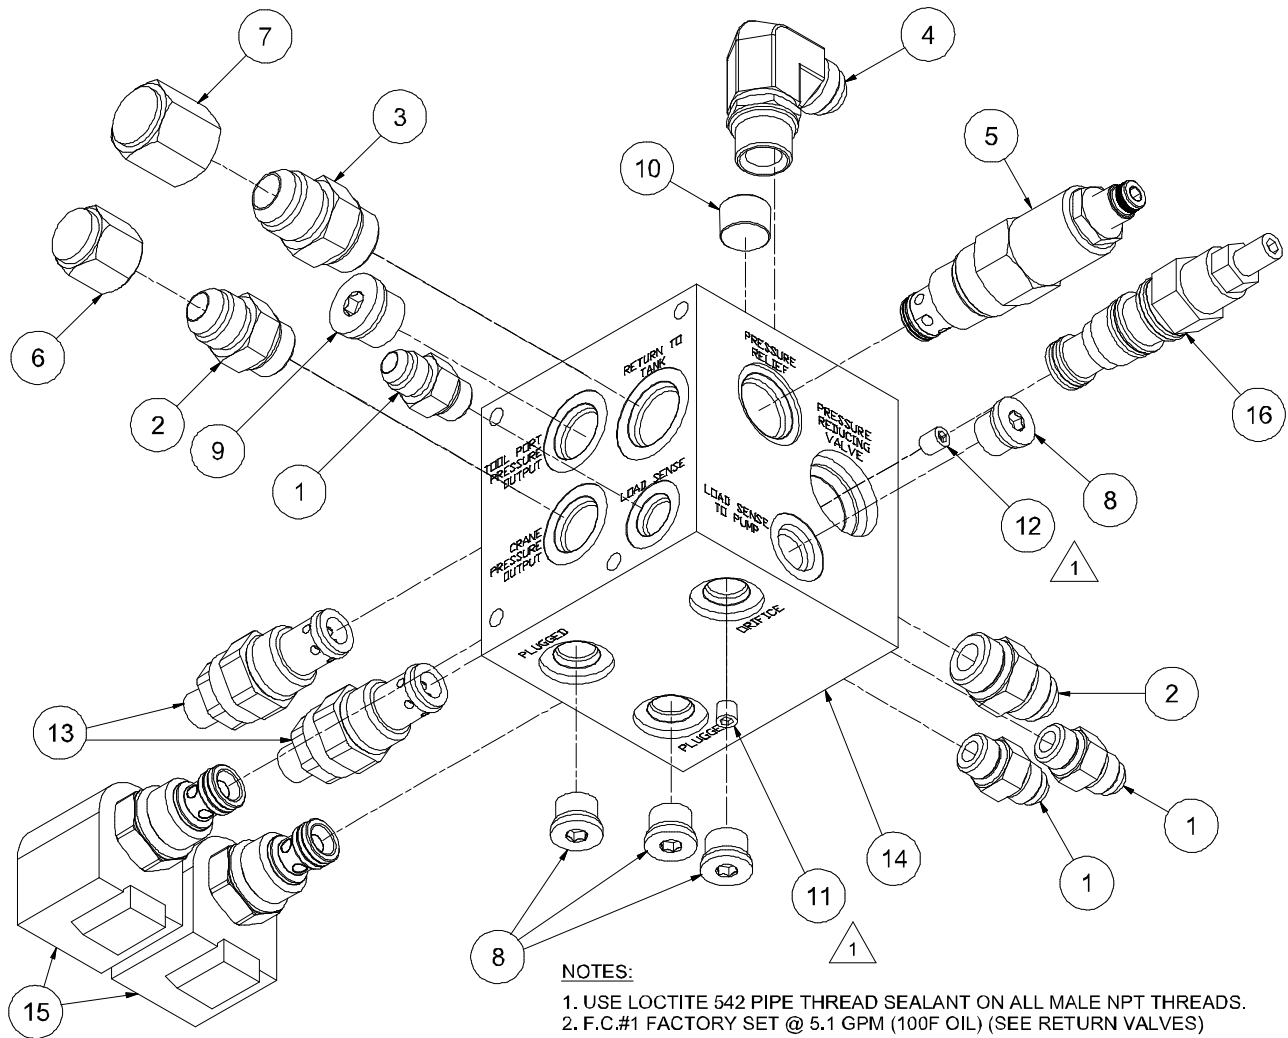

PA6120134-03ID_r1


7.12 MANIFOLD ASSEMBLY

ITEM	DESCRIPTION	PART NUMBER	QTY
1	CONNECTOR, #6 MSAE x #6 MJIC	260387-105	3
2	CONNECTOR, #8 MSAE x #8 MJIC	260387-107	2
3	CONNECTOR, #10 MSAE x #10 MJIC	260387-109	1
4	ELBOW, 90 DEG #8 MJIC x #8 MSAE	260403-104	1
5	VALVE, PRESSURE RELIEF	263878-003	1
6	CAP, FEMALE JIC 3/4-16 #8	264322-003	1
7	CAP, JIC 5/8	264322-004	1
8	PLUG, SAE O-RING HOLLOW HEX #6	268081-005	4
9	PLUG, SAE O-RING HOLLOW HEX #8	268081-006	1
10	PLUG, PIPE 3/8 NPT HHEX STEEL	272691	1
11	ORIFICE, 0.022 DIA 1/16 NPT PLUG	273513	1
12	ORIFICE, 0.082 DIA 1/16 NPT PLUG	273530	1
13	CONTROL, FLOW NEEDLE 0-16 GPM	CO271760	2
14	MANIFOLD, HYDRAULIC SOLENOID NO TOOL	HY272346-03	1
15	VALVE, SOLENOID N.C.	HY272362	2
16	VALVE, PRESSURE REDUCING	HY273204	1

NOTE: Apply Loctite® 562 thread sealant to all male NPT threads.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.13 HYDRAULIC TANK ASSEMBLY

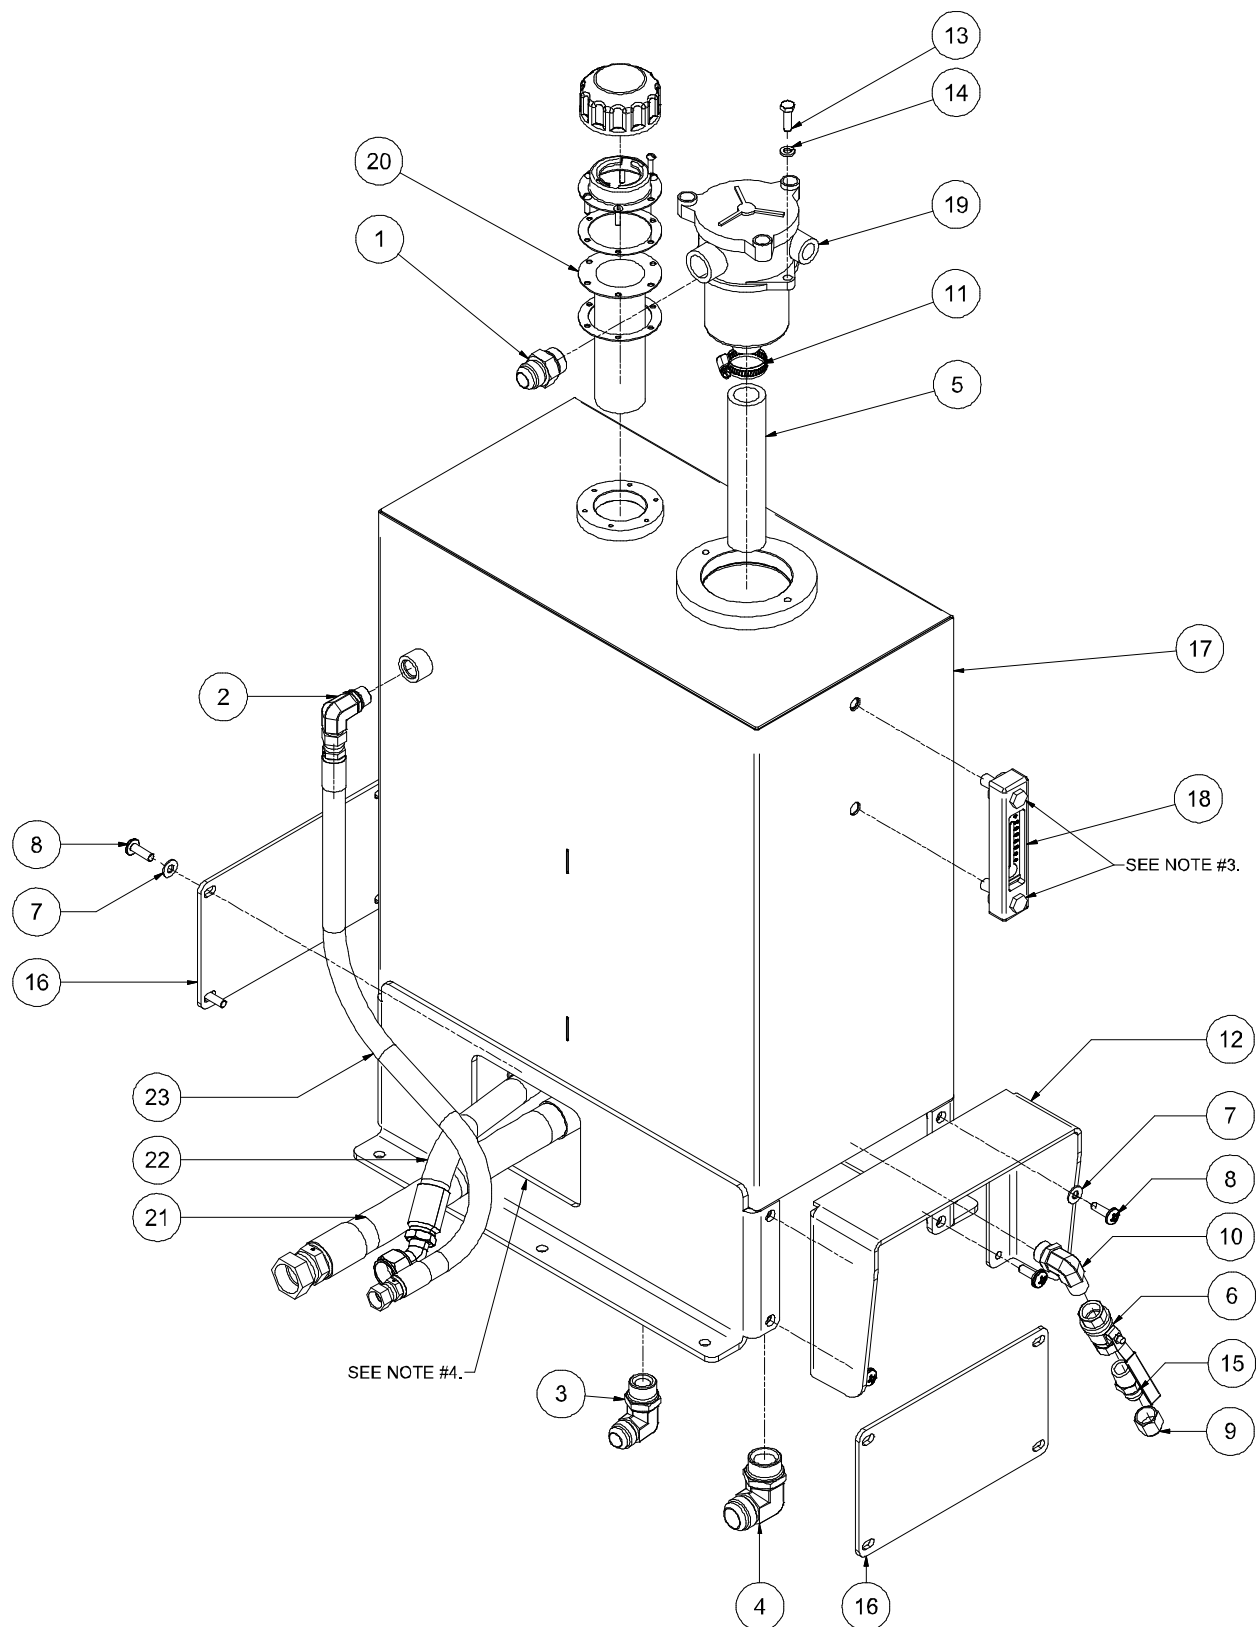

PA6120139ID_r2

7.13 HYDRAULIC TANK ASSEMBLY

ITEM	DESCRIPTION	PART NUMBER	QTY
1	CONNECTOR, #12 MSAE x #12 MJIC	260387-112	1
2	ELBOW, 90 DEG #8 MJIC x #8 MSAE	260403-104	1
3	ELBOW, 90 DEG #12 MJIC x #12 MSAE	260403-107	1
4	ELBOW, 90 DEG #16 MJIC x #16 MSAE	260403-108	1
5	HOSE,M-PRESS 1 INCH X BULK 6D5 6D4 42A2	261094	7.000 in
6	VALVE,BALL 1/2 INCH NON- VENTING	261904-004	1
7	WASHER, NYLON 5/16-18	262943	8
8	SCREW,TRUSS HD 5/16-18 x 1 SS	263280	8
9	CAP, FEMALE JIC 3/4-16 #8	264322-003	1
10	ELBOW,90 DEG,#8 ORB X #8 NPT M	264924-007	1
11	CLAMP,HOSE SUPPORT 1-1/4 .O406 BOLT	269955	1
12	GUARD,HYD TANK DRAIN	273450	1
13	CAPSCREW,HEX GR5 5/16-18 x 1	829105-100	2
14	WASHER, LOCK 5/16	838505-078	2
15	CONNECTOR, 37FL/MPT #08 x 1/2	860108-050	1
16	COVER, HYDRAULIC TANK	A1272493	2
17	TANK, HYDRAULIC 20GAL	HY272347	1
18	INDICATOR, HYDRO LEVEL AND TEMP	HY272471	1
19	FILTER, HYD. RETURN	HY272485	1
20	FILLER / BREATHER 3um, 6" LONG	HY272492	1
21	HOSE,#16 SUCTION	TU273445-001A	1
22	HOSE,#12 CASE DRAIN	TU273445-002A	1
23	HOSE,#8 PRESSURE RELIEF	TU273445-003A	1

NOTE: Tightening torque: 88 in-lbs.

NOTE: Hoses go through opening in bottom of tank.


PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

7.14 DECAL AND PLATE LOCATIONS (1 OF 4)

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1 ^I	DECAL, EXPLOSIVE FUEL	264377	1	6 ^I	DECAL, CARBON MONOXIDE	264376	1
2	DECAL, CAUTION	DL270120	1	7 ^I	DECAL, CAP AND PLUG REMOVAL	264383	1
3 ^I	DECAL, VANAIR	265605	1	8 ^I	DECAL, FAN GUARD	264378	1
4 ^I	DECAL, SULFURIC ACID	264375	1	9 ^I	DECAL, COMPRESSOR MAINTENANCE	263388	1
5 ^I	DECAL, HOT PARTS	264372	1	10 ^I	DECAL, VANGUARD COMPRESSOR OIL	254626-1GAL	1

^I This decal is included with decal sheet no. 263453.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

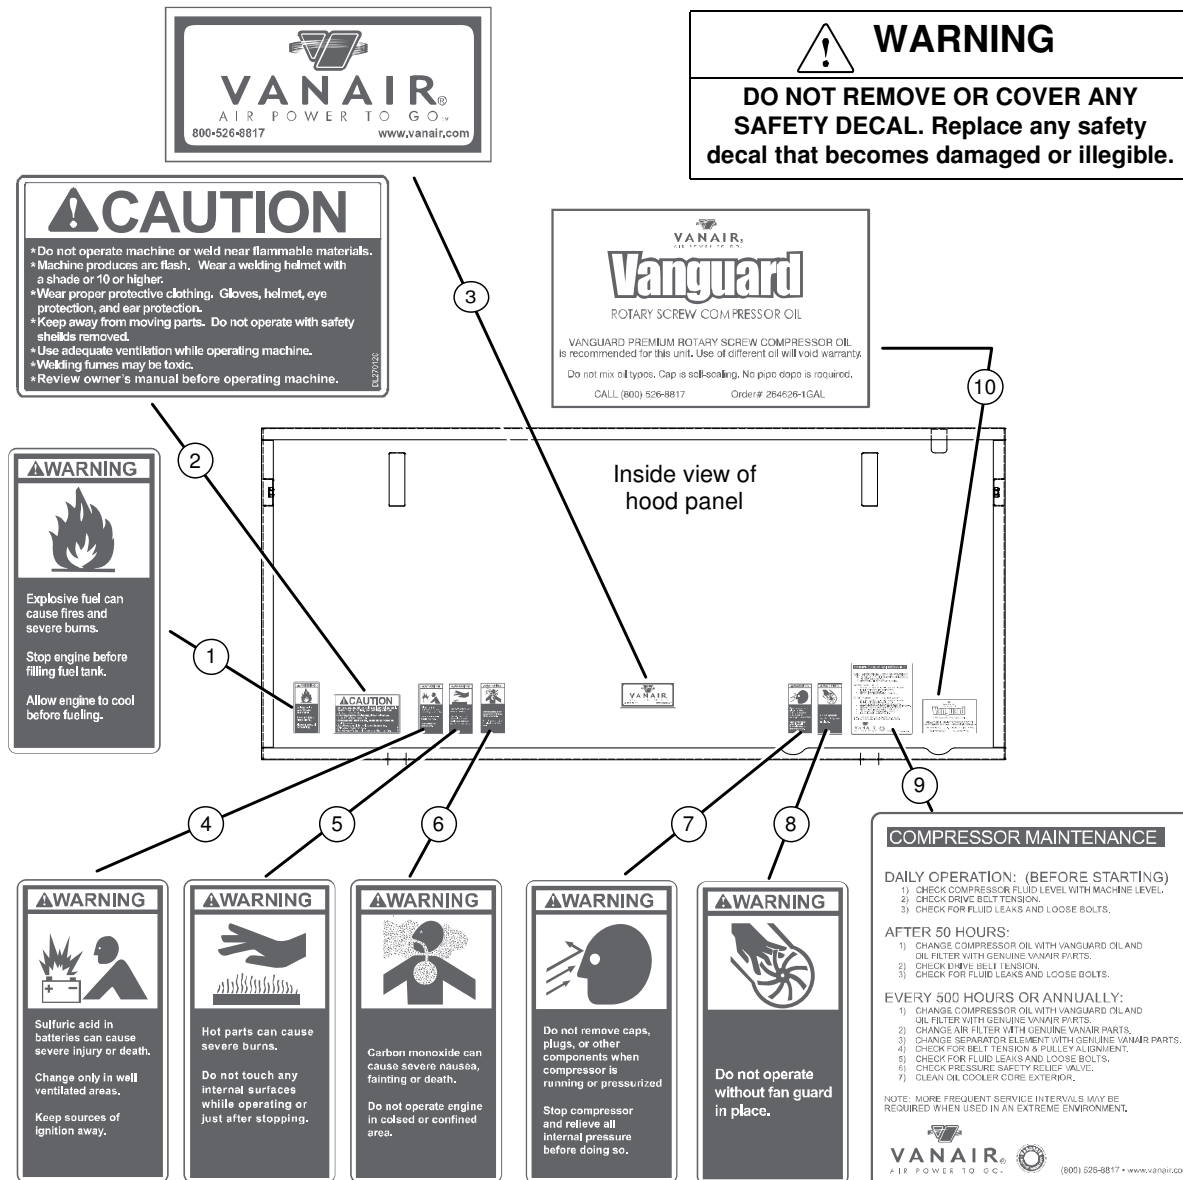


7.14 DECAL AND PLATE LOCATIONS (2 OF 4)

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1	DECAL, LOW SULFUR FUEL DIESEL	270802	1	5 [‡]	DECAL, ACCIDENTAL STARTS	264373	1
2	DECAL, CAUTION AUTO START	272041	1	6 [‡]	DECAL, ROTATING PARTS	264374	1
3	DECAL, 50/50 MIX RADIATOR	DL270739	1	7 [‡]	DECAL, BREATHING AIR	361886	1
4	DECAL, NO STARTING FLUID DIESEL	DL270738	1	8 [‡]	DECAL, AIR HOSE	261885	1
				9 [‡]	DECAL, READ MAUAL	27424	1

[‡] This decal is included with decal sheet no. 263453.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

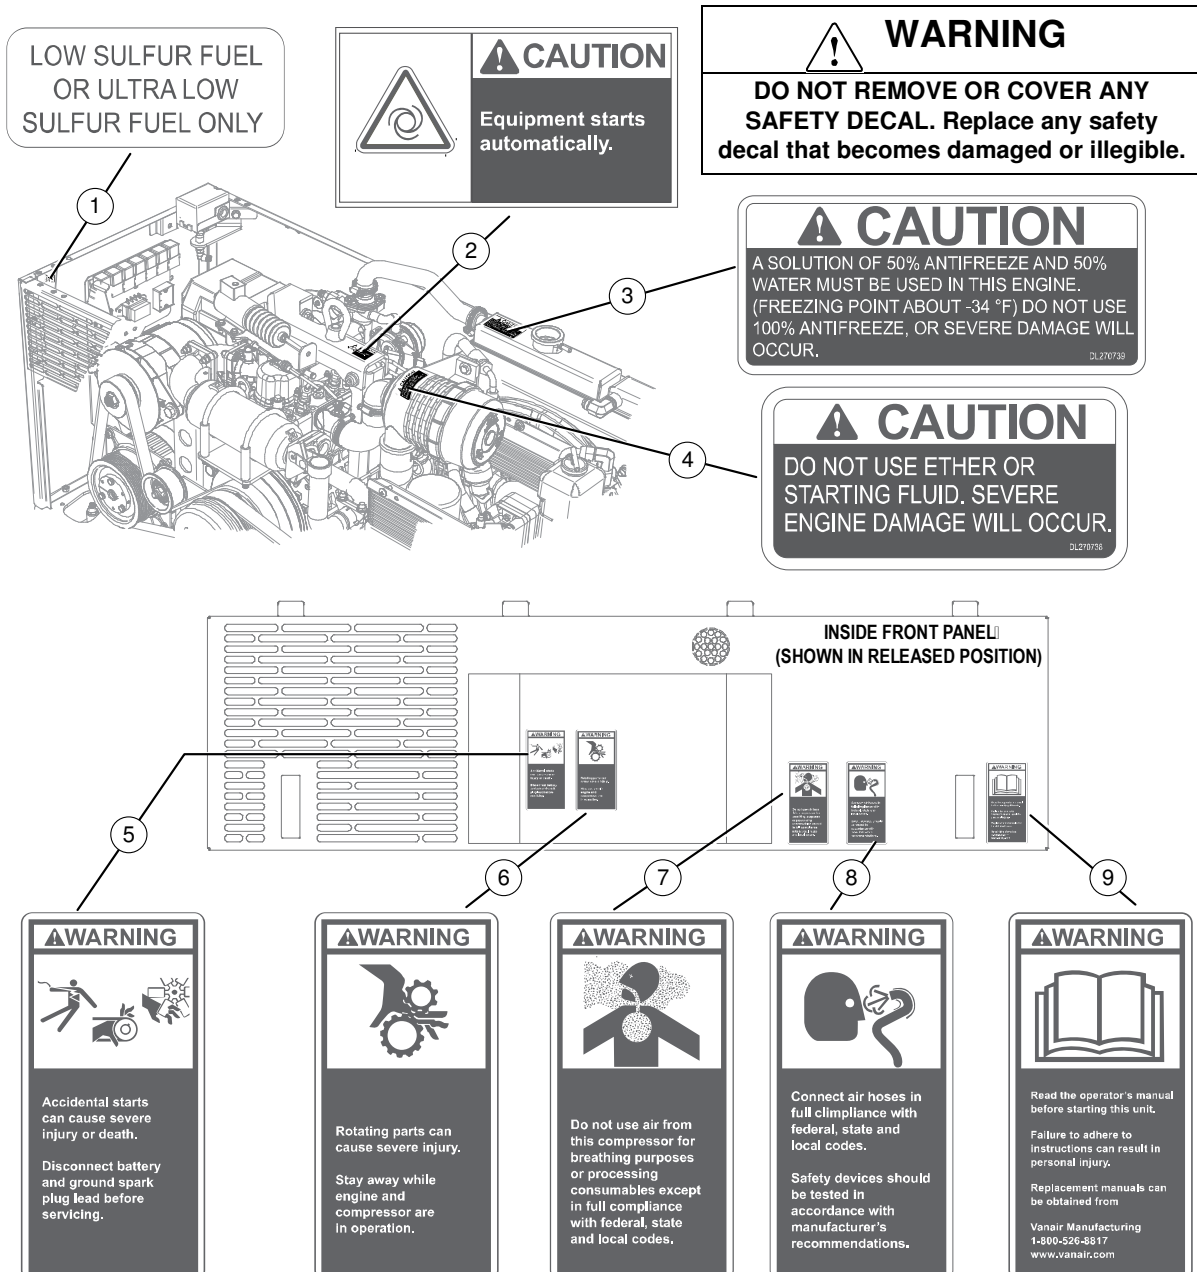


7.14 DECAL AND PLATE LOCATIONS (3 OF 4)

ITEM	DESCRIPTION	PART NUMBER	QTY	ITEM	DESCRIPTION	PART NUMBER	QTY
1A	DECAL, VANAIR FRONT PANEL	DL270724	1	5	DECAL, AIR TANK DRAIN	DL269676	1
1B	DECAL, VANAIR REAR PANEL 17"	DL272548	1	6	DECAL, ANA BY VANAIR, WHITE	DL269706	1
2	DECAL, ANA I300 PERFORMANCE	DL272419	2	7	DECAL, ENGINE OIL DRAIN	II	1
3	DECAL, LOAD PRESSURE SENSE	DL273347	1	8	DECAL, COMPRESSOR FLUID DRAIN	II	1
4	DECAL, SUPPLY / RETURN	DL272078	1				

^I Both the "supply" and "return" decals are grouped under one part number.

^{II} This decal is included with decal sheet no. 263453.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.

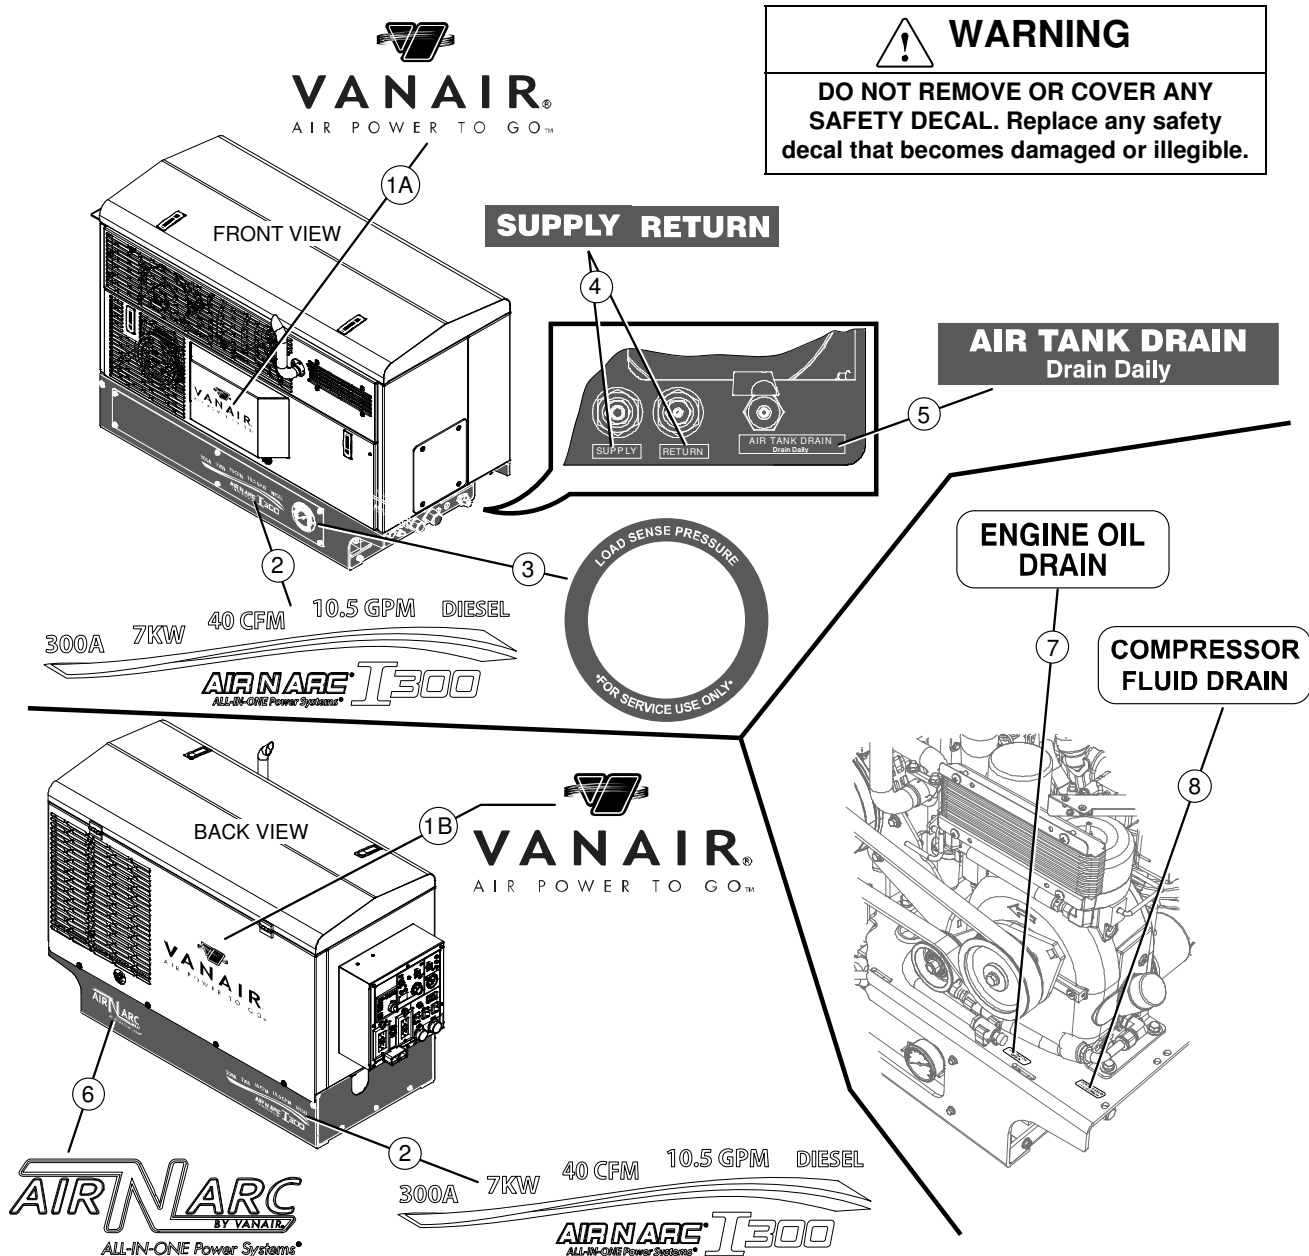

7.14 DECAL AND PLATE LOCATIONS (4 OF 4)

ITEM	DESCRIPTION	PART NUMBER	QTY
1	DECAL, VANAIR LOGO	DL270724	1
2	DECAL, ANA I300D PERFORMANCE, BLACK	DL272420	1
3	DECAL, WELD DANGER ^I	DL273637	2

^I The weld danger decal group consists of a smaller decal (placed on instrument panel [regardless of mounted or remote-mounted]), and a larger (though identical) decal, which is shipped loose. Vanair recommends placement of the larger weld decal on the vehicle access panel door outer surface.

NOTE: For machine serial plate and number location, see **Figure 7-1**.

PLEASE NOTE: WHEN ORDERING PARTS, INDICATE MACHINE SERIAL NUMBER.




WARNING


DO NOT REMOVE OR COVER ANY
SAFETY DECAL. Replace any safety
decal that becomes damaged or illegible.

SIDE VIEW W: without instrument
panel mounted

SIDE VIEW W: with instrument
panel mounted

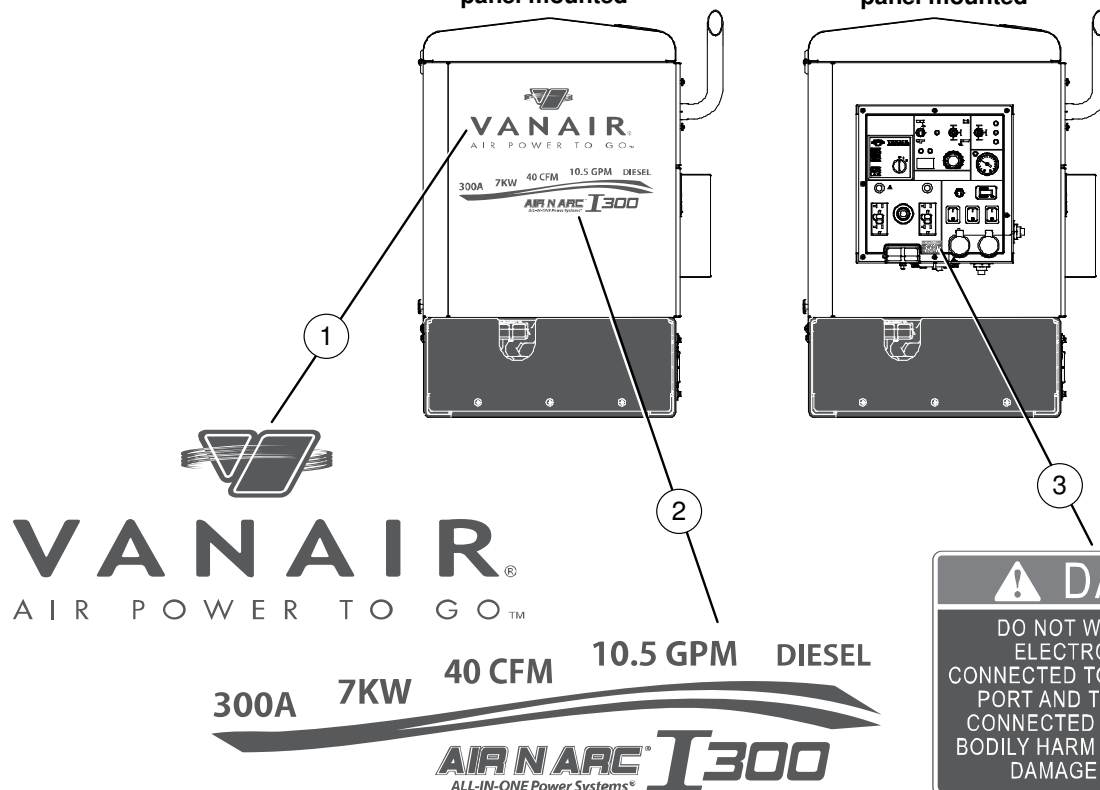


WIRING INFORMATION	
SYSTEM	WIRE # DESCRIPTION
GENERAL	1 GROUND
	2 +12 VDC
	3 +12 VDC SWITCHED
	4 +12 VDC SWITCHED (MACHINE)
	5 +12 VDC STARTER
SAFETY	6 SAFETY SHUTDOWN
	7 ALTERNATOR FAILURE LIGHT
	8 FUEL SENDER
	9 THROTTLE
	26 GLOW PLUGS
ENGINE	27 OIL PRESSURE
	28 COOLANT TEMP
	29 SHUTDOWN SOLENOID
	12 FIELD
	13 SERVO
WELDER	14 HALL EFFECT
	30 CHARGE LOCKOUT
	15 SHUTDOWNS
	16 COMPRESSOR
	17 FAULT LIGHT
COMPRESSOR	18 REMOTE SWITCH
	20 INLET HEATER
	22 LOAD/UNLOAD SOLENOID
	40 CLUTCH
	23 CAPACITOR
GENERATOR	25 GENERATOR SWITCH
	42 HYD SWITCH
HYDRAULICS	43 HYD. SOLENOID LOW
	44 HYD. SOLENOID HIGH

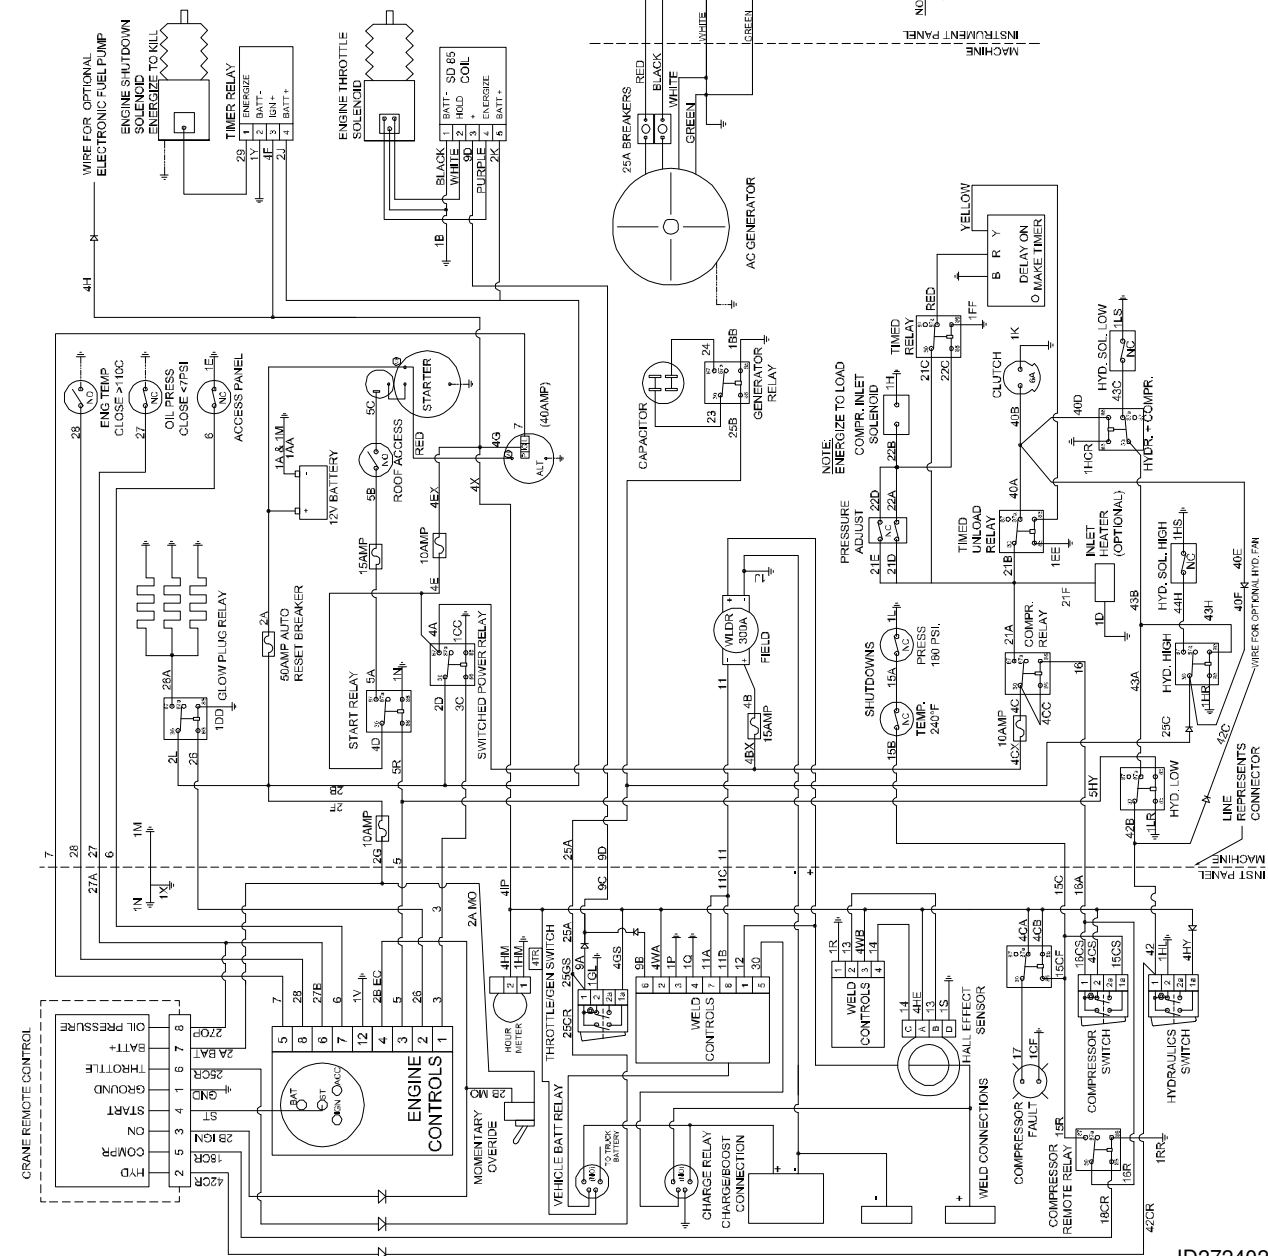


ID272402 r7

7.16 WIRING DIAGRAM - SWITCHES AND LIGHTS

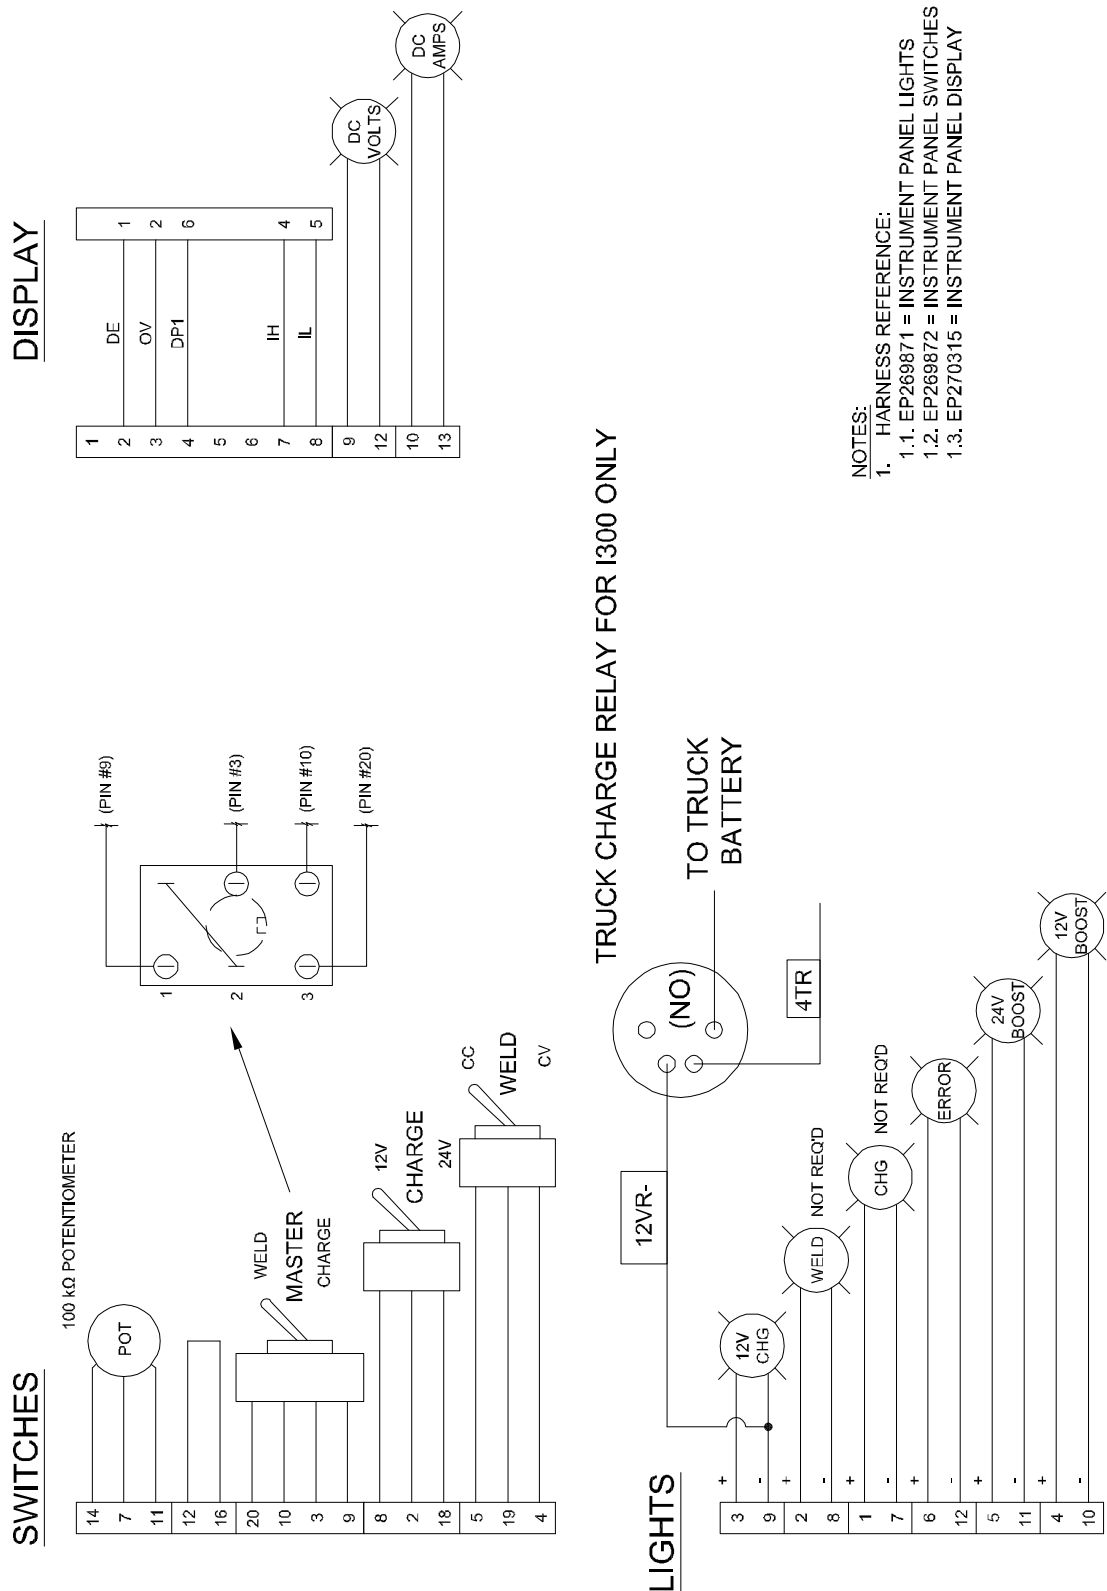


ID270925_r1

7.17 SCHEMATIC DIAGRAM - HYDRO CRANE, O.C., NO TOOL

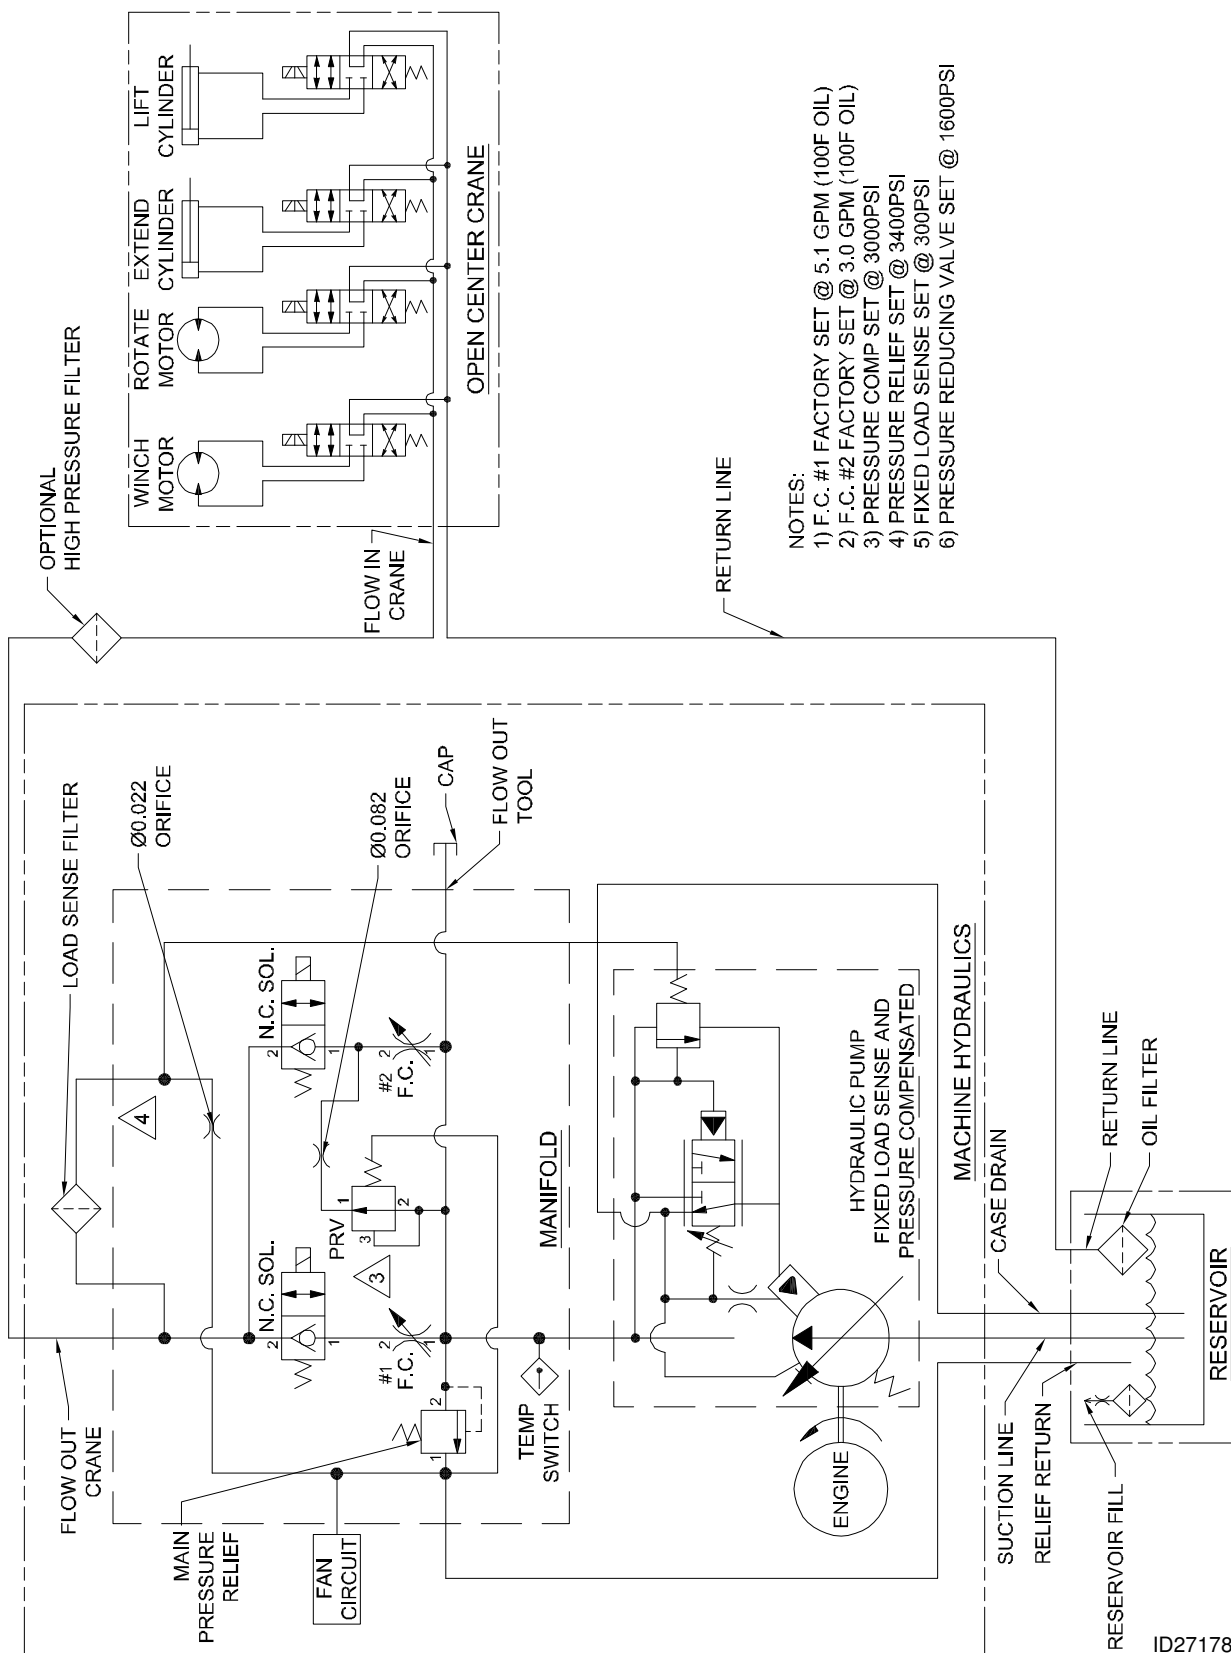


ID271786_r5

7.18 SCHEMATIC DIAGRAM - HYDRO C.C. CRANE, NO TOOL

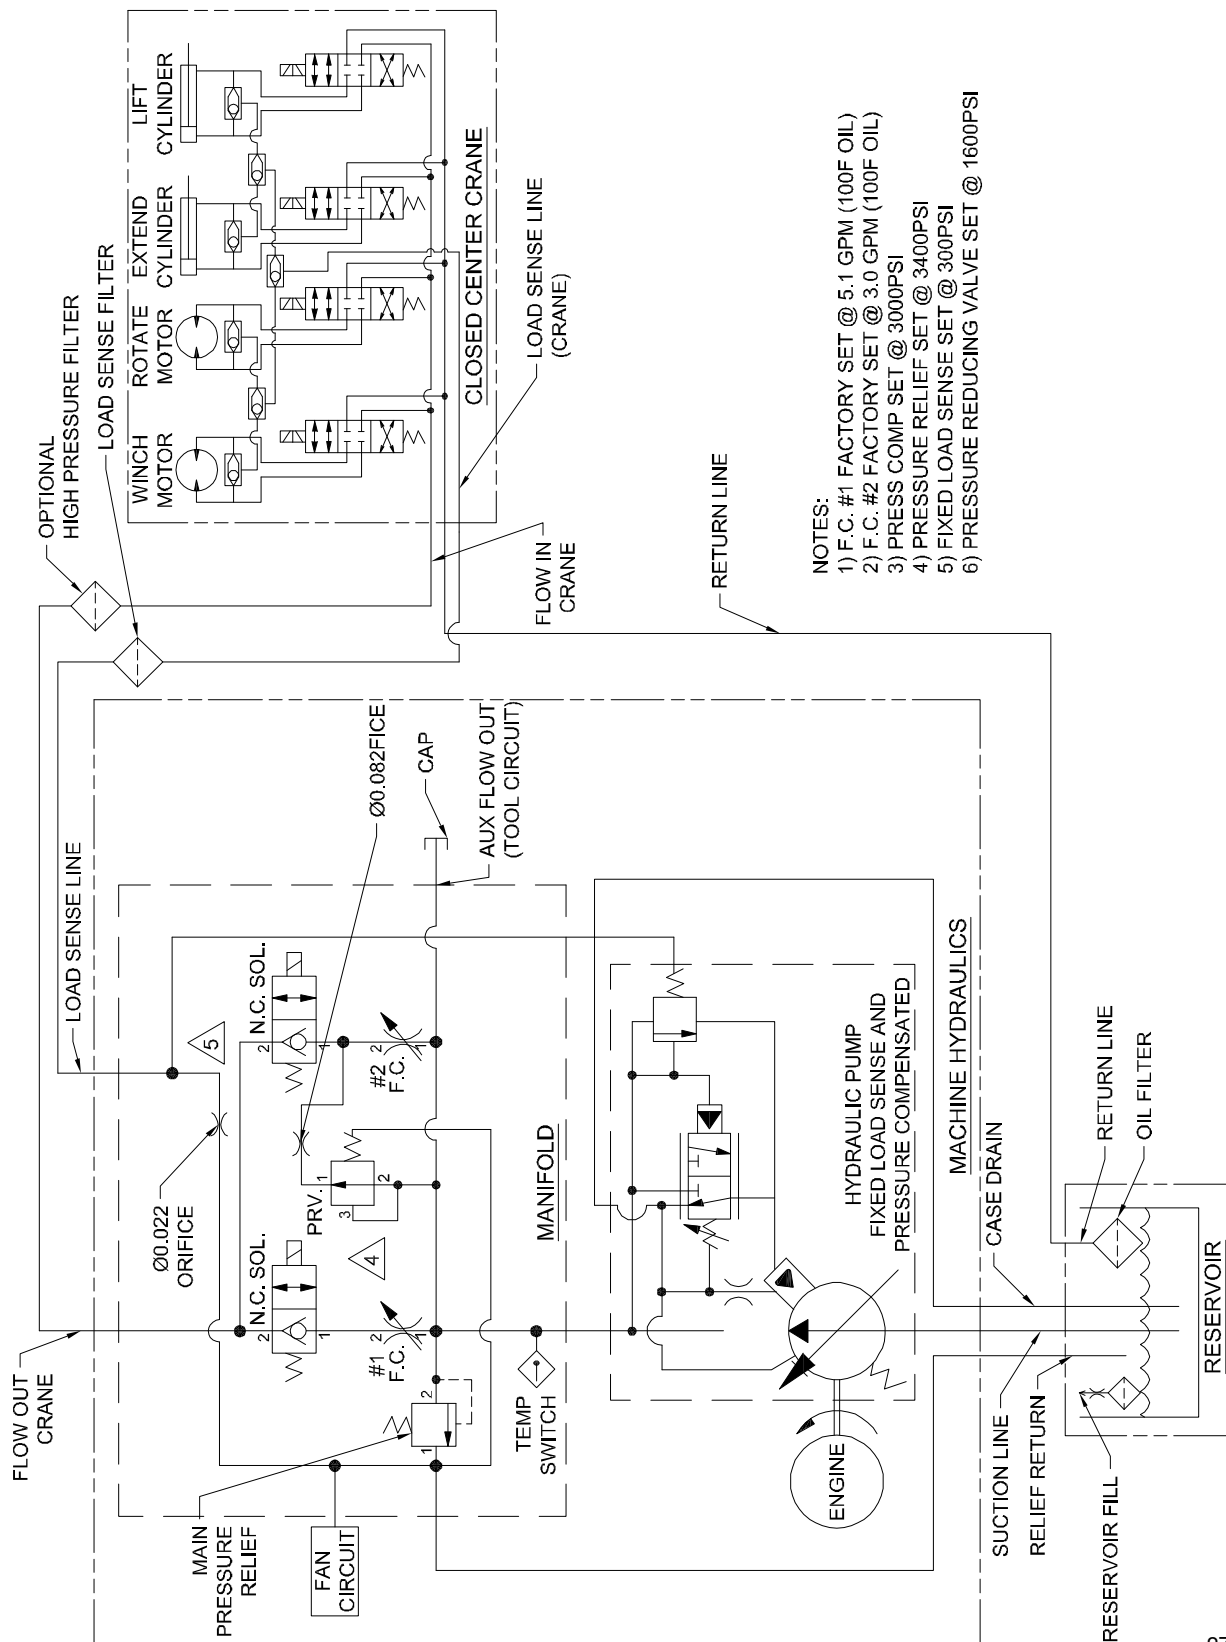







271787_r6

7.19 SCHEMATIC DIAGRAM - COMPRESSOR FLOW

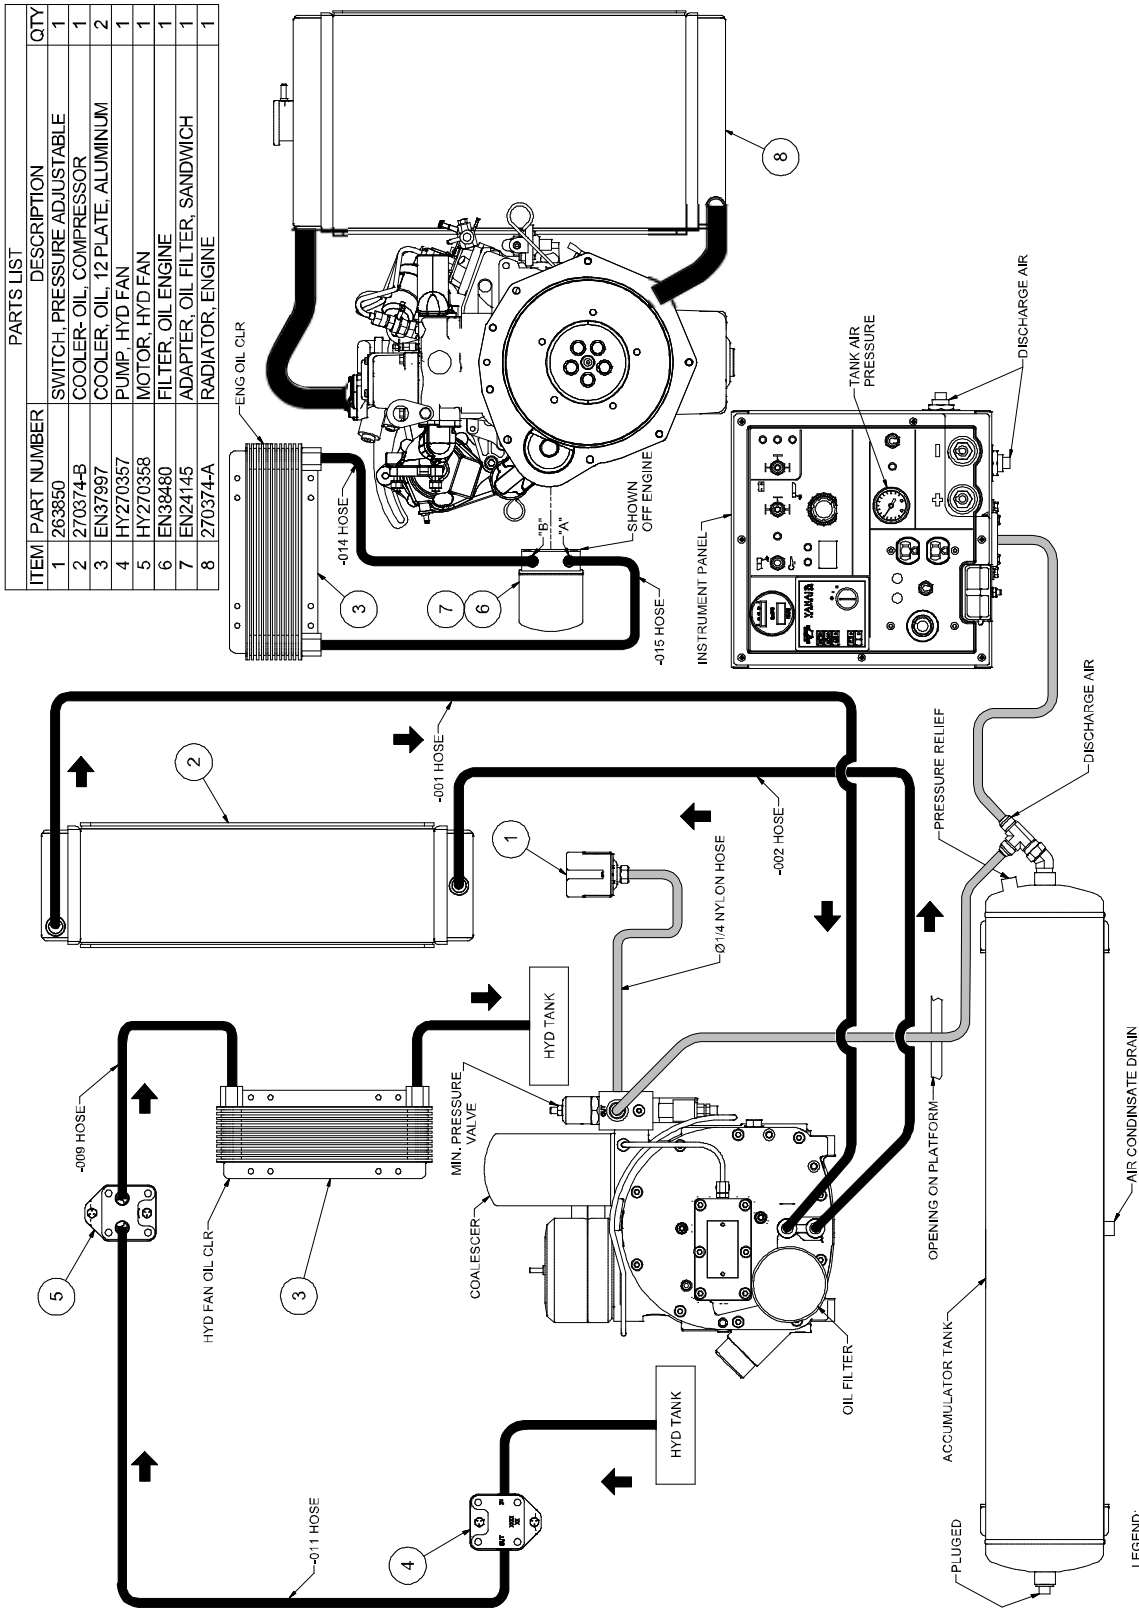

ID272919_r1

7.20 HOSE INSTALLATION GUIDE

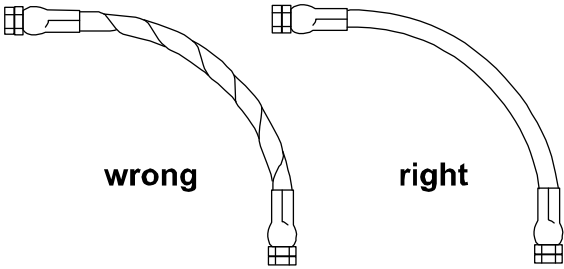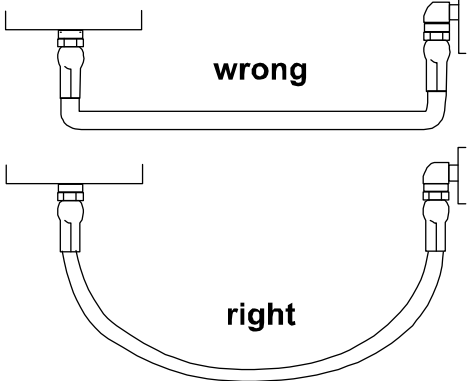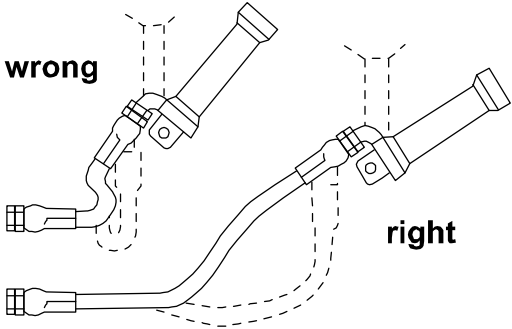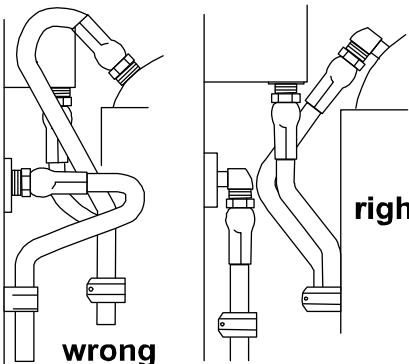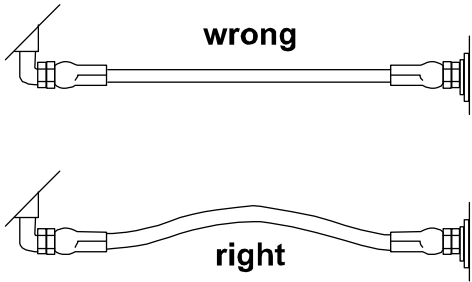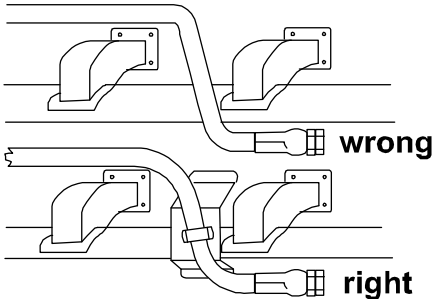 <p>wrong right</p> <p>1. Hose is weakened when installed in twisted position. Pressure in twisted hose tends to loosen fitting connections. Design so that machine motion produces bending rather than twisting.</p>	 <p>wrong right</p> <p>2. Ample bend radius should be provided to avoid collapsing of line and restriction of flow.</p>
 <p>wrong right</p> <p>3. Exceeding minimum bend radius will greatly reduce hose assembly life.</p>	 <p>wrong right</p> <p>4. Use elbows or other adapters as necessary to eliminate excess hose length and to insure neater installation for easier maintenance.</p>
 <p>wrong right</p> <p>5. When hose assembly is installed in a flexing application, remember that metal hose fittings are not part of the flexible portion. Allow ample free length for flexing.</p>	 <p>wrong right</p> <p>6. When properly routing, use clamps to secure the hose in its proper position.</p>

BLANK PAGE

BLANK PAGE



VANAIR®
AIR POWER TO GO™

Vanair Manufacturing, Inc.

10896 West 300 North

Michigan City, IN 46360

Phone: (219) 879-5100

(800) 526-8817

Service Fax: (219) 879-5335

Parts Fax: (219) 879-5340

Sales Fax: (219) 879-5800

www.vanair.com

Printed in the U.S.A.

Specifications Subject to
Change Without Prior Notice

050790-001 (G2)