

DA435EAR: 99900680: 19980521



Model DA435EAR
Underhood Air Compressor
(Replaces Models HD1054)



IOWA MOLD TOOLING CO., INC.
BOX 189, 500 HWY 18 WEST, GARNER, IA 50438
TEL: 515-923-3711
TECHNICAL SUPPORT FAX: 515-923-2424
MANUAL PART NUMBER 99900680

PRECAUTIONS

Read before operating your compressor!



71393886

! DANGER

EXPLODING TANK WILL CAUSE DEATH, SERIOUS INJURY OR PROPERTY DAMAGE

- Drain air tank after each use to prevent moisture build-up and corrosion which leads to tank failure.
- Assure that tank and compressor relief valves work properly, and are at correct pressure settings.
- **DO NOT** modify or repair air tank.
- **NEVER** drive vehicle with pressure in air tank.




Failure to follow operating and maintenance procedures as outlined in this manual could result in equipment damage, personal injury or death. Follow all maintenance procedures and intervals.



Do not use air from this compressor for breathing or food processing. Air from this compressor will cause severe injury or death if used for breathing or food processing.



Maintenance must be performed only by trained and qualified personnel, using correct tools, specified torques and approved replacement parts.

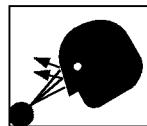

Hot oil under pressure can cause severe injury or death. Shut down, let cool and relieve pressure in compressor before servicing.



All electrical components and cable wiring must be installed and grounded in accordance with NFPA, national electrical codes and applicable state and local codes.



Do not overfill the compressor with oil. Use correct quantity of manufacturer's lubricant. Repair leaks and clean spills immediately.



Before removing guards or servicing the compressor, disconnect all power supplies. Display warning signs and lock out electrical circuits.



Compressors generate high temperatures. Do not touch or otherwise come in contact with hot surfaces. Doing so can cause severe personal injury.



All guards must be in position and secure before and during operation.

TABLE OF CONTENTS

PARA	TITLE	PAGE
Section 1. SPECIFICATIONS		
1-1.	GENERAL	1-1
1-2.	SPECIFICATIONS	1-1
Section 2. INSTALLATION		
2-1.	GENERAL	2-1
2-2.	AIR COMPRESSOR	2-1
2-3.	UNDERDASH SWITCH	2-1
2-4.	UNDERHOOD SWITCH	2-1
Section 3. OPERATION		
3-1.	GENERAL	3-1
3-2.	OPERATION	3-1
Section 4. MAINTENANCE & PARTS		
4-1.	GENERAL	4-1
	PRESSURE SWITCH INSTALLATION INSTRUCTIONS	4-5
Section 5. REPAIR		
5-1.	GENERAL	5-1
5-2.	PISTON RING REPLACEMENT	5-1
5-3.	OIL PUMP REPLACEMENT	5-2
5-4.	CRANKSHAFT AND BEARING REPLACEMENT	5-2
5-5.	CLUTCH REPLACEMENT	5-3
5-6.	TROUBLESHOOTING	5-4

LIST OF ILLUSTRATIONS

FIGURE	TITLE	PART NUMBER	PAGE
A-1.	OUTSIDE DIMENSIONS		1-1
	ROUTINE MAINTENANCE CHECKLIST		4-1
	AIR COMPRESSOR	51711131	4-2
	AIR COMPRESSOR	51711131	4-3
	AIR COMPRESSOR	51711131	4-4
	PRESSURE SWITCH KIT & INSTALL INSTR'S	51711313	4-5
	REPAIR KITS		4-6
	OPTION-SOLBERG AIR FILTER KIT		4-6
E-1.	PISTON RING ORIENTATION		5-1
E-2.	CYL HEAD TORQUE SEQUENCE		5-1
E-3.	BEARING HOUSING TORQUE SEQUENCE		5-3
E-4.	ROD ALIGNMENT		5-3
E-5.	TROUBLESHOOTING CHART		5-4

SECTION 1. SPECIFICATIONS

1-1. GENERAL

The IMT DA435EAR air compressor is an underhood, engine mounted, single stage, air cooled, 4-cylinder, pressure lubricated unit, with a delivery rate of 35 CFM at 1400 RPM.

The compressor is belt driven from the engine crankshaft, through a magnetic clutch. It is engaged and disengaged by use of an air pressure sensing, electric switch. The pressure switch is preset on factory installed units at approximately 120 psi to engage, and 150 psi to disengage.

1-2. SPECIFICATIONS

Bore	2-5/8"
Stroke	2-1/2"
Cylinder Configuration	V4
Displacement	44 CFM*
Delivery	35 CFM*
Lubrication	Oil Pump
Oil Capacity	1-1/3 qts
Cooling	Air
Height	13-3/4"
Width	17"
Length	13-3/4"
Material	Aluminum Alloy
Weight	80 lbs.

* @ 1400 RPM - 100 PSI

CAUTION

OPERATING THE COMPRESSOR AT PRESSURES ABOVE 150 PSI WILL SHORTEN THE SERVICE LIFE AND VOID THE WARRANTY.

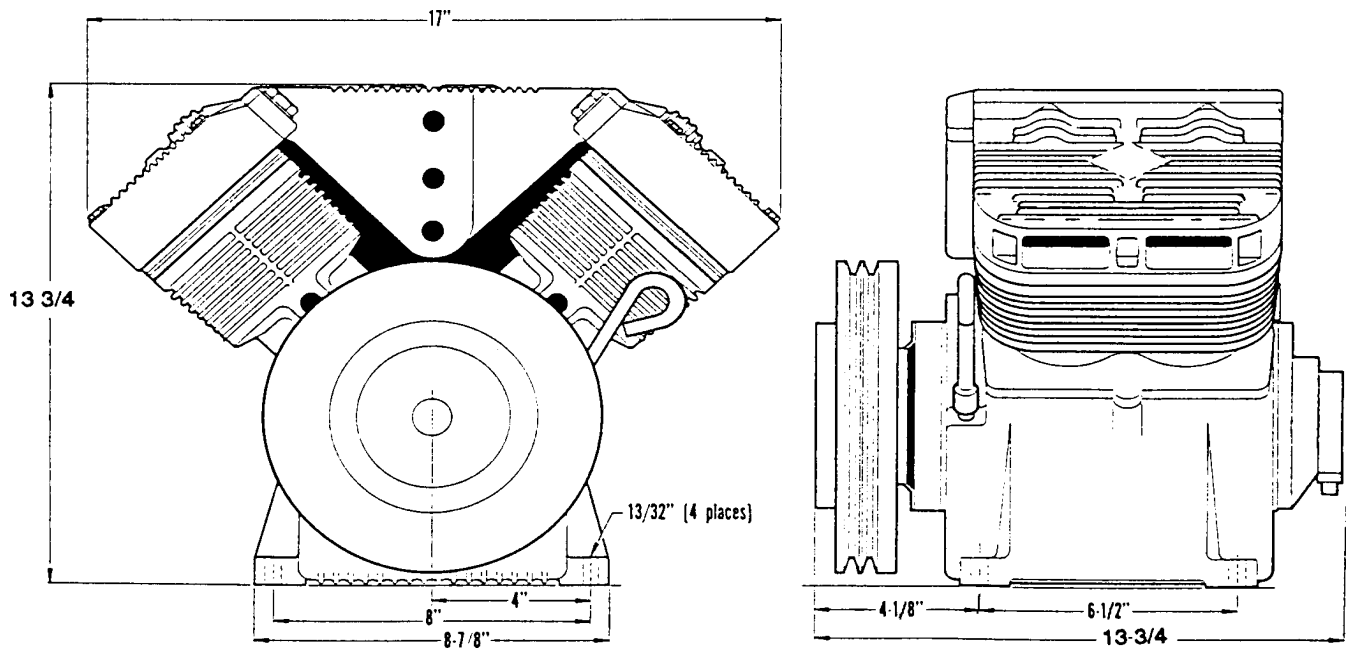


FIGURE A-1. OUTSIDE DIMENSIONS

SECTION 2. INSTALLATION

2-1. GENERAL

This section pertains to the installation of the IMT DA435EAR compressor and related components. Because installations will vary somewhat, dependent on the chassis, it will describe the installation in general terms only.

2-2. AIR COMPRESSOR

Each installation will differ dependent on the chassis make, model, year of manufacture, and optional equipment. Refer to the mounting kit for specific information relating to your application.

2-3. UNDERDASH SWITCH

The installation kit will include the correct bracket for the installation of the compressor, power switch and the engine speed control. The bracket may house switches for other functions, depending on the total system.

1. Drill mounting holes in the underside of the dash. It may be possible to utilize existing holes.
2. Install the switch, or switches, needed for your installation.
3. Route the needed wiring harness to the rear of the bracket and connect to the proper switches.
4. Securely fasten the assembled switch bracket to the dash with bolts, nuts, and washers provided.

NOTE

IF THE DASHBOARD IS PLASTIC, THE GROUND WIRE MUST BE CONNECTED TO CHASSIS GROUND. THE PLASTIC DASHBOARD IS NOT CONDUCTIVE AND WILL NOT PROVIDE A GROUND.

5. Connect the positive side of the compressor switch to the power switch. Connect the other side of the switch to the underhood safety switch and the indicator lamp.
6. Install the throttle cable mounting bracket to the underside of the dash, near the switch bracket. Install the cable and connect to the carburetor linkage. Make certain that there is enough free play to allow the engine to return to normal idle.

2-4. UNDERHOOD SWITCH

The purpose of the underhood switch is to prevent the compressor from running unless the vehicle's hood is raised. This will ensure sufficient air flow to the compressor during operation.

1. Select a location for the mercury switch that will provide protection for the glass envelope and keep the switch contacts open when the hood is closed. The mercury should not be in contact with the contacts to accomplish this.
2. Drill a 1/16 inch hole in the desired location and install the switch bracket. Install the switch in the bracket. Connect one lead to the underdash switch, the other to the compressor pressure switch. When wired properly, the switch in the cab must be "ON" and the hood must be raised in order for the compressor to operate.

CAUTION

WARRANTY ON THE COMPRESSOR WILL BE VOID IF THE UNDERHOOD SAFETY SWITCH IS NOT USED. FAILURE TO USE THIS SWITCH WILL ALLOW THE COMPRESSOR TO OPERATE WITH THE HOOD CLOSED AND WILL CAUSE OVERHEATING.

2-5. ELECTRIC SPEED CONTROL

An optional electric speed control may be used in lieu of the manual speed control. On units equipped with an electric speed control, the engine speed will automatically increase when the clutch is engaged, and decrease when the clutch is disengaged.

SECTION 3. OPERATION

3-1. GENERAL

Each compressor is bench tested under load at the factory to ensure proper break-in and operation. While it is not necessary to follow any break-in procedure, the following checks should be made before putting the unit into service, as well as, periodically during use.

1. Before start-up:
 - A. Check the oil level in the compressor crankcase with the dipstick on the unit. If oil is needed, use only IMT's synthetic compressor oil.

 - B. Check the air intake filters on each head to make certain that they are clean and unobstructed. Dirty filters are a possible cause of reduced air output.

2. With the compressor engaged:

On units having the automatic speed control option, check the engine RPM for proper setting (1400 RPM max.) under compressor load.

3-2. OPERATION

To use the compressor, raise the hood to provide adequate ventilation, start the vehicle engine, and engage the compressor by operating the compressor switch in the cab. On systems without automatic engine speed control, adjust the engine RPM with the manual throttle cable to maintain the proper RPM setting while the compressor is pumping.

The system will now function automatically. It will engage the compressor clutch when the air pressure is below 120 psi, and disengage when the air pressure reaches 150 psi.

NOTE

ON UNITS WITH MANUAL ENGINE SPEED CONTROL, THE ENGINE RPM WILL INCREASE WHEN THE COMPRESSOR CLUTCH DISENGAGES.

CAUTION

THIS UNIT IS EQUIPPED WITH AN UNDERHOOD SAFETY SWITCH WHICH REQUIRES THAT THE HOOD BE RAISED WHILE THE COMPRESSOR IS IN OPERATION. THIS IS INSTALLED TO ENSURE THAT THE UNIT HAS ADEQUATE VENTILATION, AND THAT THE UNIT IS NOT INADVERTANTLY LEFT ON WHEN NOT IN USE AND THE VEHICLE IS IN MOTION. BYPASSING THIS SAFETY DEVICE, OR OPERATING THIS UNIT IN EXCESS OF 1400 RPM, WILL VOID THE WARRANTY, AND WILL SHORTEN THE NORMAL SERVICE LIFE OF THE COMPRESSOR.

Section 4. MAINTENANCE & PARTS

4-1. GENERAL

The following table is a list of routine maintenance items, including service intervals. It also includes a parts list and assembly drawing of the compressor.

MAINTENANCE OPERATION	SERVICE INTERVALS			
	DAILY	WEEKLY	250/3	500/6
AIR INTAKE - INSPECT AND CLEAN				
CRANKCASE OIL LEVEL - CHECK, ADD IF NEEDED				
CRANKCASE OIL - CHANGE (SEE NOTE 1)				
CHECK CYLINDER HEAD STUD TORQUE (SEE NOTE 2)				
COOLING VANES (FINS) - CLEAN				
SAFETY VALVES - CHECK OPERATION				
SAFETY VALVES - CLEAN				
BELT TENSION - CHECK				
ELECTRIC CLUTCH - CHECK OPERATION				
AIR RECEIVER - DRAIN CONDENSATION				
RECEIVER SAFETY VALVES - CHECK OPERATION				
TIGHTEN AND CHECK ALL VALVES				
CHECK ALL ELECTRICAL CONNECTIONS				
CHECK FITTINGS AND AIR LINES FOR LEAKS				
INSPECT CHECK VALVES FOR PROPER OPERATION				
INSPECT CHECK VALVES FOR CARBON BUILDUP				

Service intervals are listed as hours/months, whichever occurs first.

Use only IMT's synthetic compressor oil. The use of any other oil causes excessive carbon buildup, and will void the warranty on the compressor.

NOTE 1. Under normal operating conditions, oil changes are required every 3 months. When operating in a dirty environment, change the oil more frequently as your particular operating conditions dictate. Oil capacity is 1-1/3 quarts.

NOTE 2. Cylinder head stud torque MUST be checked after the initial 8-10 hours of operation. The compressor must be cold (room temperature) before retorquing of studs. Torque studs to 240 in-lbs plus or minus 10 in-lbs.


FIGURE D-1. ROUTINE MAINTENANCE CHECKLIST

DA435EAR UNDERHOOD AIR COMPRESSOR (51711331-1)


CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1.	51014947	RING SET - 3 (INCL:2,3)	1	44.	70014583	OIL PUMP SPRING	1
2.	70014599	COMPRESSION RING (PART OF 1)	8REF	45.	70024122	WASHER .33X.50X.03 COPPER	12
3.	70014600	OIL RING (PART OF 1)	4REF	46.	70029293	CYL BLOCK SPACER	2
4.	51029283	ROD ASM	4	48.	70732444	CLUTCH HARDWARE KIT	1
5.	51029285	PISTON ASM (INCL:88-90)	4	49.	70039300	PLACARD-SERIAL NUMBER	1
6.	51714023	INSERT ASM	2	50.	70051006	OIL PUMP	1
7.	7Q073017	O-RING (PART OF 6)	2REF	51.	70014613	DIPSTICK TUBE	1
8.	70029593	INSERT (PART OF 6)	2REF	52.	70048080	BREATHER .25NPT (PART OF 86)	1REF
9.	70029468	SHIM (PART OF 6)	2REF	53.	70733069	REED VALVE ASM	2
10.	72066426	BALL .594 (PART OF 6)	2REF	56.	72053403	PIPE PLUG SH	4
11.	51706913	CRANKCASE/SHAFT ASM (INCL:12-33,91,92,94)	1	57.	72053404	PIPE PLUG	1
12.	51705661	CRANKSHAFT (PART OF 11,INCL:13-17)	1REF	58.	72053411	PIPE PLUG 1/8NP	2
13.	60101269	OIL PUMP COLLAR (PART OF 12)	1REF	60.	72601708	STUD 5/16-18X3-1/2	12
14.	60108748	CRANKSHAFT (PART OF 12)	1REF	61.	72063001	WASHER 1/4 WRT	12
15.	70055009	CONE BEARING (PART OF 12)	1REF	62.	72062001	NUT 5/16-18 HEX	12
16.	70055012	CONE BEARING (PART OF 12)	1REF	63.	72060063	CAP SCR 7/16-14X1-1/4	4
17.	72066307	ROLL PIN .16X.44 (PART OF 12)	1REF	65.	72060731	SCR 5/16X3/4 SH	4
18.	51705709	FRT HSG ASM (PART OF 11,INCL:19-21)	1REF	67.	70048117	AIR INTAKE FILTER	4
19.	60025007	FRT BRG HSG (PART OF 18)	1REF	68.	72063050	WASHER 5/16 LOCK	1
20.	70055011	CUP BEARING (PART OF 18)	1REF	69.	72063052	WASHER 7/16 LOCK	4
21.	76039119	SEAL (PART OF 18)	1REF	70.	72066267	WOODRUFF KEY .16X.62	1
22.	51705710	REAR BRG HSG ASM (PART OF 11,INCL:23-24)	1REF	71.	72661487	DRIVE PIN	1
23.	60025005	REAR BRG HSG (PART OF 22)	1REF	72.	72066537	J-CLIP .19 VINYL	2
24.	70055010	CUP BEARING (PART OF 22)	1REF	73.	72060270	CAP SCR 1/4-28X1/2	4
25.	60025012	CRANKCASE (PART OF 11)	1REF	74.	72063049	WASHER 1/4 LOCK	4
26.	60120238	OIL SCREEN TUBE (PART OF 11)	1REF	75.	60107276	CAP-MOD 1/2HEX (PART OF 86)	1REF
27.	60120289	OIL SCREEN (PART OF 11)	1REF	78.	72053413	PLUG 3/8NPT SQHD	1
28.	72053403	PIPE PLUG 3/8NPT (PART OF 11)	1REF	79.	72601060	STUD 5/16-24X2XNC GR5 STL	12
29.	72060025	CAP SCR 5/16-18X1 (PART OF 11)	5REF	80.	73073030	DIPSTICK ASM	1
30.	72060731	CAP SCR 5/16-18X3/4 (PART OF 11)	5REF	81.	76039093	PUMP COVER GASKET	1
31.	72063050	WASHER 5/16 LOCK (PART OF 11)	5REF	82.	76039111	CYL BLOCK GASKET-BOTTOM	2
32.	72066008	OIL SCREEN CLAMP (PART OF 11)	1REF	83.	76392119	CYL BLOCK GASKET	2
33.	76039112	FRT BRG GASKET (PART OF 11)	2REF	84.	76392641	CLY BLOCK GASKET-TOP	2
34.	60025006	REAR BRG COVER	1	85.	76392642	HEAD GASKET	2
35.	60025193	PULSATION TANK	1	86.	51705310	BREATHER ASM (INCL52,75)	1
36.	60025194	CYLINDER BLOCK	2	87.	72062036	NUT 5/16-24 HEX	12
37.	60025492	HEAD	2	88.	72066018	RETAINING RING 5/8 INT (PART OF 5)	8REF
38.	60101505	PLUG TRANSFER BUSHING	1	89.	70014627	PISTON PIN (PART OF 5)	4REF
39.	60101507	OIL FILL BREATHER PIPE	1	90.	70029062	PISTON (PART OF 5)	4REF
40.	60106933	CHECK VALVE INSER CAP	2	91.	76039092	REAR BRG GASKET .006 (PART OF 11)	1REF
41.	77044419	COIL	1	92.	76039094	REAR BRG GASKET (PART OF 11)	1REF
42.	7Q072212	O-RING	4	93.	76393085	O-RING (PART OF 6)	2REF
43.	76393107	O-RING	2	94.	76039144	REAR BRG GASKET (PART OF 11)	4REF
				95.	51086080	OIL-1 QT	2REF
				96.	77040051	TERMINAL #8SPRSPD 16-14GA	5

CONTINUED

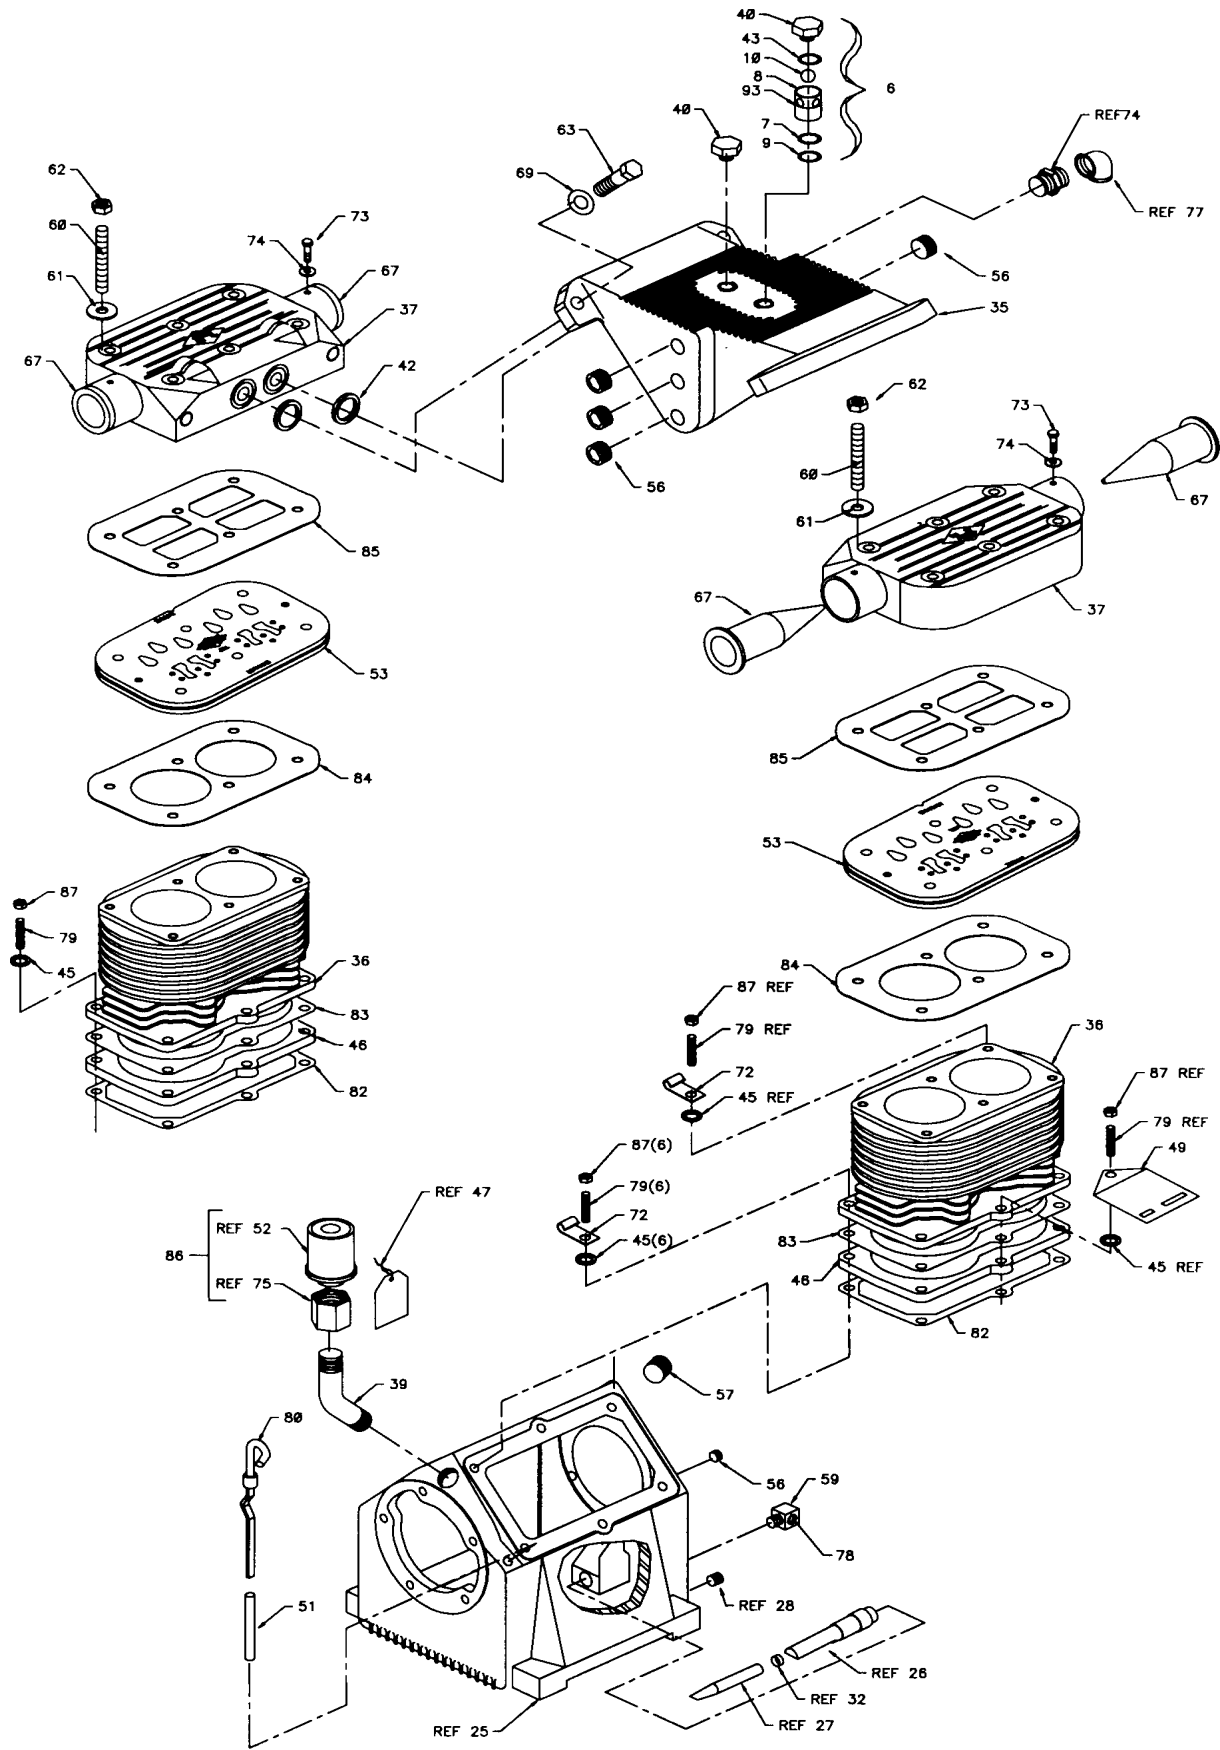

DA435EAR UNDERHOOD AIR COMPRESSOR (51711331-3)

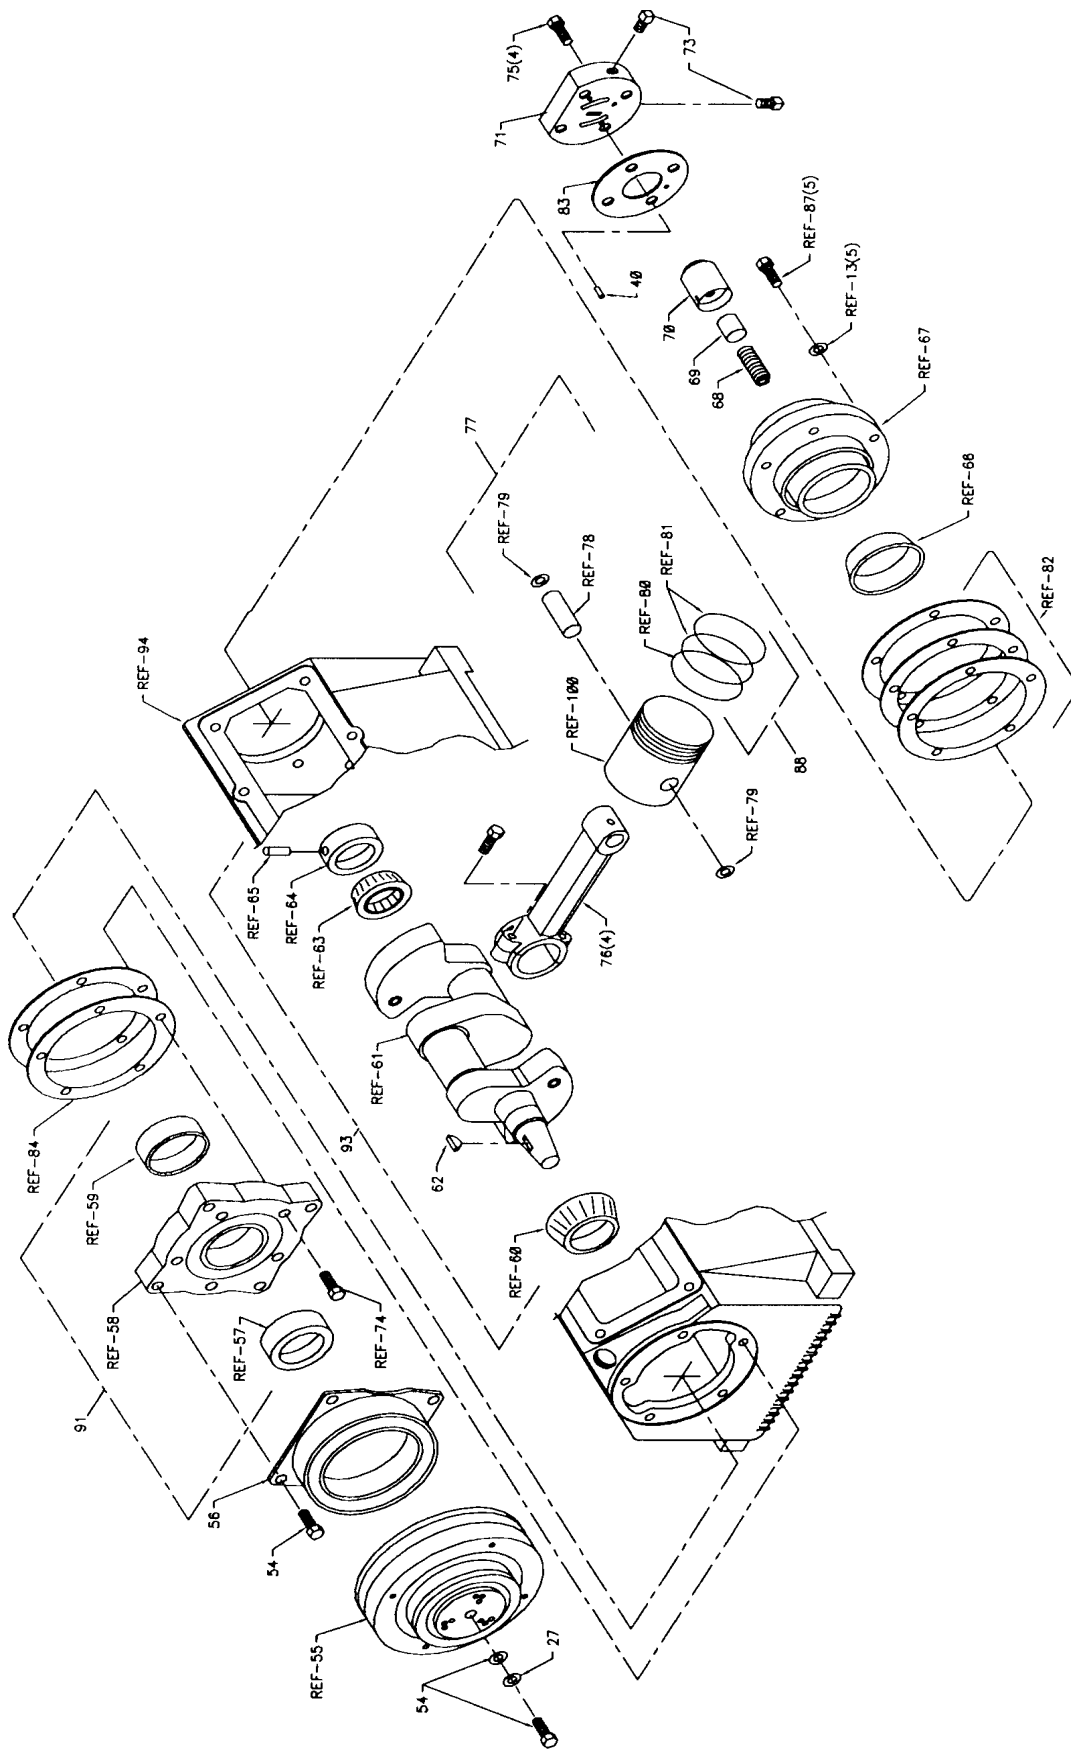


**REMOTE MOUNTED PRESSURE SWITCH
INSTALLATION INSTRUCTIONS (99900500)**

1. Locate pressure switch mounting bracket (60119843) to the firewall or fender well of truck. Use the predrilled holes on the mounting bracket as a pattern to drill holes when mounting.
2. Assemble pressure switch and related hardware to the mounting bracket. Attach a 90° elbow (72531042) to the bottom side of the pressure switch mounting bracket.
3. Mount the pressure switch mounting bracket to the truck. Use the two (2) sheet metal screws provided in the kit.

4. Affix 1/8"-1/4" 90° elbow (72531042) and 3/8"-1/8" reducer (72531827) to the pulsation tank as shown on the assembly drawing.
5. Complete assembly by routing the air line in the most convenient location. Cut line to length.
6. See Electrical Wiring Diagram provided with Pressure Switch Kit, for hook up information.

NOTE

ON FORD LATE MODEL TRUCKS, THE MOUNTING BRACKET (60119843) CAN BE LOCATED ON THE PASSENGER SIDE OF RADIATOR AT TOP. USE EXISTING BOLTS.

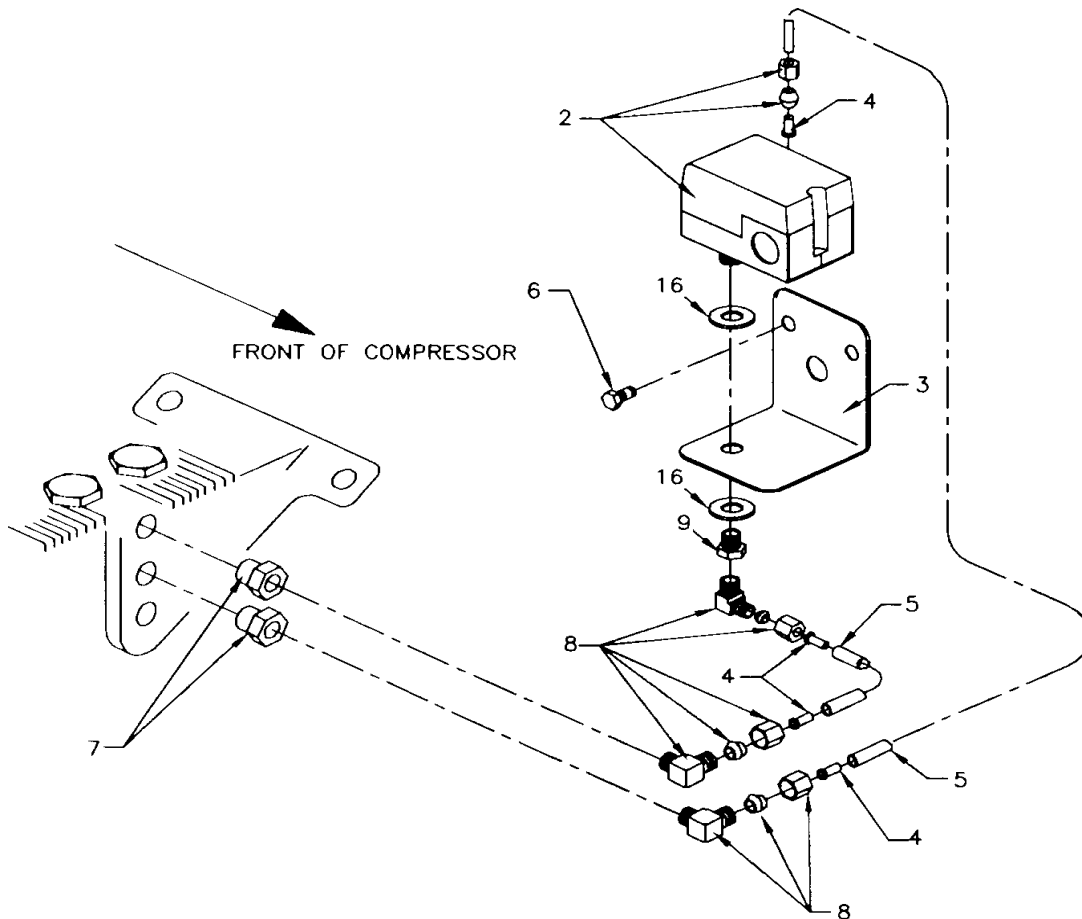

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1.	51710225	KIT-RMT PR SW (INCL.:2-17)	1	10.	89044274	WIRE 14GA BLK (4 FT)	REF
2.	77041369	PRESSURE SWITCH	1REF	11.	89044271	WIRE 14GA BLU (4 FT)	REF
3.	60119843	MOUNTING BRACKET	1REF	12.	89044234	WIRE 14GA YEL (4 FT)	REF
4.	72532952	BRASS INSERT	4REF	13.	77040048	BUTT CONNECTOR 16-14GA	3REF
5.	89034176	AIR LINE 1/4" (10 FT)	REF	14.	77040051	TERMINAL- SPADE 16-14GA	3REF
6.	72061004	SHT MTL SCR #14X3/4	2REF	15.	89034048	SPIRAL WRAP (7")	REF
7.	72531827	REDUCER BUSHING 3/8-1/2NPT	2REF	16.	72063005	WASHER 1/2 WRT	2REF
8.	72531042	ELBOW 1/8-1/4NPT 90°	3REF	17.	99900169	WIRING DIAG	1REF
9.	72531826	REDUCER BUSHING 1/4-1/8NPT	1REF				

PRESSURE SWITCH KIT & INSTALLATION INSTRUCTIONS (51710225)

REPAIR KITS

GASKET KIT - 51393217

7Q072212	O-RING - CYL HEAD	4
76039092	GASKET-REAR BRG HSG .006	2
76039093	GASKET-PUMP COVER	1
76039094	GASKET-REAR BRG HSG .010	2
76039111	GASKET-CYL BLOCK BOTTOM	2
76039112	GASKET-FRT BRG HSG	2
76039119	SEAL	1
76039143	GASKET-REAR BRG HSG .015	2
76039144	GASKET-REAR BRG HSG .020	2
76392119	GASKET-CYL BLOCK	2
76392642	GASKET-REED VALVE/HEAD	2
76392641	GASKET-REED VALVE/CLY	2

CHECK VALVE KIT - 51704358

7Q073017	O-RING	1
70029377	CHECK VALVE INSERT	1
70029468	SHIM .53 ID X .94 OD X .005 THK	1
72066426	BALL .594 DIA	1
76393085	O-RING	1

CRANKSHAFT KIT - 51705743

51705742	CRANKSHAFT ASM	1
51705661	CRANKSHAFT MACH	1REF
72066297	WOODRUFF KEY	1REF
70055010	BEARING-REAR CUP	1
70055011	BEARING-FRT CUP	1
70055012	BEARING-FRT CONE	1REF
70055009	BEARING-REAR CONE	1REF
72066307	DRIVE PIN	1REF
60101269	OIL PUMP COLLAR	1REF

PISTON RING SET - 51014947

70014599	COMPRESSION RING	8
70014600	OIL RING	4

FIGURE D-6. OPTIONAL SOLBERG AIR FILTER KIT (51709435)

ITEM	PART NO.	DESCRIPTION	QTY
1.	51707706	AIR INTAKE MANIFOLD ASM	1
2.	72061004	SHT MTL SCR #14X3/4	2
3.	70048007	SOLBERG FILTER (INCL: FILTER ASM & ELEMENT)	1
70048155		FILTER ELEMENT ONLY	REF
4.	72066001	HOSE CLAMP #24	4
5.	76391332	HOSE	2

NOTE: WHEN THIS OPTIONAL FILTER KIT IS USED, ITEMS 67 & 73 ON PAGE 4-3 ARE NOT USED.

SECTION 5. REPAIR

5-1. GENERAL

This section describes the disassembly and assembly procedures for the air compressor. In all cases, remove the compressor from the vehicle before proceeding with disassembly and repair within a clean environment. Refer to the parts drawing in section 4 of this manual for parts locations.

5-2. PISTON RING REPLACEMENT

1. Remove the pulsation tank.
2. Unscrew the head bolts and remove the heads.

NOTE

A RUBBER FACED Mallet will help when removing the head. Tap the sides of the head carefully until the head is loose. Lift off the heads.

3. Remove the cylinder bolts. Tap the sides of the cylinder several times to break it loose from the gasket. Rock the cylinder back and forth and lift until it is free. Lift it off the pistons.

4. Use a single edged razor blade, or sharp putty knife, to remove the old gasket material.

CAUTION

DO NOT ALLOW THE GASKET MATERIAL TO FALL INTO THE CRANKCASE. DO NOT NICK THE HEAD, CYLINDER, OR CRANKCASE MATING FACES WHILE REMOVING THE OLD GASKET. REMOVE ALL OF THE OLD GASKET MATERIAL TO PROVIDE A SMOOTH, CLEAN SURFACE FOR THE NEW GASKET. FAILURE TO FOLLOW THIS PROCEDURE MAY RESULT IN THE NEED TO RESEAL THE UNIT LATER.

- 5.hone the cylinder to break the glaze and to remove the buildup at the top of the cylinders.
6. Measure the inside diameter of the cylinder for roundness and excessive wear. The bore should be 2.625" (0.0025" tolerance). If the bore is oversized, the cylinder must be replaced.

7. With a ring expander, remove the compression and oil rings.

8. With the ring expander, install the new ring kit. Make certain that the oil ring is on the bottom and the beveled inside edge of the compression ring is toward the top of the piston.

9. Position the cylinder base gasket on the crankcase. Use a few drops of oil to hold it in position. Install the cylinder block spacer and gasket on the crankcase.

10. Rotate the rings so that the gaps of the three rings are 120° apart. Lightly lubricate the inside of the cylinder. Rotate the crankshaft so that a piston is at the top of the stroke. Compress the rings with a ring compressor, and slide the cylinder over the piston. Repeat for the other piston.

CAUTION

DO NOT LUBRICATE THE RINGS. USE A LIGHT LUBRICANT, SUCH AS WD-40 ONLY, ON THE CYLINDER WALLS. OILING THE RINGS WILL PREVENT THEM FROM SEATING AND CAUSE EXCESSIVE OIL CONSUMPTION.

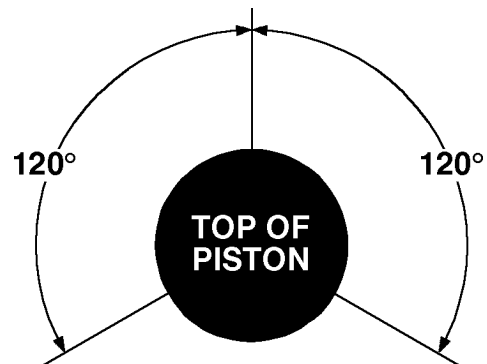


FIGURE E-1. PISTON RING ORIENTATION



FIGURE E-2. CYLINDER HEAD TORQUE SEQUENCE

11. Slide the cylinder down until it mates with the crankcase. Start all cylinder mounting bolts, until they are snug. Torque the bolts to 180 in-lbs in the sequence shown. Do not torque to the full 180 in-lbs all at once, but in 25-50 in-lb increments.

12. Position the gaskets and valve plate on top of the cylinder. Position the head on the cylinder and turn studs finger tight. Torque the studs/nuts to 240 in-lbs in 25-50 pound increments per Figure E-2.

NOTE

INSTALL THE VALVE PLATE WITH THE MARKED SURFACE FACING UP.

13. Install the pulsation tank, and torque to 180 in-lbs.

14. Install the compressor, connect the wiring and the air lines. Test the unit.

NOTE

IF PRESSURE FAILS TO BUILD AND THE COMPRESSOR IS EXCESSIVELY NOISY, CHECK THE VALVE PLATE. IT MAY HAVE BEEN INSTALLED UPSIDE DOWN.

5-3. OIL PUMP REPLACEMENT

1. Remove the bolts and lift off the pump cover.
2. With a single edged razor blade, or sharp putty knife, remove the old gasket material. Take care not to damage the machined surfaces.
3. Lift the pump out of the cavity.
4. Position a new gasket on the rear bearing housing.
5. Insert the pump into the cavity. Position the pump slightly to one side, using a common screwdriver. Wedge the pump into position so that it partially compresses the spring. Note that the driver pin and slot in pump must be in line.
6. Place the pump cover into position and start two bolts (bolts must be diagonally opposed). Strike the pump cover with a rubber faced mallet to jar the pump loose. When the tension spring can be felt against the pump cover, the pump is loose.

7. Insert the two remaining bolts and torque to 180 in-lbs. The bolts should be torqued in a diagonal pattern.

8. Install the air compressor in the vehicle. Connect the air lines and wiring.

5-4. CRANKSHAFT AND BEARING REPLACEMENT

If it is necessary to replace the crankshaft, related components must also be replaced. Replace both bearings, both races, the key, pump collar and pump drive pin.

NOTE

DEPENDING ON THE CONDITION OF THE CRANKSHAFT, BEARING MAY BE REPLACED WITHOUT REPLACING THE CRANKSHAFT. REPLACE THE BEARING RACES WHENEVER THE BEARINGS ARE REPLACED.

1. Remove the pulsation tank, both heads, cylinders, and pistons.
2. Remove the bolts on the connecting rods, and lift them out. Reassemble the connecting rods to be certain that the matched parts remain together on the same crankshaft journals.
3. Remove the pump cover, oil pump, sleeve, spring, and rear bearing housing.
4. Remove the hydraulic motor hub (#301266), and the front bearing housing.
5. Pull the crankshaft from the crankcase.
6. Remove all gasket material with a single edged razor blade, or sharp putty knife.

CAUTION

DO NOT GOUGE THE MACHINED SURFACES WHEN REMOVING THE GASKETS. THIS MAY CAUSE LEAKS.

7. Press the bearing races out of the bearing housing.
8. Press the tapered roller bearings off of the crankshaft if only the bearings are being replaced. If the crankshaft is to be replaced, discard the entire assembly.
9. Press the new bearings into position.

NOTE

THE CRANKSHAFT SHOULD HAVE NEW BEARINGS INSTALLED. IF NOT, PRESS THE NEW BEARINGS INTO POSITION ON THE CRANKSHAFT.

10. Generously oil the front bearing race and install the front bearing housing with gasket. Torque the bolts to 180 in-lbs. Torque the bolts as shown in the pattern below.

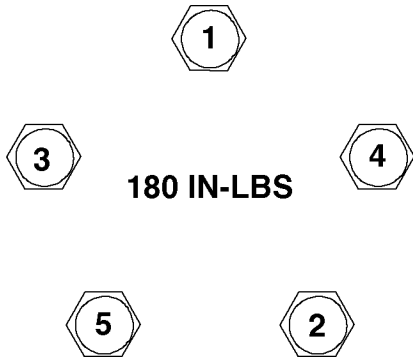


FIGURE E-3. BEARING HOUSING TORQUE SEQUENCE

11. Slide the crankshaft into the crankcase. Generously lubricate the bearing race and install the rear bearing housing and gaskets.

NOTE

GASKET KITS ARE SUPPLIED WITH TWO (2) EACH OF .006, .010, .015, AND .020 GASKETS. USE THESE REAR BEARING GASKETS IN ANY COMBINATION AND QUANTITY TO LIMIT ALL PLAY FRONT TO REAR, BUT STILL ALLOW THE CRANKSHAFT TO TURN FREELY.

12. Install the oil pump (See paragraph 5-3).

13. Install the connecting rods. Thoroughly oil the crankshaft and rods before installing them. When installing the rods, make certain that the tabs are aligned on the same side of the rod as shown below.

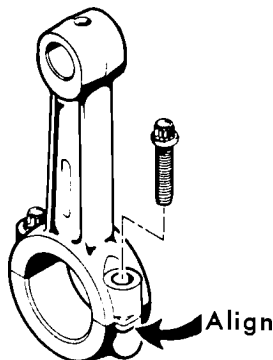


FIGURE E-4. ROD ALIGNMENT

14. Install the pistons, rings, heads and pulsation tank.

5-5. CLUTCH REPLACEMENT

CAUTION

CLUTCH FAILURE MAY BE DUE TO A LEAKING CHECK VALVE. MAKE CERTAIN THAT THE CHECK VALVES ARE FUNCTIONING PROPERLY BEFORE INSTALLING THE NEW CLUTCH. THE CHECK VALVES MAY BE CHECKED BY PRESSURIZING THE TANK AND SHUTTING OFF THE COMPRESSOR. THERE SHOULD BE NO AIR ESCAPING FROM THE UNLOADER VALVE. IF THERE IS AIR ESCAPING, THE CHECK VALVES ARE FAULTY.

The clutch assembly can be removed while the compressor is still on the vehicle. The following procedure should be used.

WARNING

ATTEMPTING TO START THE ENGINE WHILE THE CLUTCH IS BEING REMOVED WILL CAUSE SERIOUS INJURY.

1. Turn on the ignition switch, and move the compressor switch to the on position. This will engage the clutch, and make for easier removal.
2. Remove the bolt in the center of the pulley and insert a 5/8-11 bolt.
3. Tighten the 5/8-11 bolt until the pulley is forced off the crankshaft.
4. Loosen the drive belt and remove the pulley.

NOTE

IF THE DRIVE BELT IS LOOSE BEFORE THE PULLEY IS LOOSENED, IT WILL BE DIFFICULT TO HOLD THE PULLEY STATIONARY WHILE TIGHTENING THE 5/8-11 BOLT.

CAUTION

DO NOT USE A WHEEL PULLER ON THE OUTER RIM OF THE PULLEY. THIS CAN RESULT IN DAMAGE TO THE CLUTCH BEARING.

5. Remove the four (4) bolts holding the coil assembly to the front of the compressor.

To reinstall the clutch:

1. Position the magnetic coil assembly over the front bearing housing and secure the assembly with the 1/4-20 bolts. Torque to 85 - 120 in-lbs.
2. Insert the woodruff key into the crankshaft slot.
3. Slide the pulley, spacer, and lock washer onto the end of crankshaft. Be certain that the pulley slot aligns with the woodruff key. Secure them with the 5/16-18 bolts.
4. Rotate the pulley assembly manually to check for interference between the pulley and the coil. If there is interference, disassemble the clutch and repeat the procedure.
5. Install and tighten the drive belts.

6. Connect the coil wire to the air pressure switch.
7. Move the compressor switch in the cab to the on position to activate the clutch. Tighten the center bolt in the pulley.
8. Test the unit for proper operation.

5-6. TROUBLESHOOTING

LOW OIL PRESSURE	LOW OIL LEVEL
	LOOSE PIPE PLUG ON OIL PUMP COVER
	WORN OR DEFECTIVE OIL PUMP
	CRACK OR SCRATCH ON OIL PUMP COVER
NO OIL PRESSURE	DEFECTIVE OIL PUMP
	BLOCKED OIL PASSAGE
	DAMAGED OIL PUMP DRIVE PIN
COMPRESSOR WILL NOT ENGAGE	NO POWER SUPPLIED TO COMPRESSOR
	INTERNAL CIRCUIT BREAKER TRIPPED
	PTO SWITCH NOT ENGAGED
	DEFECTIVE PRESSURE SWITCH OR UNDERHOOD SWITCH
COMPRESSOR ENGAGES BUT WILL NOT PRESSURIZE TANK	COMPRESSOR RELIEF VALVE ENGAGED
	AIR LEAK IN PLUMBING
	WORN PISTON RINGS OR VALVE PLATES
COMPRESSOR DOES NOT RECOVER PRESSURE AS FAST AS IT SHOULD	DEFECTIVE CHECK VALVE / VALVES
	DIRTY FILTER
	AIR LEAK IN PLUMBING
	WORN VALVE PLATES OR PISTON RINGS

FIGURE E-5. TROUBLESHOOTING CHART

The information within this manual has been compiled and checked but errors do occur. To provide our customers with a method of communicating those errors we have provided the Manual Change Request form below. In addition to error reporting, you are encouraged to suggest changes or additions to the manual which would be of benefit to you. We cannot guarantee that these additions will be made but we do promise to consider them. When completing the form, please write or print clearly. Submit a copy of the completed form to the address listed below.

MANUAL CHANGE REQUEST

DATE	PRODUCT MANUAL	MANUAL PART NO.
SUBMITTED BY		
COMPANY		
ADDRESS		
CITY, STATE, ZIP		
TELEPHONE		

ERROR FOUND

LOCATION OF ERROR (page no.): _____

DESCRIPTION OF ERROR: _____

REQUEST FOR ADDITION TO MANUAL

DESCRIPTION OF ADDITION: _____

REASON FOR ADDITION: _____

MAIL TO: IOWA MOLD TOOLING Co., Inc.
Box 189,
Garner IA 50438-0189
ATTN: Technical Publications

LIMITED WARRANTY

WARRANTY COVERAGE - Products manufactured by Iowa Mold Tooling Co., Inc. (IMT) are warranted to be free from defects in material and workmanship, under proper use, application and maintenance in accordance with IMT's written recommendations, instructions and specifications as follows:

1. Ninety (90) days; labor on IMT workmanship from the date of shipment to the end user.
2. One (1) year; original IMT parts from the date of shipment to the end user.

IMT's obligation under this warranty is limited to, and the sole remedy for any such defect shall be the repair or replacement (at IMT's option) of unaltered parts returned to IMT, freight prepaid, and proven to have such defect, provided such defect occurs within the above stated warranty period and is reported within fourteen (14) days of its occurrence.

IMPLIED WARRANTY EXCLUDED - This is the only authorized IMT warranty and is in lieu of all other express or implied warranties or representations, including any implied warranties of merchantability or fitness for any particular purpose or of any other obligations on the part of IMT.

ITEMS EXCLUDED - The manufacturer gives no warranty on any components purchased by the manufacturer, and such components as are covered only by the warranties of their respective manufacturers.

WARRANTY CLAIMS - Warranty claims must be submitted and shall be processed in accordance with IMT's established warranty claim procedure.

WARRANTY SERVICE - Warranty service will be performed by any IMT distributor authorized to sell new IMT products of the type involved or by any IMT Service Center authorized to service the type of product involved or by IMT in the event of direct sales made by IMT. At the time of requesting warranty service, the purchaser must present evidence of the date of delivery of the product. The purchaser shall pay any premium for overtime labor requested by the purchaser, any charge for making service calls and for transporting the equipment to the place where warranty work is performed.

WARRANTY VOIDED - All obligations of IMT under this warranty shall be terminated: (1) if service other than normal maintenance or normal replacement of service items is performed by someone other than an authorized IMT dealer, (2) if product is modified or altered in ways not approved by IMT.

PURCHASER'S RESPONSIBILITY - This warranty covers only defective material and workmanship. It does not cover depreciation or damage caused by normal wear, accident, improper protection in storage, or improper use. The purchaser has the obligation of performing the care and maintenance duties discussed in IMT's written recommendations, instructions and specifications. Any damage which results because of purchaser's failure to perform such duties shall not be covered by this warranty. The cost of normal maintenance and normal replacement of service items such as filters, belts, etc. shall be paid by the purchaser.

CONSEQUENTIAL DAMAGES - The only remedies the purchaser has in connection with the breach or performance of any warranty on IMT products are those set forth above. In no event will the dealer, IMT or any company affiliated with IMT, be liable for business interruptions, loss of sales and/or profits, rental or substitute equipment, costs of delay or for any other special, indirect, incidental or consequential losses, costs or damages.

REPRESENTATIONS EXCLUDED - IMT products are subject to no expressed, implied or statutory warranty other than herein set forth, and no agent, representative or distributor of the manufacturer has any authority to alter the terms of this warranty in any way whatsoever or to make any representations or promises, express or implied, as to the quality or performance of IMT products other than those set forth above.

CHANGE IN DESIGN - IMT reserves the right to make changes in design or improvements upon its products without imposing any obligation upon itself to install the same upon its products theretofore manufactured.

Effective January, 1985

This parts manual is provided to the user to assist in servicing the equipment. It is the property of Iowa Mold Tooling Co., Inc and, as such, may not be reproduced either whole or in part, whether by chemical, electrostatic, mechanical or photographic means without the expressed written permission of an officer of Iowa Mold Tooling Co., Inc. One manual is provided with each piece of new equipment and additional manuals may be obtained at a nominal price.



IOWA MOLD TOOLING CO., INC.
BOX 189, GARNER, IA 50438-0189
TEL: 515-923-3711
TECHNICAL SUPPORT FAX: 515-923-2424